

Care and Maintenance – Components

Basic Care

- Do not stand on this product or use this product as a step ladder.
- Use this product only for one person at a time.
- Do not use this chair unless all the bolts, screws and knobs are fully tight and firmly secure.
- Check all bolts, screws and knobs at least every 4 months to ensure they are fully tight and firmly secure.
- If any bolts, screws or knobs are missing or damaged; stop use of the product immediately until this has been repaired using factory authorised parts.
- If any part of the product is missing or damaged, stop use of the product immediately until this has been repaired using factory authorised parts.
- **Failure to Follow the above warnings could result in serious injury.**

Chrome and Metal Components

- Chromium plated areas can be cleaned with a cloth using methylated spirits. Use with caution and always use the cleaning materials in a ventilated area.
- Lacquered metal can be cleaned with a damp cloth and a mild soap or detergent. The lacquered metal will need to be dried by a different dry cloth.
- Painted aluminium can be cleaned with a soft damp cloth and a mild detergent followed by a clean damp cloth, ensuring that the metalwork is dry afterwards by using a different dry cloth.
- **Never use silicon or wax polishes that leave surface residue.**
- **Never use abrasive powders or scouring pads to clean stubborn marks as this will scratch the components.**

Polypropylene Components

- Avoid contact with boiling water, high heat and abrasives.
- Wash with warm soapy water and apply pressure where necessary, drying afterwards with a clean dry cloth.
- **Never use abrasive powders or scouring pads to clean as this will scratch the components.**

Mesh Components

- Wash with warm water and apply pressure where necessary, drying afterwards with a clean dry cloth.
- Use a soft brush to remove dirt.

Always test in a small inconspicuous area.