



N4050e


Safety Information

- Use only the power supply provided with this product or the manufacturer's authorized replacement power supply.
- Connect the power cord to a properly grounded electrical outlet that is near the product and easily accessible.
- Refer service or repairs, other than those described in the user documentation, to a professional service person.

CAUTION: Do not set up this product or make any electrical or cabling connections during a lightning storm.

Federal Communications Commission (FCC) Information

This device complies with Part 15 of the FCC rules. Refer to the *User's Guide* on the *N4050e Setup Utility CD* for more information.

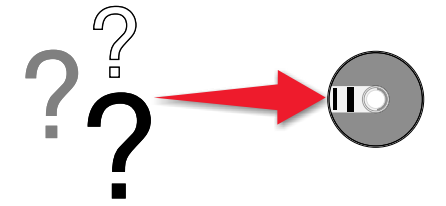

1 About the setup process

Read all instructions before proceeding with setup.

Before your printer can be connected to your wireless network, the print server must first be configured for use on the network by connecting it to your computer and running the N4050e Setup Utility CD.

Once the print server is configured, you must disconnect the print server from your computer and attach it to your printer. After your printer is connected, use the drivers or printer software CD that came with your printer to install your printer on your wireless network (this will require selecting the network path when running the CD).


Note: Refer to the N4050e User's Guide on the Setup Utility CD for alternate setup information when installing the print server with third party printers.

Before setting up your wireless print server, make sure your printer has been set up correctly.



- The toner or print cartridges are installed.
- Paper is loaded.
- Your printer is plugged in and powered on.
- Your printer is ready to be installed.

For help setting up your printer, refer to your printer's documentation.

2 Connect the print server to your computer USB port using the USB cable.

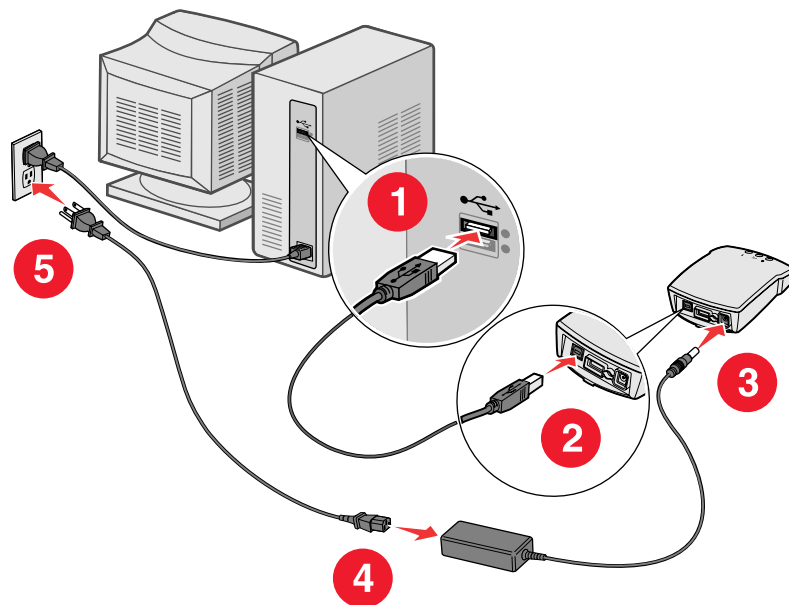

3 Insert the N4050e Setup Utility CD, install the software, and run the Wireless Setup Wizard.

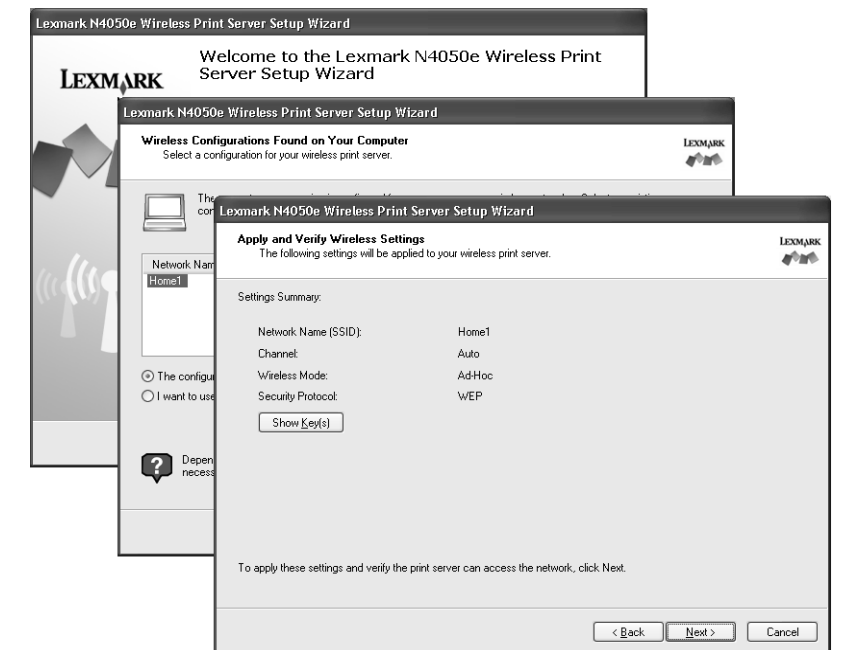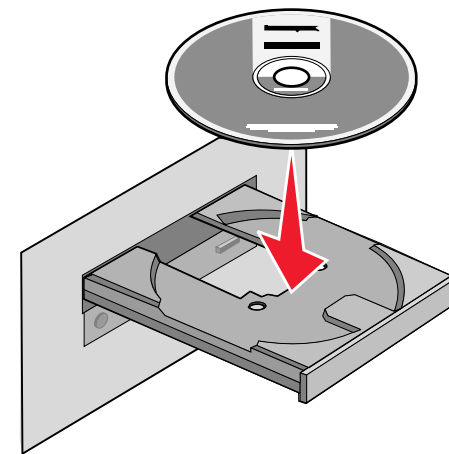

P/N 14T0109 E.C. 5D0006

© 2004 Lexmark International, Inc. All rights reserved.

www.lexmark.com



* 1 4 T 0 1 0 9 *



4

Following the instructions on screen, disconnect the USB cable from your computer and the print server. Turn the cable around and use it to connect the print server to your printer as pictured below. Click **Next** to continue.

Lexmark N4050e Wireless Print Server Setup Wizard


Connect Print Server to Printer

Disconnect the print server from your computer and connect it to your printer



Now that the wireless print server is successfully communicating on the network, follow the steps below to connect the print server to your printer.

1. Disconnect the USB cable from your computer and the print server.
2. Using the same USB cable, connect the print server to your printer.

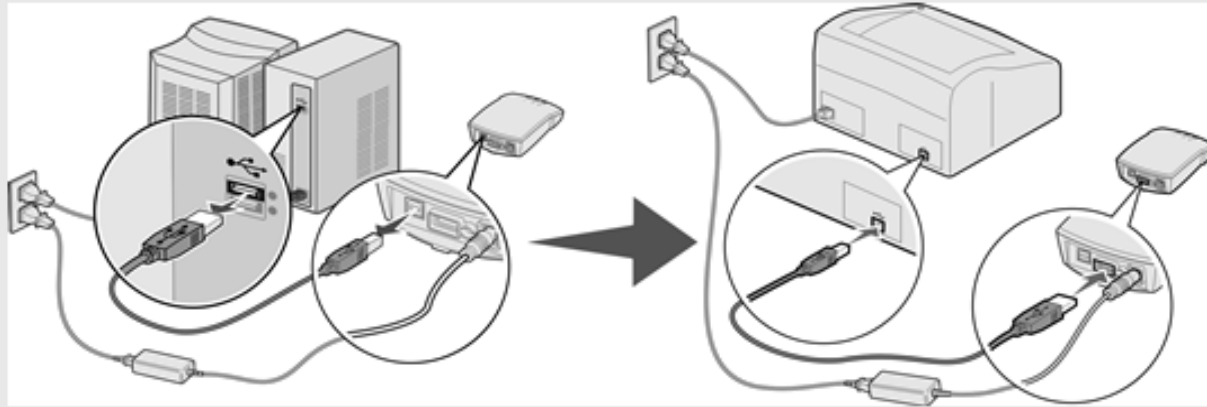

< Back

Next >

Cancel

5

Once the Wireless Setup Wizard has completed, remove the N4050e Setup Utility CD and insert and run the printer drivers or printer software CD that came with your printer. Follow the **Network** printer install path to complete the installation of your printer.

Lexmark N4050e Wireless Print Server Setup Wizard

Completing the Lexmark Print Server Setup Wizard


The following port was created on your computer for the print server:

IP_Lexmark_N4050e_00200040A23F

To install the printer, click Finish and then insert the CD that came with your printer. If prompted to enter a port for the printer, use the port shown above.



Remove CD from drive...

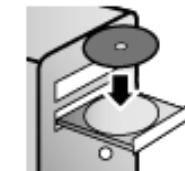

... then insert printer CD into drive

< Back

Finish

Cancel