

Hard-to-find made easy®

# 22in Deep Sliding Server Rack Cabinet Shelf

### **SLIDESHELFD**

**DE:** Bedienungsanleitung - de.startech.com

FR: Guide de l'utilisateur - fr.startech.com

ES: Guía del usuario - es.startech.com

IT: Guida per l'uso - it.startech.com

NL: Gebruiksaanwijzing - nl.startech.com

PT: Guia do usuário - pt.startech.com

# **Packaging Contents**

- 1 x 1U Sliding Shelf
- 2 x Front and Rear Mounts
- 2 x Rails
- 1 x Pack of hardware including screws, nuts, and bolts
- 8 x M5 Cage Nuts
- 8 x M5 Screws with washer

### **System Requirements**


• EIA RS-310D compliant 19" rack/cabinet

## **Tools Required**

- Phillips head Screwdriver
- Wrench

### Installation

1. Separate the sliding rails into two pieces by fully extending the rails and lifting/lowering the small lever on the inside of the inner rail to release the two pieces.

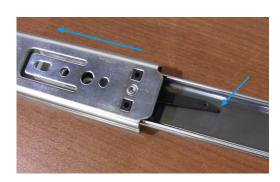







2. The piece that contains the lever can be mounted along the sides of the shelf unit using the provided screws, nuts and washers. The nut and washer should sit inside the shelf unit with the screws going in from the outside. The lever on the rail should be towards the rear of the shelf (without handle).









# Hard-to-find made easy®

3. Attach the front rack mounting bracket to the sliding rail. The front bracket is the short bracket. Two screws will fasten the bracket to the rail. Make sure the screw is inserted from inside the rails, so the nuts and washers are on the outside.

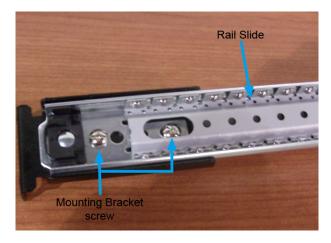

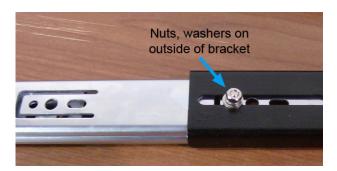

- 4. The rear rack mounting bracket can be fastened to the rails in the same manner as the front. These should not be fully tightened however, so they can be adjusted to the exact length needed to fit the rack/cabinet.
- 5. Fasten the completed rails into the cabinet/rack using the appropriate hardware for your cabinet/rack. Make sure to fully tighten the rear bracket to the rails, if they were left loose from the previous step.
- The revolving front handle can be inserted into the opening on the front of the shelf and fastened from the rear/inside with two screws.
- 7. Slide the shelf onto the rails from the front and push the shelf all the way to the back until it stops.
- 8. Pull the shelf out and ensure that it stops and locks when fully extended.
- 9. If the shelf needs to be removed (i.e. to be flipped over), refer to Step 1.

## **Specifications**

Description	22in Deep Sliding Server Rack Cabinet Shelf
Material	Aluminum
Color	Black
Maximum Weight Capacity	25 kg
Min/Max Mounting Depth	20in / 24in
Mounting Height	1U
Dimensions (WxD)	444.5mm x 559.0mm
Net Weight	5680 g
Certifications	RoHS

#### **FCC Compliance Statement**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### Use of Trademarks, Registered Trademarks, and other Protected Names and Symbols

This manual may make reference to trademarks, registered trademarks, and other protected names and/or symbols of third-party companies not related in any way to StarTech.com. Where they occur these references are for illustrative purposes only and do not represent an endorsement of a product or service by StarTech.com, or an endorsement of the product(s) to which this manual applies by the third-party company in question. Regardless of any direct acknowledgement elsewhere in the body of this document, StarTech.com hereby acknowledges that all trademarks, registered trademarks, service marks, and other protected names and/or symbols contained in this manual and related documents are the property of their respective holders.

### **Technical Support**

StarTech.com's lifetime technical support is an integral part of our commitment to provide industry-leading solutions. If you ever need help with your product, visit www.startech.com/support and access our comprehensive selection of online tools, documentation, and downloads.

For the latest drivers/software, please visit www.startech.com/downloads

#### **Warranty Information**

This product is backed by a one year warranty.

In addition, StarTech.com warrants its products against defects in materials and workmanship for the periods noted, following the initial date of purchase. During this period, the products may be returned for repair, or replacement with equivalent products at our discretion. The warranty covers parts and labor costs only. StarTech.com does not warrant its products from defects or damages arising from misuse, abuse, alteration, or normal wear and tear.

#### **Limitation of Liability**

In no event shall the liability of StarTech.com Ltd. and StarTech.com USA LLP (or their officers, directors, employees or agents) for any damages (whether direct or indirect, special, punitive, incidental, consequential, or otherwise), loss of profits, loss of business, or any pecuniary loss, arising out of or related to the use of the product exceed the actual price paid for the product. Some states do not allow the exclusion or limitation of incidental or consequential damages. If such laws apply, the limitations or exclusions contained in this statement may not apply to you.