


Wall-Mounting Bracket for Patch Panel - 14 in. Deep

Product IDs

RACK-2U-14-BRACKET RACK-10U-14-BRACKET RACK-14U-14-BRACKET

Product Diagram

Front View

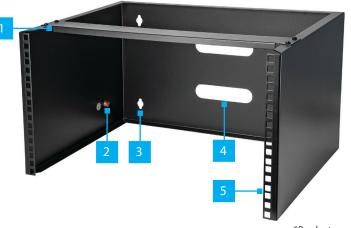

*Product may vary from image

Component		Function	
1	Stabilizer Bar	 Stabilize the Wall-Mounting Bracket when equipment is loaded 	
2	Grounding Stud	 (Optional - Recommended) Attach a Grounding Wire (sold separately) to the Wall-Mounting Bracket and to an Earth Ground Connection 	
3	Wall Mounting Holes (x 4)	Wall mount the Wall-Mounting Bracket	

	Cable Management Slots	 (Optional - Recommended) Route the equipment Cables 	
4		 Cut an appropriately sized hole behind the Wall- Mounting Bracket to route the Cables. Or 	
		 The Cables can be routed out of the top/bottom of the Wall-Mounting Bracket 	
5	Cage Nut Holes	 Use Cage Nuts to mount equipment into the Wall- Mounting Bracket 	

Product Information

For the latest manuals, product information, technical specifications, and declarations of conformance, please visit:

www.StarTech.com/RACK-2U-14-BRACKET www.StarTech.com/RACK-10U-14-BRACKET www.StarTech.com/RACK-14U-14-BRACKET

Requirements

- Phillips Head Screwdriver
- (Optional Recommended) Grounding Wire
- (Optional Recommended) Earth Ground Connection
- (Optional) 10mm Wrench
- (Optional) Cage Nut Tool

Warnings

- Read the entire manual and ensure the instructions are fully understood before assembling and/or using this product.
- Before adding equipment to this product, ensure this product has been properly mounted.
- The mounting hardware included with this product might not be adequate for some wall structures. If lacking the necessary expertise to wall mount this product, contact a construction professional to install the wall mount or to provide specific mounting instructions for the wall structure.
- Ensure the weight of the equipment does not exceed the weight capacity of this product. If the weight capacity is exceeded, personal injury or damage to the equipment are possibilities. This product can support the following weight: up to 35 kg (77.2 lb.).

• Wall structures vary. Ensure the type of wall structure and mounting hardware will properly support the mounted equipment. Failure to do so might result in personal injury and/or equipment damage. The wall structure should be capable of supporting at least four times the weight of the mounted equipment.

Package Contents

- Wall-Mounting Bracket x 1
- M6 Cage Nuts x 8 (RACK-2U-14-BRACKET) x 40 (RACK-10U-14-BRACKET) x 56 (RACK-14U-14-BRACKET)
- M6 Cage Screws x 8 (RACK-2U-14-BRACKET) x 40 (RACK-10U-14-BRACKET) x 56 (RACK-14U-14-BRACKET)
- M6 Plastic Washers x 8 (RACK-2U-14-BRACKET) x 40 (RACK-10U-14-BRACKET) x 56 (RACK-14U-14-BRACKET)
- Concrete Wall Anchors x 4
- Mounting Screws x 4
- Quick-Start Guide x 1

Installation

Mount the Wall-Mounting Bracket

- Product mounting should be completed by a certified professional as per the local safety and building code guidelines.
- Wall Mounting Holes are spaced 16 inches apart for mounting into 16 inch (center to center) spaced Wall Studs.

(Optional - Recommended) Grounding the Wall-Mounting Bracket

- 1. Remove the **M6 Nut** on the **Grounding Stud**, using a **10mm Wrench**.
- 2. Slide the appropriately sized **Grounding Lug** from an **Earth Grounding Wire** over the **Grounding Stud**.
- 3. Connect the Equipment Grounding Wire(s) to the Grounding Stud as required.
- 4. Thread the **M6 Nut** onto the **Grounding Stud** and tighten, using a **10mm Wrench**.
- 5. Attach the other end of the **Earth Grounding Wire** to an **Earth Ground Connection**.

Adding Equipment to the Wall-Mounting Bracket

Use the included **M6 Cage Nuts**, **M6 Cage Screws**, and **M6 Plastic Washers** to install equipment into the **Wall-Mounting Bracket**.

- 1. Insert the Wing (side) of an M6 Cage Nut into the back of the a Cage Nut Hole.
- 2. Insert the second **Wing** of the **M6 Cage Nut** into the selected **Cage Nut Hole**, using pressure by hand, or with a **Cage Nut Tool**.
- 3. Repeat steps 1 and 2 to insert the desired number of Cage Nuts.
- 4. Thread an **M6 Plastic Washer** over an **M6 Cage Screw**. Repeat until the desired number of **M6 Cage Screw Assemblies** have been prepared.
- 5. Align the **Mounting Holes** in the **Equipment** with the **M6 Cage Nuts** installed in steps 1-3.
- 6. Insert the **M6 Cage Screw Assemblies** through the **Mounting Holes** in the **Equipment** and into the **M6 Cage Nuts** and tighten, using a **Phillips Head Screwdriver**.

Regulatory Compliance

Use of Trademarks, Registered Trademarks, and other Protected Names and Symbols

This manual may make reference to trademarks, registered trademarks, and other protected names and/or symbols of thirdparty companies not related in any way to StarTech.com. Where they occur these references are for illustrative purposes only and do not represent an endorsement of a product or service by StarTech.com, or an endorsement of the product(s) to which this manual applies by the third-party company in question. StarTech.com hereby acknowledges that all trademarks, registered trademarks, service marks, and other protected names and/or symbols contained in this manual and related documents are the property of their respective holders.

PHILLIPS® is a registered trademark of Phillips Screw Company in the United States or other countries.

Warranty Information

This product is backed by a lifetime warranty.

For further information on product warranty terms and conditions, please refer to www.startech.com/warranty.

Limitation of Liability

In no event shall the liability of StarTech.com Ltd. and StarTech.com USA LLP (or their officers, directors, employees or agents) for any damages (whether direct or indirect, special, punitive, incidental, consequential, or otherwise), loss of profits, loss of business, or any pecuniary loss, arising out of or related to the use of the product exceed the actual price paid for the product. Some states do not allow the exclusion or limitation of incidental or consequential damages. If such laws apply, the limitations or exclusions contained in this statement may not apply to you.

StarTech.com Ltd. 45 Artisans Crescent London, Ontario N5V 5E9 Canada	StarTech.com LLP 4490 South Hamilton Road Groveport, Ohio 43125 U.S.A.	StarTech.com Ltd. Unit B, Pinnacle 15 Gowerton Road Brackmills, Northampton NN4 7BW United Kingdom	StarTech.com Ltd. Siriusdreef 17-27 2132 WT Hoofddorp The Netherlands	FR: startech.com/fr DE: startech.com/de ES: startech.com/es NL: startech.com/it JP: startech.com/it JP: startech.com/jp
---	--	--	---	--