
 
 


 

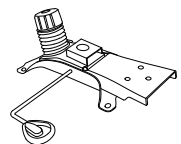 

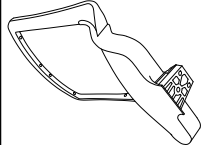 
 





**ASSEMBLY INSTRUCTIONS**


ITEM NO.: 695488

Part List			
Key	Description	Qty.	Part
A	CASTERS	5	
B	BASE	1	
C	SEAT CUSHION	1	
D	RIGHT ARMREST	1	
E	LEFT ARMREST	1	
F	ARMREST SCREWS D 1/4" x L 1 1/8"	6	
G	FLAT WASHERS	6	
H	MECHANISM	1	
I	MECHANISM SCREWS D 5/16" x L 7/8"	4	
J	BACK SUPPORT	1	
K	BACK SUPPORT SCREWS D 5/16" x L 1 9/16"	3	
L	ALLEN WRENCH	1	
M	GAS LIFT	1	

 
**Step 1**  
Turn Base "B" upside down.  
Insert Casters "A" into Base "B".

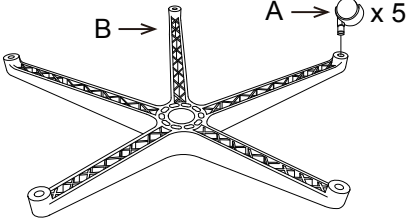

 
**Step 2**  
Attach Right Armrest "D" to Seat Cushion "C" with Armrest Screws "F". Repeat for Left Armrest "E".  
NOTE: Arrows on armrests point to front of seat cushion and fully tighten all screws.

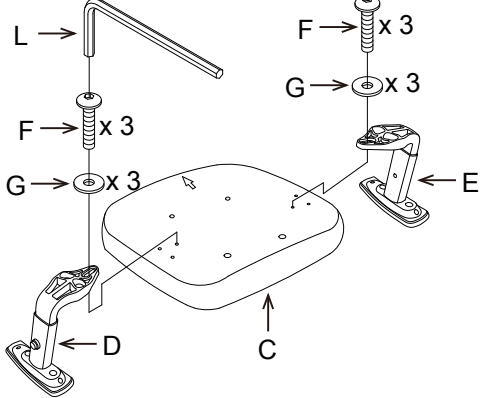

 
**Step 3**  
Attach Mechanism "H" to Seat Cushion "C" with Mechanism Screws "I".  
NOTE: Fully tighten all screws.

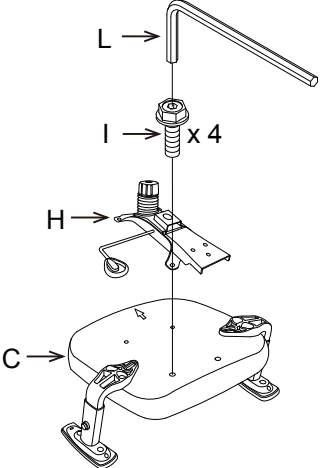

 
**Step 4**  
Attach Back Support "J" to the rear of Mechanism "H" with Back Support Screws "K".  
NOTE: Fully tighten all screws.

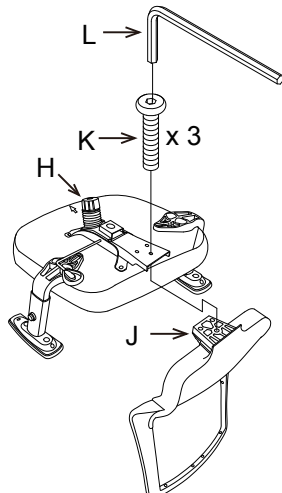

 **Step 5**  
Insert Gas Lift "M" into hole on Base "B".

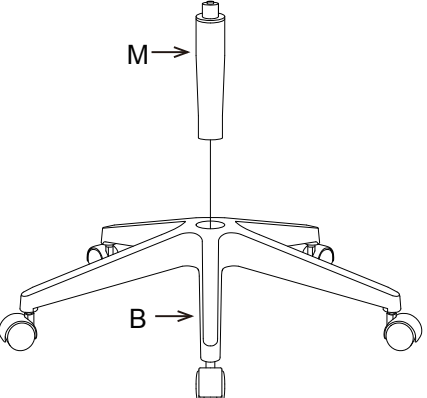

 **Step 6**  
Place seat assembly onto Gas Lift "M". Push firmly on the chair seat to securely attach seat assembly to seat post.

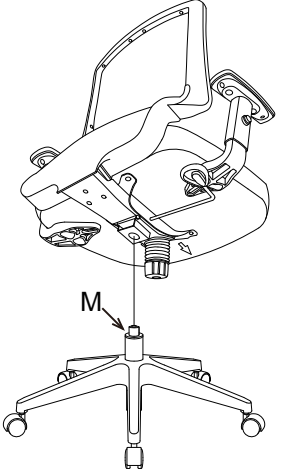

**ATTENTION: Make certain that all screws are fully tightened before using chair. Lubricate all moving parts and tighten all screws every 6 months or as needed.**