

# CONTROL INSTRUCTIONS

ITEM NO.: 695488

**interion**<sup>®</sup>  
globalindustrial.com  
1.800.645.1232

## ● ARM HEIGHT ADJUSTMENT

To adjust arm height, push button (1) in to allow the arms to move up or down freely, release button (1) once the desired height is reached.

## ● BACK ANGLE ADJUSTMENT

To lock, return the back to the upright position and push lever (2) in.  
To unlock, pull lever (2) out.

## ● SEAT HEIGHT ADJUSTMENT

To raise seat height, remove pressure from the seat and lift lever (2).  
To lower seat height, sit on the chair and lift lever (2).

## ● TILT TENSION

Turn knob (3) clockwise to increase tension and counter-clockwise to decrease or ease the tension.  
Be careful not to loose the knob completely.

