
Teknik

www.teknikoffice.co.uk

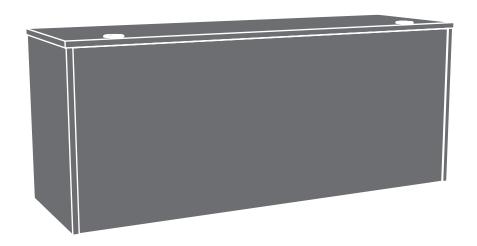

1800x600 Desk

Hudson Elm finish | Model 5427422

NOTE: THIS INSTRUCTION BOOKLET CONTAINS <u>IMPORTANT</u> SAFETY INFORMATION.

PLEASE READ AND KEEP FOR FUTURE REFERENCE.


English pg 1-24 Français pg 25-28 Español pg 29-32

Lot # **566752** 09/08/21 Purchased:

Table of Contents

Assembly Tools Required

Part Identification	3	
Hardware Identification	4	
Optional Accessories	5	
Hardware Usage Guide	6	
Assembly Steps	6-24	
Français	25-28	
Español	29-32	
Safety	33-34	
Warranty	35	

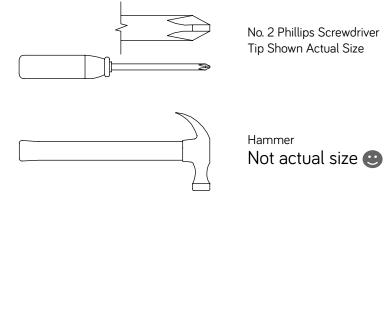

Part Identification




While not all parts are labeled, some of the parts will have a label or an inked letter on the edge to help distinguish similar parts from each other. Use this part identification to help identify similar parts.


Α	RIGHT END (1)	
В	LEFT END (1)	
С	SMALL END (1)	
D	MODESTY PANEL (1)	
Е	TOP (1)	
		(E)
		(D)
		(C) /*
	(B)	
		\bigvee


Hardware Identification

  Screws are shown actual size. You may receive extra hardware with your unit.





 


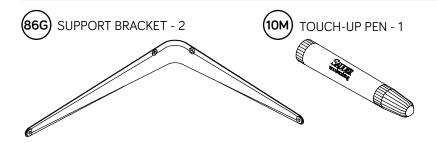

















Optional Accessories (sold separately)

 \mathring{a} This piece of furniture accommodates one or more of the following optional accessories (sold


separately). å Powered Grommet (Item 5427829)

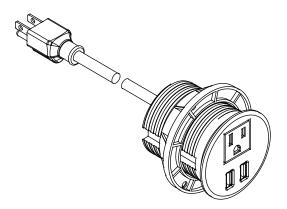

å Articulating Keyboard Shelf (Item 5426468) The Articulating Keyboard Shelf is designed to be fastened to the underside of your desk, desk return, or credenza top.

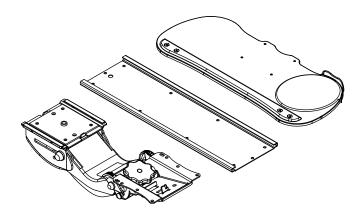


å LED Light (Item 5426494)
The LED Light is designed to be fastened to the underside of a hutch.

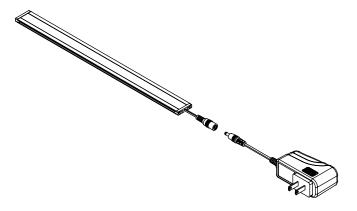

Hardware Usage Guide

HOW TO USE A TWIST-LOCK® FASTENER


1. Push a TWIST-LOCK® FASTENER into the large hole in the part.

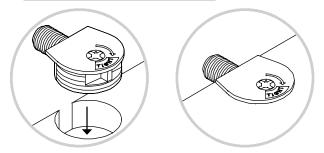


2. 1. Insert the dowel end of the FASTENER into the hole of the adjoining part.


<u>NOTE</u>: The dowel end of the FASTENER must remain fully inserted in the hole of the adjoining part while locking the FASTENER.

2. Tighten the FASTENER with a Phillips screwdriver as tight as possible.

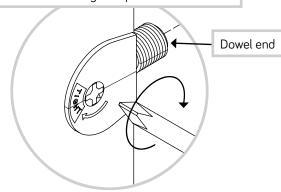


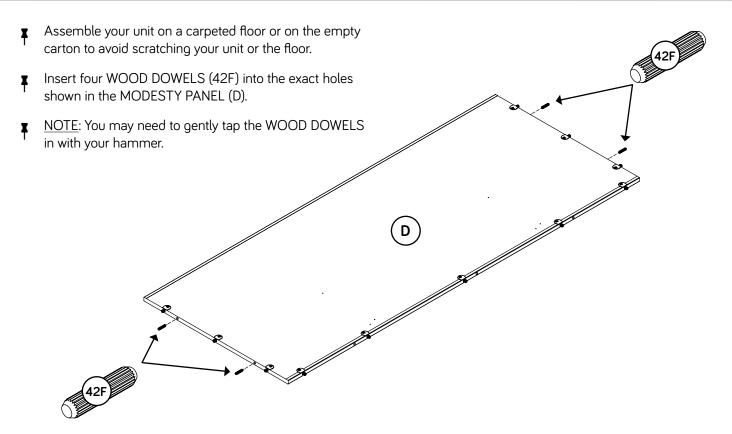


- If you purchased the 427413 to fasten to this desk 427422, then follow Steps 3-7. Next, go to the 427413 assembly and attachment.
- **I** If you purchased the 427468 or the 427427 to fasten to this desk 427422 on the left, then follow Steps 8-13.
- **▼** If you purchased the 427468 or the 427427 to fasten to this desk 427422 on the right, then follow Steps 14-19.

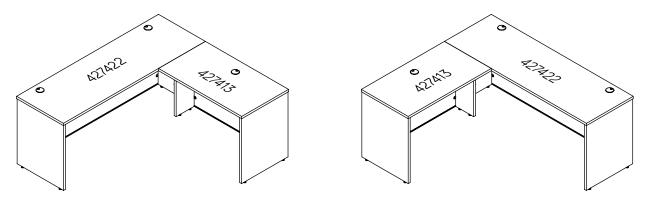

CONNECTING 427413 - FOLLOW STEPS 3-7

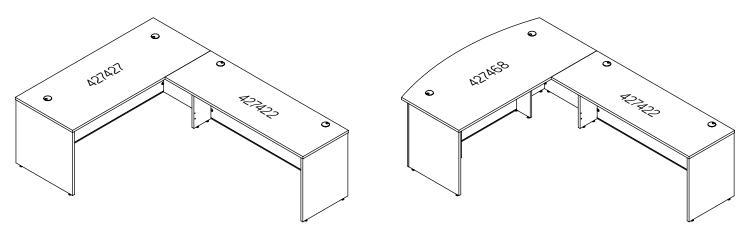


CONNECTING 427422 ON RIGHT - FOLLOW STEPS 8-13

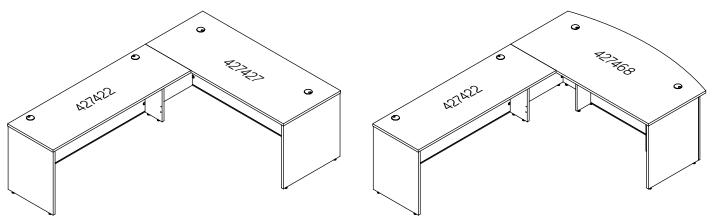

CONNECTING 427422 ON LEFT - FOLLOW STEPS 14-19


- Fasten the ENDS (A and B) to the MODESTY PANEL (D). Tighten six TWIST-LOCK® FASTENERS.
- NOTE: Be sure the WOOD DOWELS in the MODESTY PANEL insert into the ENDS.
- NOTE: You will <u>not</u> use the SMALL END (C) in Steps 3-7. Extra hardware has been provided for the SMALL END if needed.



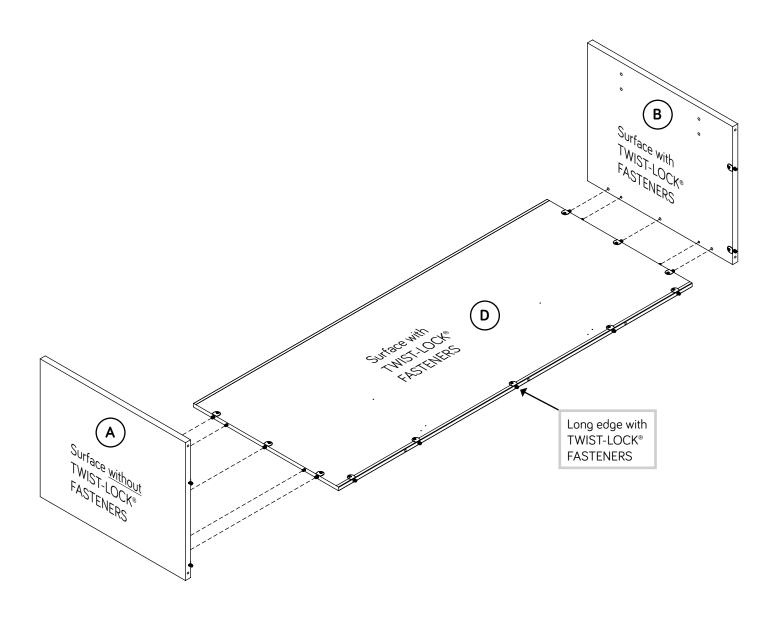


- Insert seven WOOD DOWELS (42F) into the exact holes shown in the TOP (E).
- NOTE: You may need to gently tap the WOOD DOWELS in with your hammer.
- With the help of another person, fasten the ENDS (A and B) and MODESTY PANEL (D) to the TOP (E). Tighten nine TWIST-LOCK® FASTENERS.
- NOTE: Be sure the WOOD DOWELS in the TOP insert into the ENDS and MODESTY PANEL.



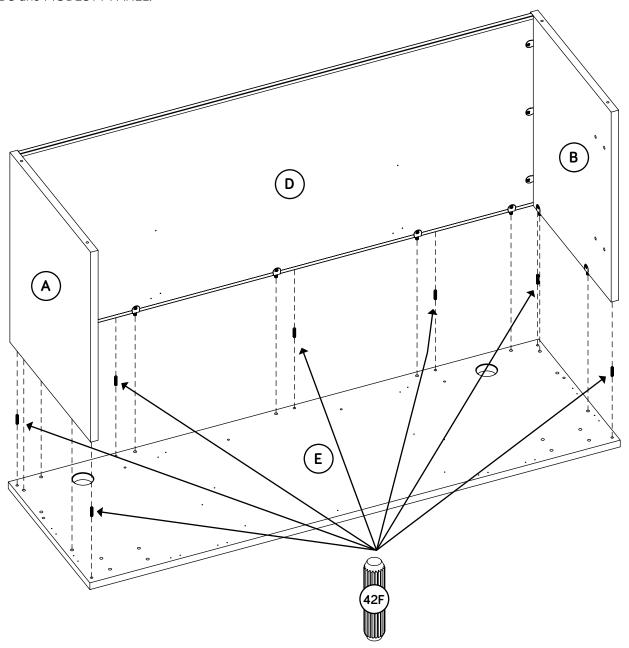


- Fasten the SUPPORT BRACKETS (86G) to the MODESTY PANEL (D) and TOP (E). Use twelve BLACK 9/16" LARGE HEAD SCREWS (1S).
- ₽ Push four CORD CLIPS (9P) into the TOP (E).

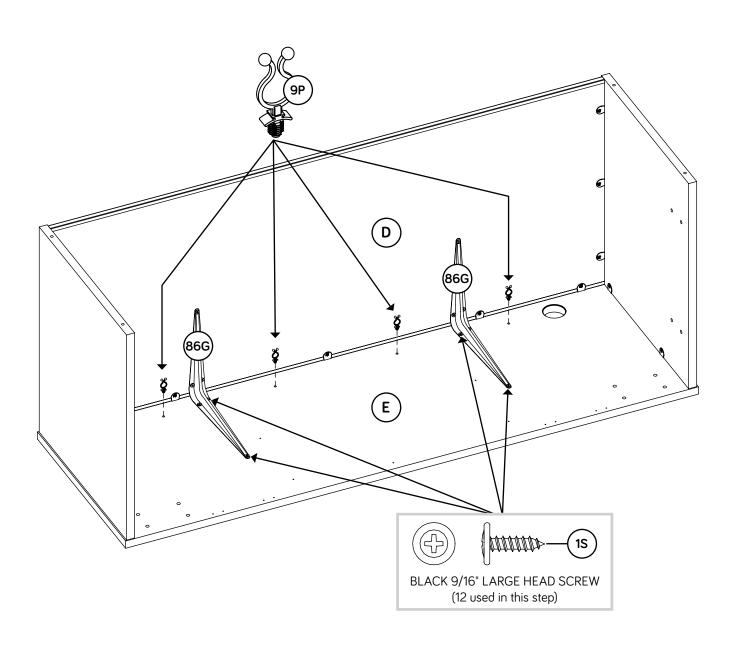


- Using your hammer, gently tap four LEVELERS (46E) completely into the holes in the ENDS (A and B).
- NOTE: Adjustments to the LEVELERS will be made later in assembly once your unit is standing upright.




Now might be a good time to refresh your drink.

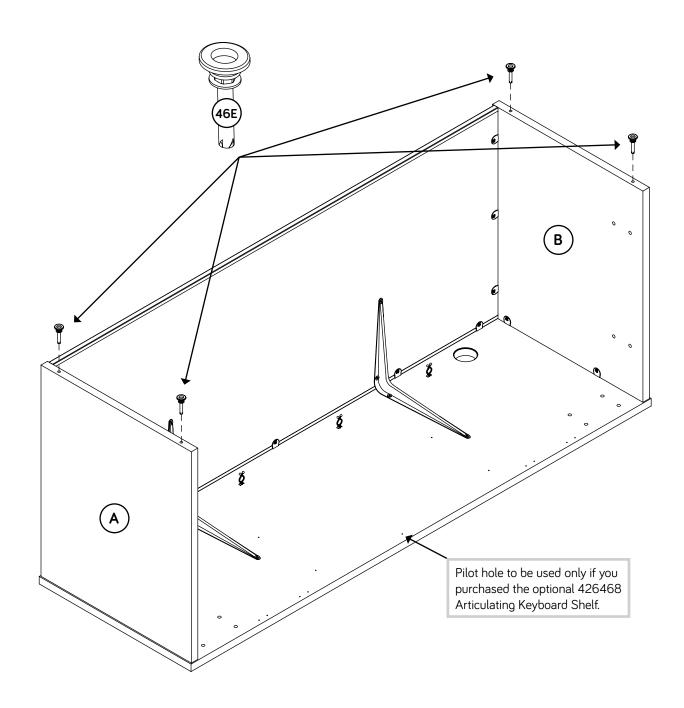


- Carefully stand your unit upright.
- Your unit may need leveling. To raise a corner of your unit, rotate the LEVELER downward. To lower a corner of your unit, rotate the LEVELER upward.
- Using your hammer, gently tap a TWIST-LOCK® FASTENER COVER (125P) onto each visible TWIST-LOCK® FASTENER.
- For long-term care and maintenance of your unit, you may touch up the edges with the TOUCH-UP PEN (10M).
- Insert a HOLE PLUG (127P) into any unused hole in the ENDS (A and B).
- Insert a GROMMET (2P) and GROMMET CAP (3P) into each large hole in the TOP (E).
- NOTE: Please read the back pages of the instruction booklet for important safety information.
- This completes assembly. Clean with a damp cloth. Wipe dry.

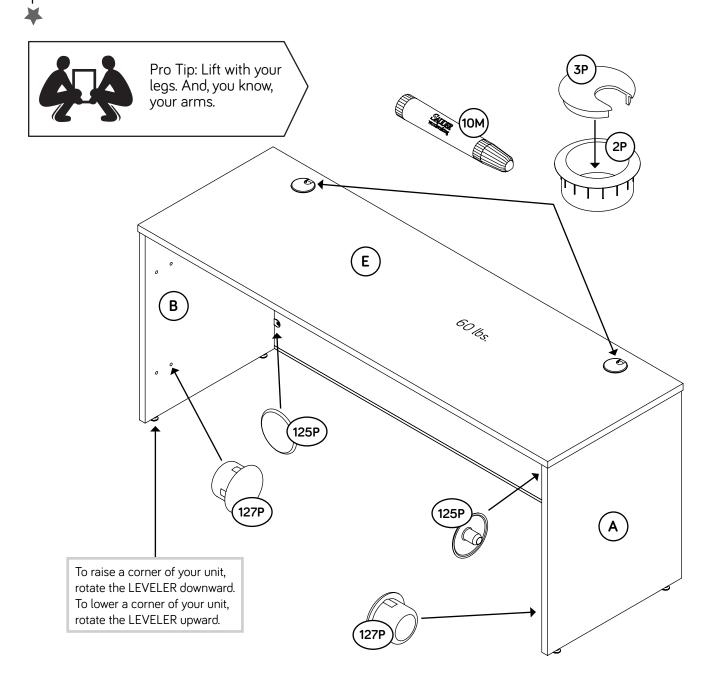

 
- Fasten the ENDS (A and C) to the MODESTY PANEL (D). Tighten six TWIST-LOCK® FASTENERS.
- NOTE: Be sure the WOOD DOWELS in the MODESTY PANEL insert into the ENDS.
- NOTE: You will <u>not</u> use the LEFT END (B) in Steps 8-13. Extra hardware has been provided for the LEFT END if needed.



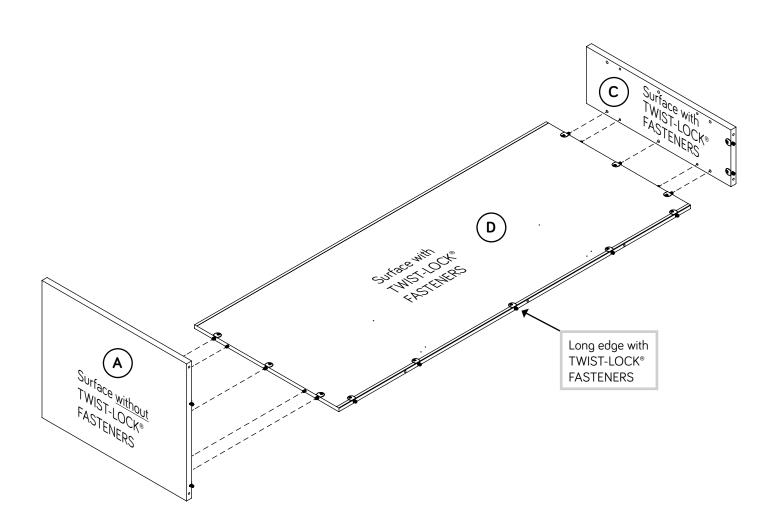

- Insert seven WOOD DOWELS (42F) into the exact holes shown in the TOP (E).
- NOTE: You may need to gently tap the WOOD DOWELS in with your hammer.
- With the help of another person, fasten the ENDS (A and C) and MODESTY PANEL (D) to the TOP (E). Tighten nine TWIST-LOCK® FASTENERS.




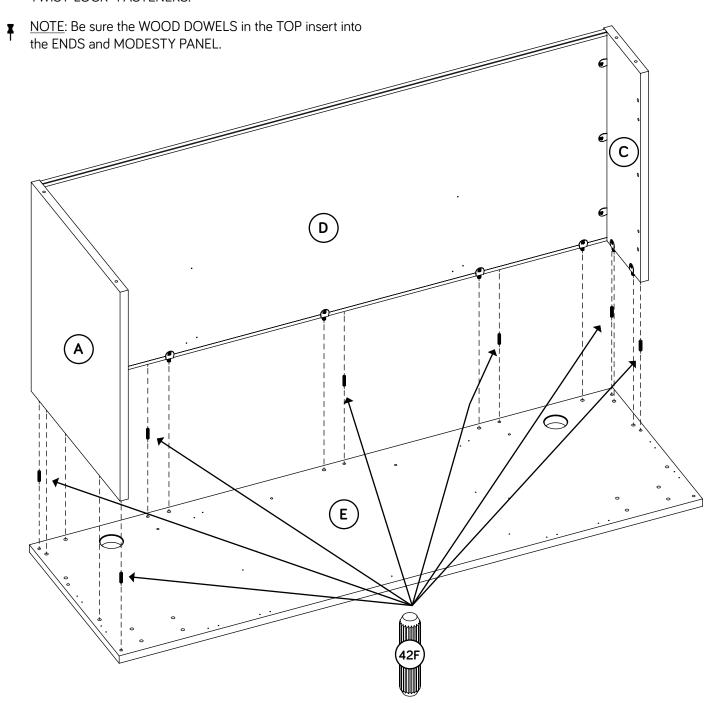

- Fasten the SUPPORT BRACKETS (86G) to the MODESTY PANEL (D) and TOP (E). Use twelve BLACK 9/16" LARGE HEAD SCREWS (1S).
- Push four CORD CLIPS (9P) into the TOP (E).




Now might be a good time to refresh your drink.

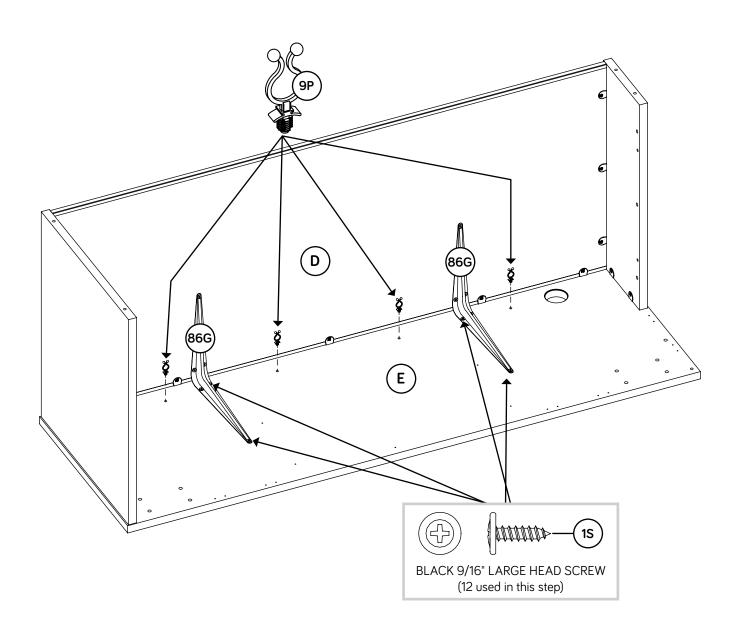


Using your hammer, gently tap four LEVELERS (46E) completely into the holes in the ENDS (A and C). NOTE: Adjustments to the LEVELERS will be made later in assembly once your unit is standing upright. Fasten the PLATES (41G) to the TOP (E). Use four BLACK 9/16" LARGE HEAD SCREWS (1S). BLACK 9/16" LARGE HEAD SCREW (4 used in this step) (c) Pilot hole to be used only if you purchased the optional 426468 Articulating Keyboard Shelf.

Page 16

- Carefully stand your unit upright.
- Your unit may need leveling. To raise a corner of your unit, rotate the LEVELER downward. To lower a corner of your unit, rotate the LEVELER upward.
- Using your hammer, gently tap a TWIST-LOCK® FASTENER COVER (125P) onto each visible TWIST-LOCK® FASTENER.
- For long-term care and maintenance of your unit, you may touch up the edges with the TOUCH-UP PEN (10M).
- Insert a HOLE PLUG (127P) into any unused hole in the ENDS (A and C).
- Insert a GROMMET (2P) and GROMMET CAP (3P) into each large hole in the TOP (E).

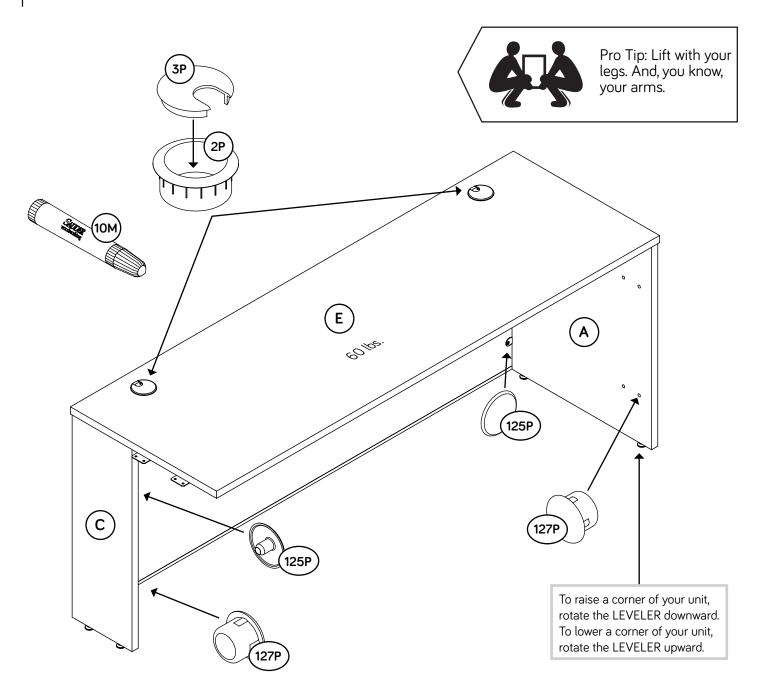


- Fasten the 427427 Desk or the 427468 Desk to your 427422 on the left. Use four 9/16" BLACK LARGE HEAD SCREWS (1S) through the PLATES and into the adjoining Desk.
- NOTE: Please read the back pages of the instruction booklet for important safety information.
- This completes assembly. Clean with a damp cloth. Wipe dry.

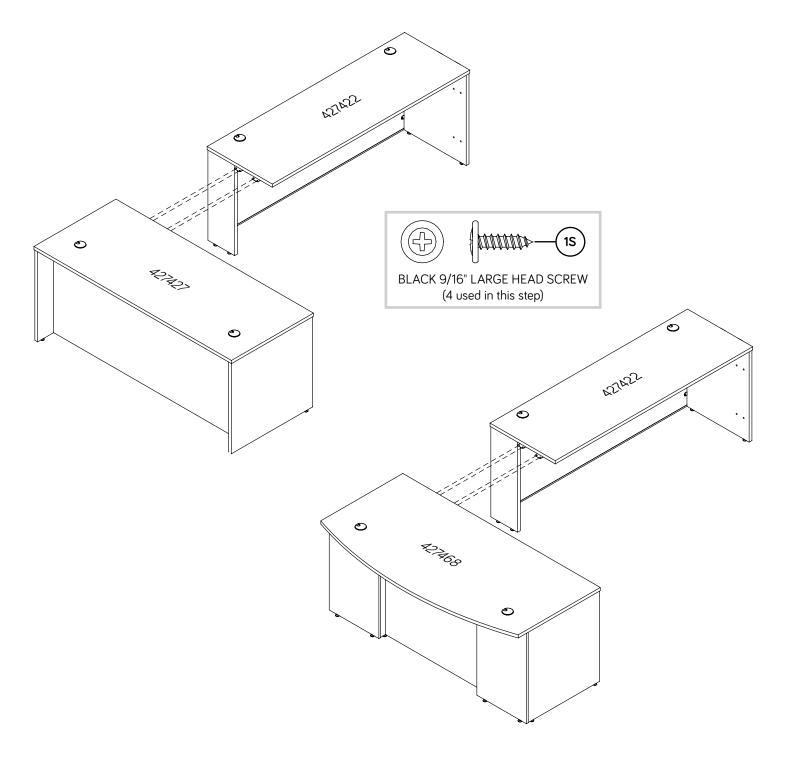


- Fasten the ENDS (B and C) to the MODESTY PANEL (D). Tighten six TWIST-LOCK® FASTENERS.
- NOTE: Be sure the WOOD DOWELS in the MODESTY PANEL insert into the ENDS.
- NOTE: You will <u>not</u> use the RIGHT END (A) in Steps 14-19. Extra hardware has been provided for the RIGHT END if needed.



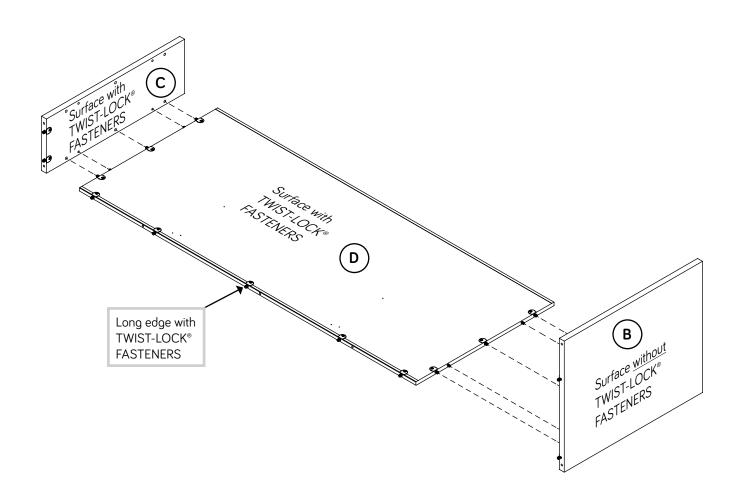


- Insert seven WOOD DOWELS (42F) into the exact holes shown in the TOP (E).
- NOTE: You may need to gently tap the WOOD DOWELS in with your hammer.
- With the help of another person, fasten the ENDS (B and C) and MODESTY PANEL (D) to the TOP (E). Tighten nine TWIST-LOCK® FASTENERS.
- NOTE: Be sure the WOOD DOWELS in the TOP insert into the ENDS and MODESTY PANEL.



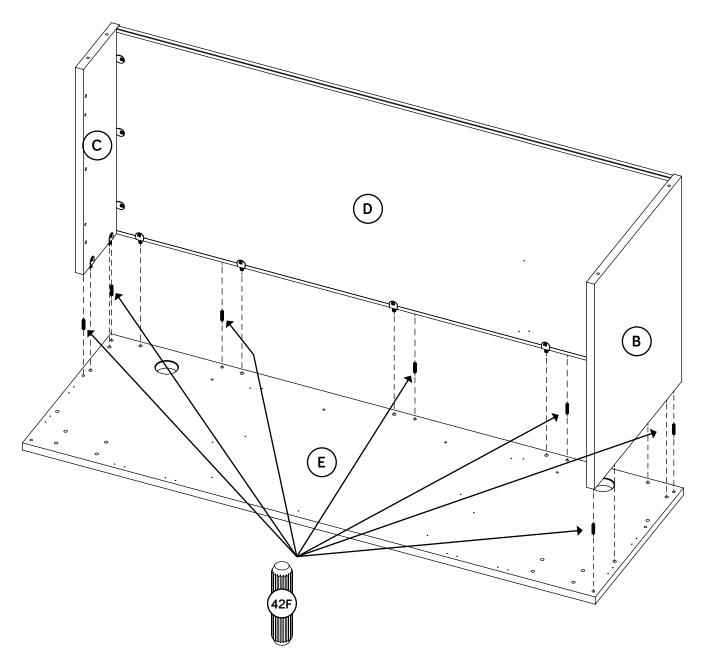


- Fasten the SUPPORT BRACKETS (86G) to the MODESTY PANEL (D) and TOP (E). Use twelve BLACK 9/16" LARGE HEAD SCREWS (1S).
- Push four CORD CLIPS (9P) into the TOP (E).




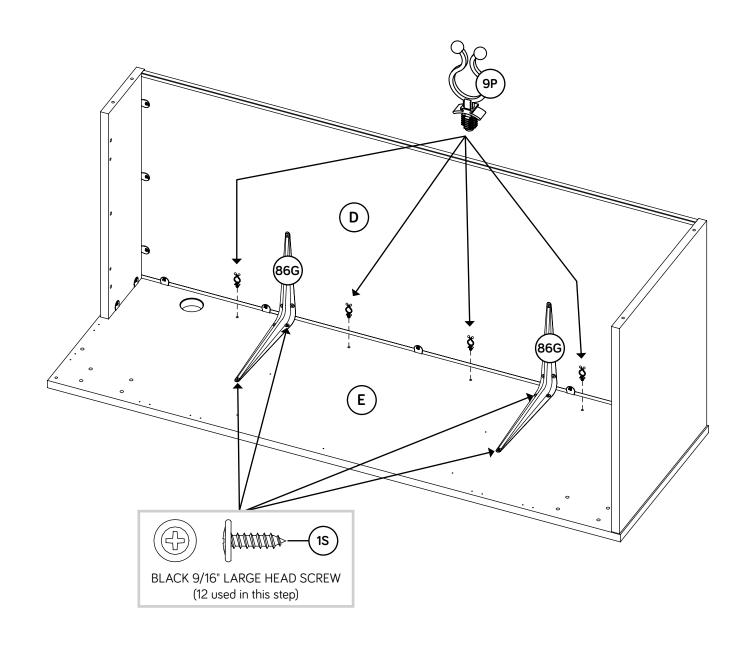

- **■** Using your hammer, gently tap four LEVELERS (46E) completely into the holes in the ENDS (B and C).
- NOTE: Adjustments to the LEVELERS will be made later in assembly once your unit is standing upright.
- Fasten the PLATES (41G) to the TOP (E). Use four BLACK 9/16" LARGE HEAD SCREWS (1S)

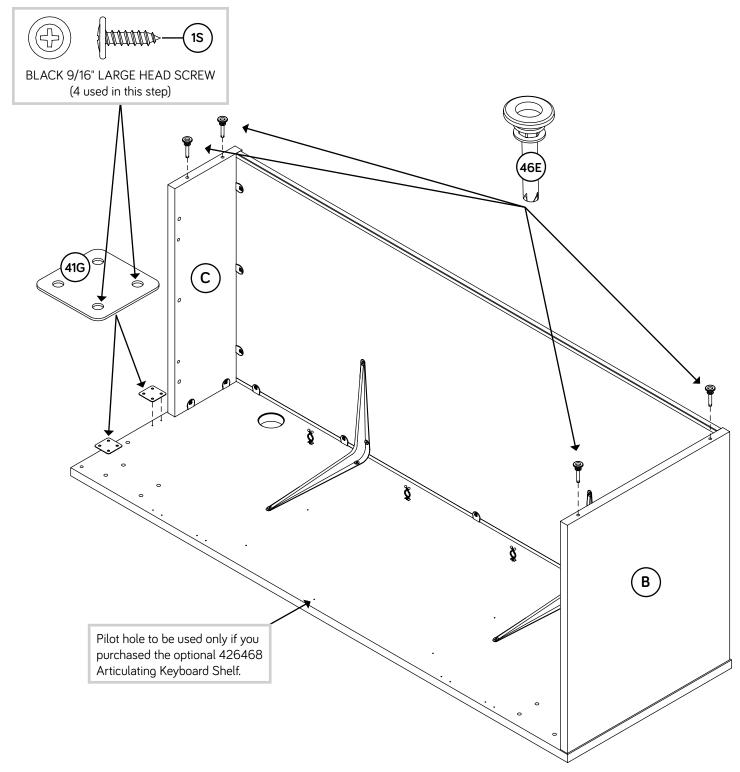

- Carefully stand your unit upright.
- Your unit may need leveling. To raise a corner of your unit, rotate the LEVELER downward. To lower a corner of your unit, rotate the LEVELER upward.
- Using your hammer, gently tap a TWIST-LOCK® FASTENER COVER (125P) onto each visible TWIST-LOCK® FASTENER.
- For long-term care and maintenance of your unit, you may touch up the edges with the TOUCH-UP PEN (10M).
- Insert a HOLE PLUG (127P) into any unused hole in the ENDS (B and C).
- Insert a GROMMET (2P) and GROMMET CAP (3P) into each large hole in the TOP (E).

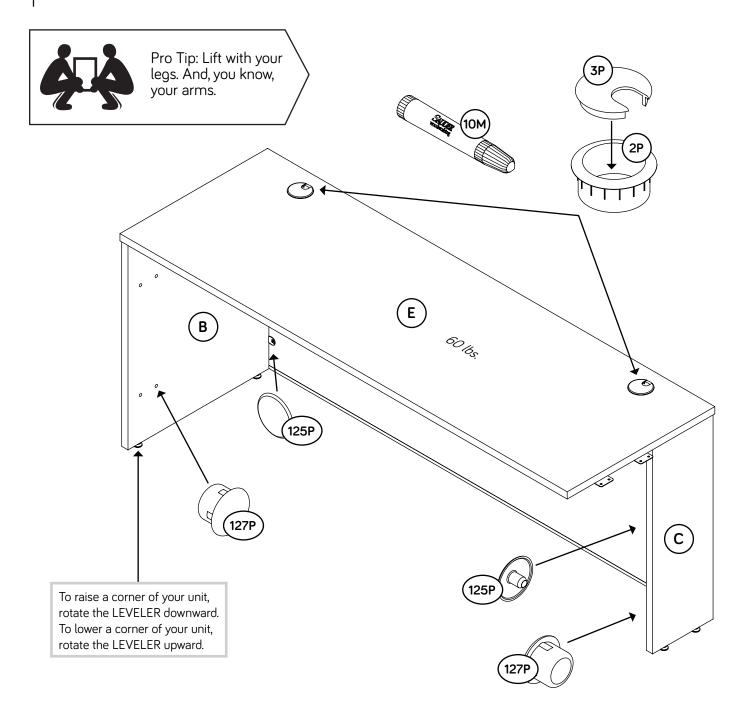

- \mathring{a} Fasten the 5427427 Desk or the 5427468 Desk to your 5427422 on the right. Use four 9/16" BLACK LARGE HEAD SCREWS (IS) through the PLATES and into the adjoining Desk.
- \mathring{a} NOTE: Please read the back pages of the instruction booklet for important safety information.
- $\mathring{\tilde{a}}$ $\,$ This completes assembly. Clean with a damp cloth. Wipe dry.

