

Shaker Style Bookcase with Doors Raven Oak

Model **5431262**

NOTE: THIS INSTRUCTION BOOKLET CONTAINS <u>IMPORTANT</u> SAFETY INFORMATION.

PLEASE READ AND KEEP FOR FUTURE REFERENCE.

Table of Contents


Assembly Tools Required

Part Identification	3	u opisii o
Hardware Identification	4	No. 2 Phillips Screwdriver Tip Shown Actual Size
Hardware Usage Guide	5, 7	
Assembly Steps	5-22	Hammer
Français	23-25	Not actual size 🙂
Español	26-28	
Safety	29-30	
Warranty	31	

Part Identification



While not all parts are labeled, some of the parts will have a label or an inked letter on the edge to help distinguish similar parts from each other. Use this part identification to help identify similar parts.

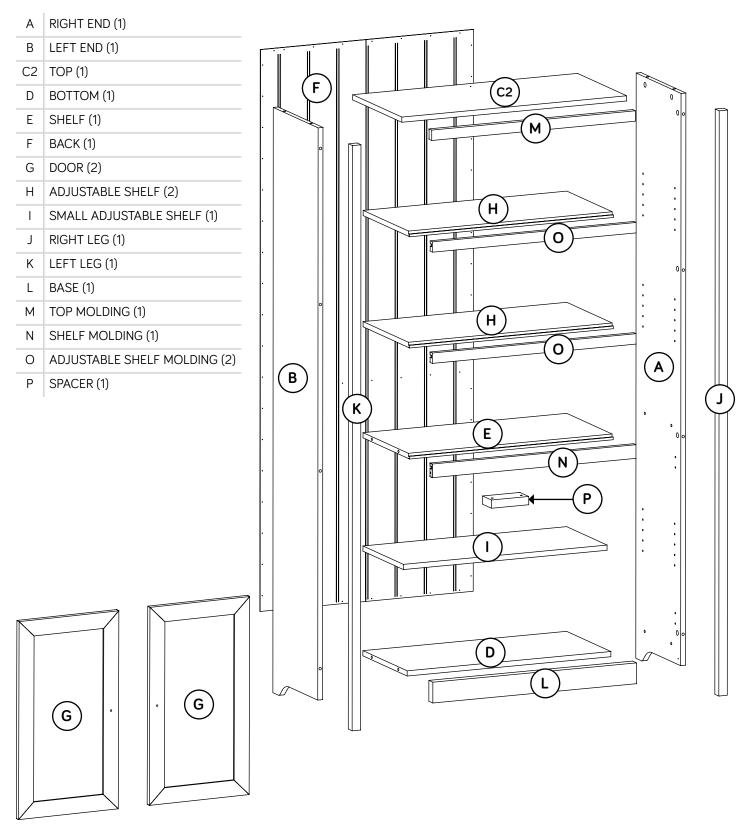

Hardware Identification

Screws are shown actual size. You may receive extra hardware with your unit.





(2F) CAM DOWEL - 12




(8F) CAM SCREW - 8



(4G) METAL BRACKET - 8




(14H) HINGE - 4

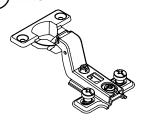


(41) DOOR STOP - 2



(136K) KNOB SET - 2

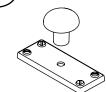

(1N) NAIL - 60

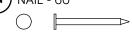

CAM COVER - 12




(1R) METAL PIN - 12



(2R) RUBBER SLEEVE - 12



97 FURNITURE TIPPING RESTRAINT KIT - 1

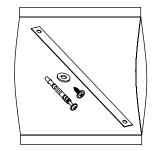

(1S) BLACK 9/16" LARGE HEAD SCREW - 16






ig(11Sig) BLACK 1/2" FLAT HEAD SCREW - 8





(14S) BROWN 1-1/2" FLAT HEAD SCREW - 2



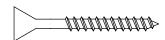


(50s)

GOLD 1" MACHINE SCREW - 2






Hardware Usage Guide

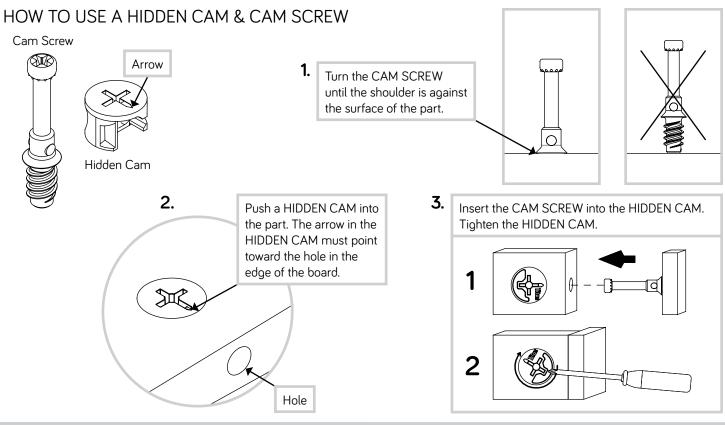





Look for this icon. It means a video assembly tip is available at **www.sauder.com/service/tips**Find the numbered video or scan the QR code.




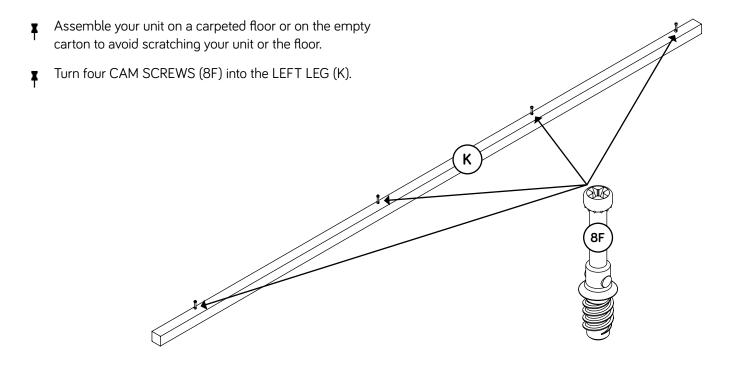

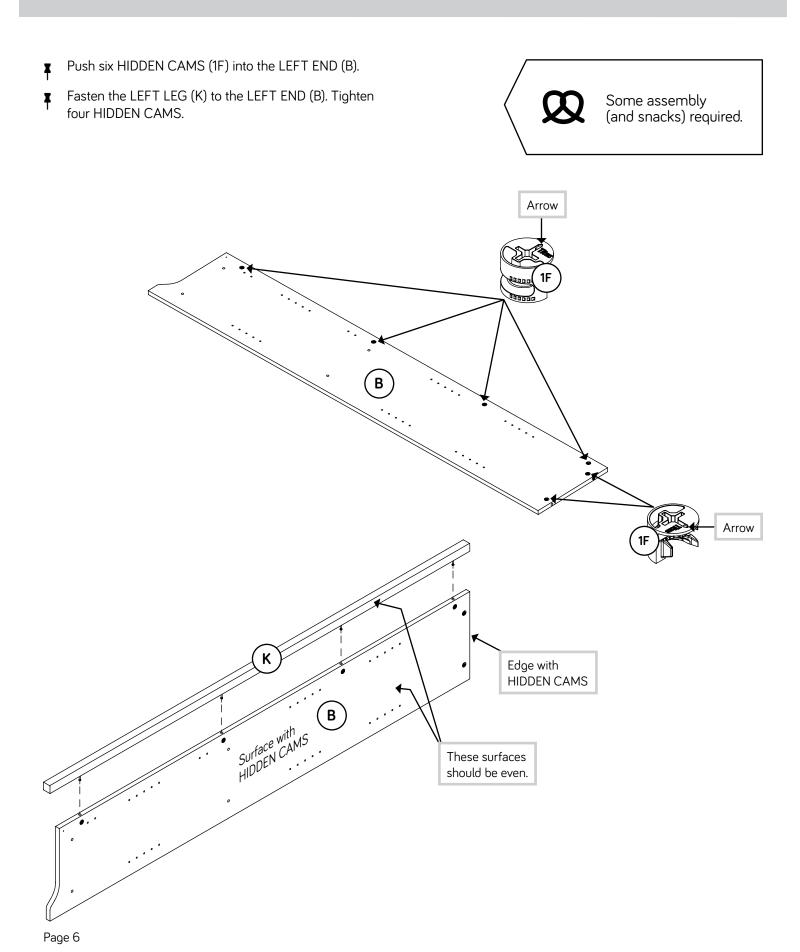

Hardware Usage Guide

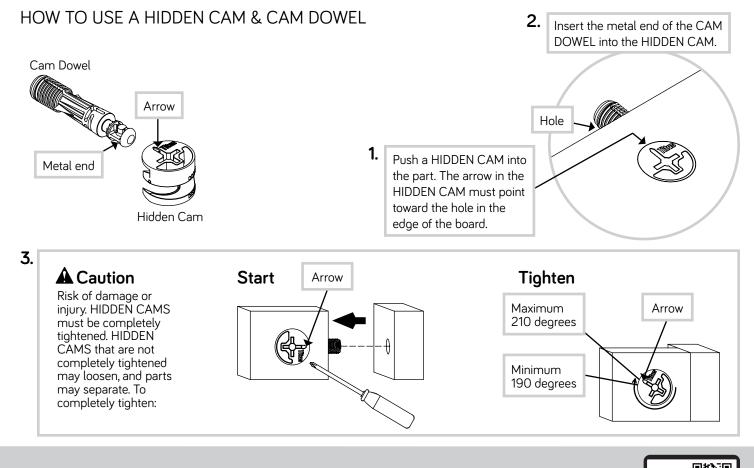


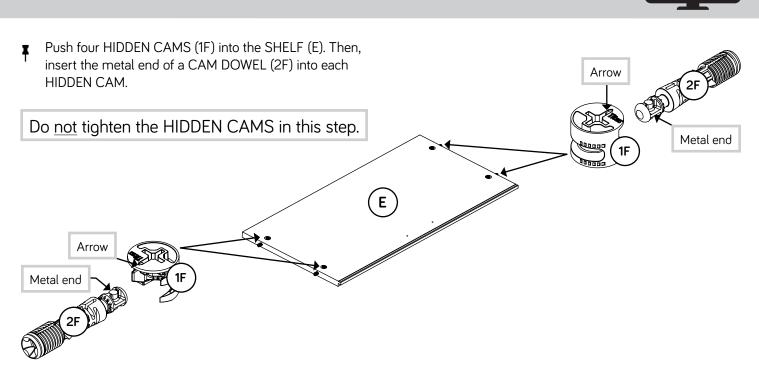



- Fasten the SHELF (E) to the LEFT END (B). Tighten two HIDDEN CAMS.
- Slide the SHELF MOLDING* (N) onto the notched edge of the SHELF (E).
- *U.S. Patent No. 5,499,886




Do <u>not</u> stand the unit upright without the BACK fastened. The unit may collapse.

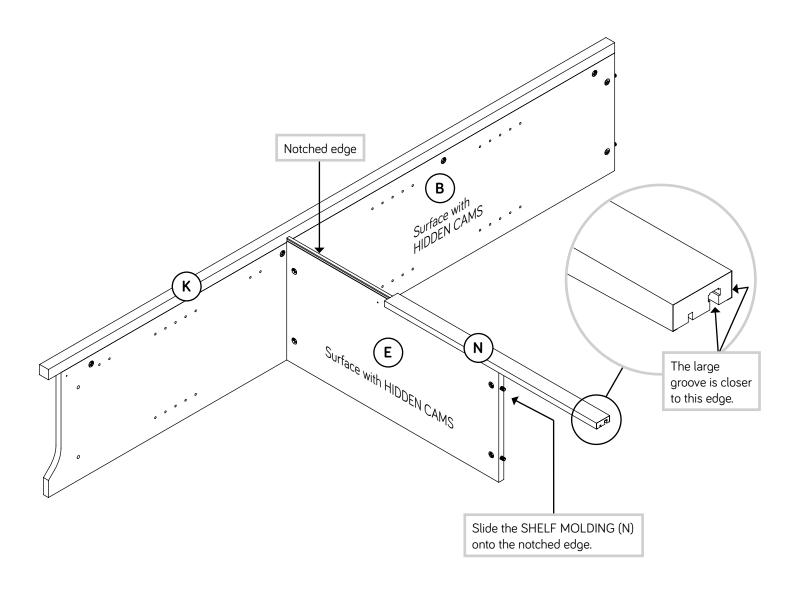

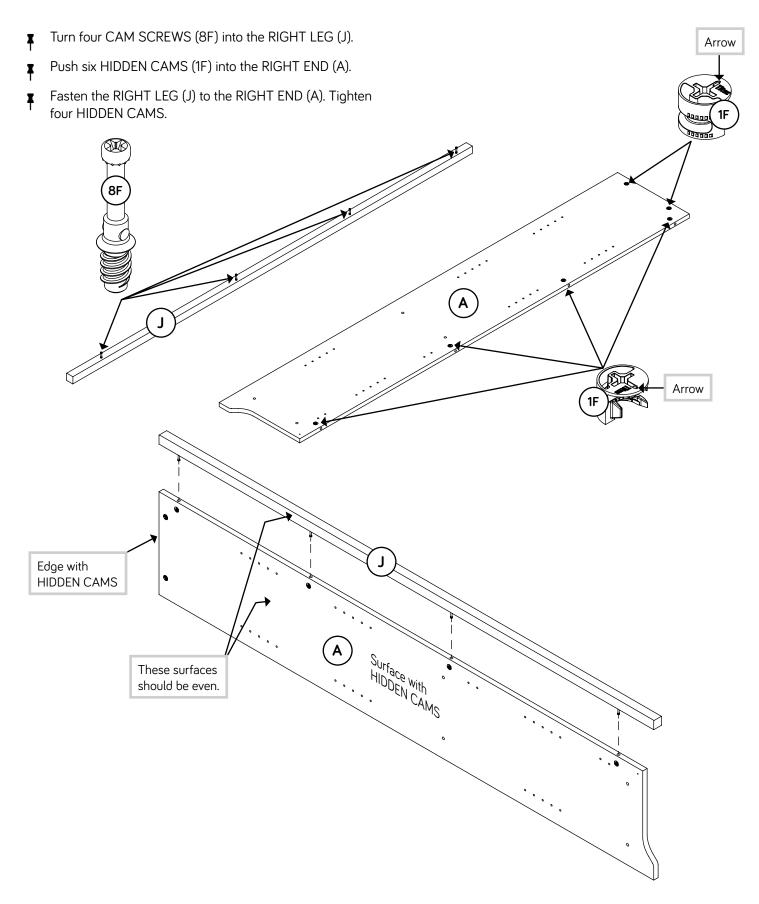

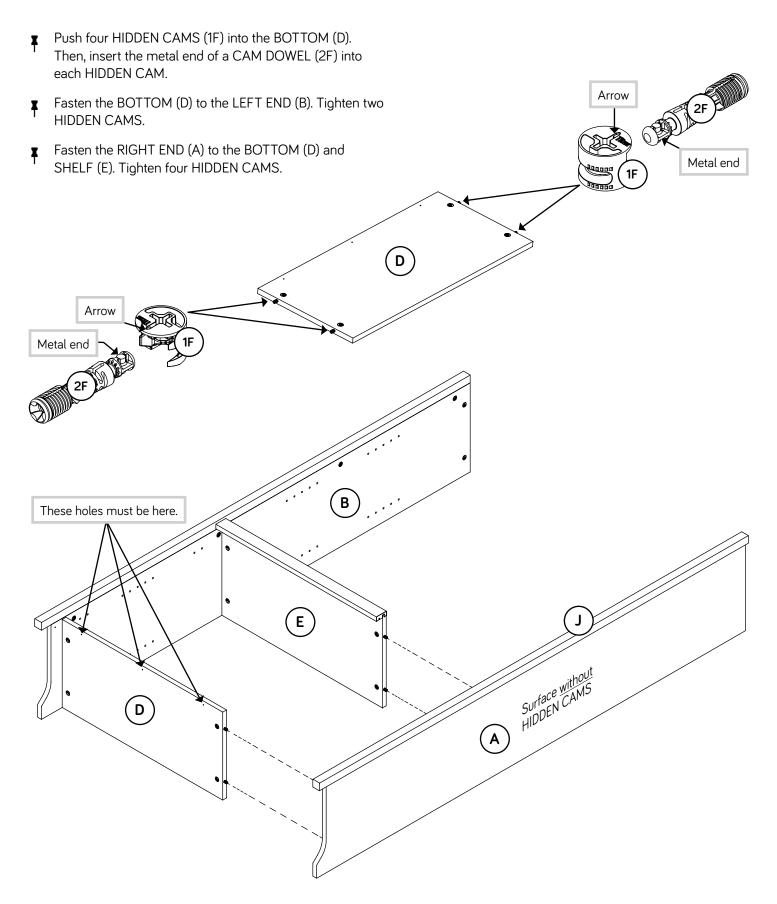


- Insert the metal end of a CAM DOWEL (2F) into each HIDDEN CAM in the ENDS (A and B).
- Fasten the TOP (C2) to the ENDS (A and B). Tighten four HIDDEN CAMS.

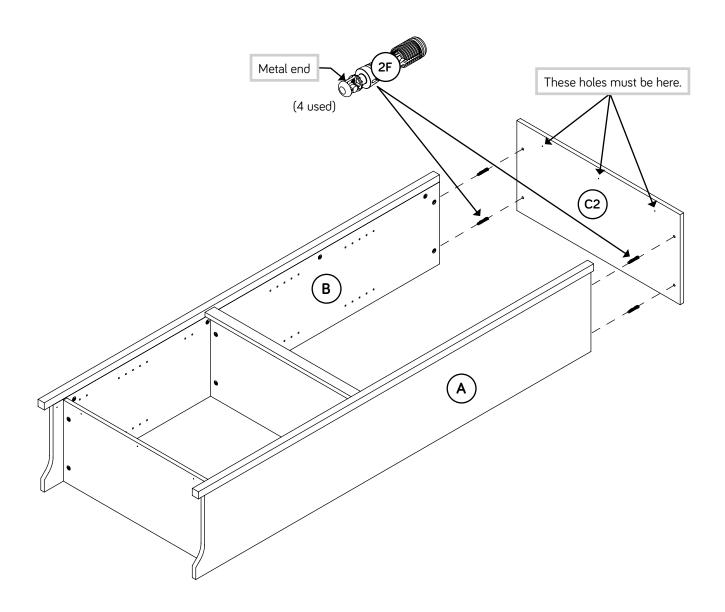


- Fasten three METAL BRACKETS (4G) to the TOP MOLDING (M). Use three BLACK 9/16" LARGE HEAD SCREWS (1S).
- NOTE: Be sure the BRACKETS are even with the edge of the TOP MOLDING.




Don't worry. It isn't Rome. This can be built in a day.

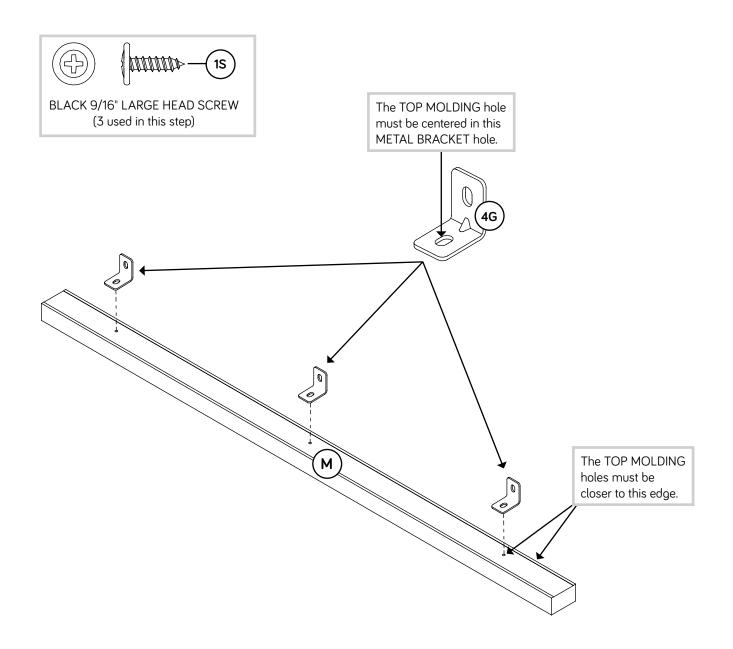


Fasten the TOP MOLDING (M) to the TOP (C2). Use three BLACK 9/16" LARGE HEAD SCREWS (1S) through the METAL BRACKETS on the TOP MOLDING and into the TOP.

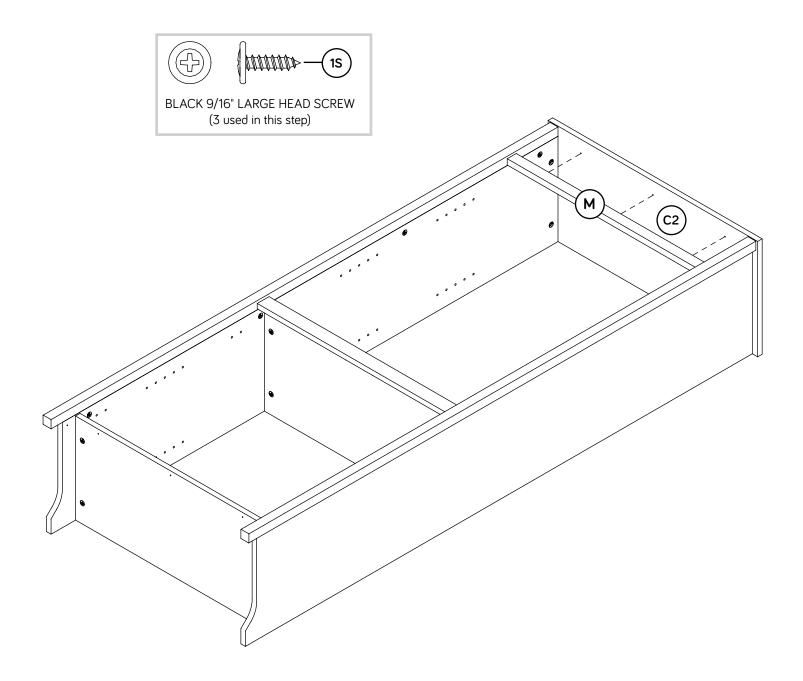

- Fasten the SPACER (P) to the SHELF (E). Use two BROWN 1-1/2" FLAT HEAD SCREWS (14S).
- Then, insert two DOOR STOPS (4I) into the center holes in the SPACER (P).
- Fasten five METAL BRACKETS (4G) to the ENDS (A and B) and BOTTOM (D). Use five BLACK 9/16" LARGE HEAD SCREWS (1S).
- NOTE: Be sure the BRACKETS are even with the edges of the ENDS and BOTTOM.

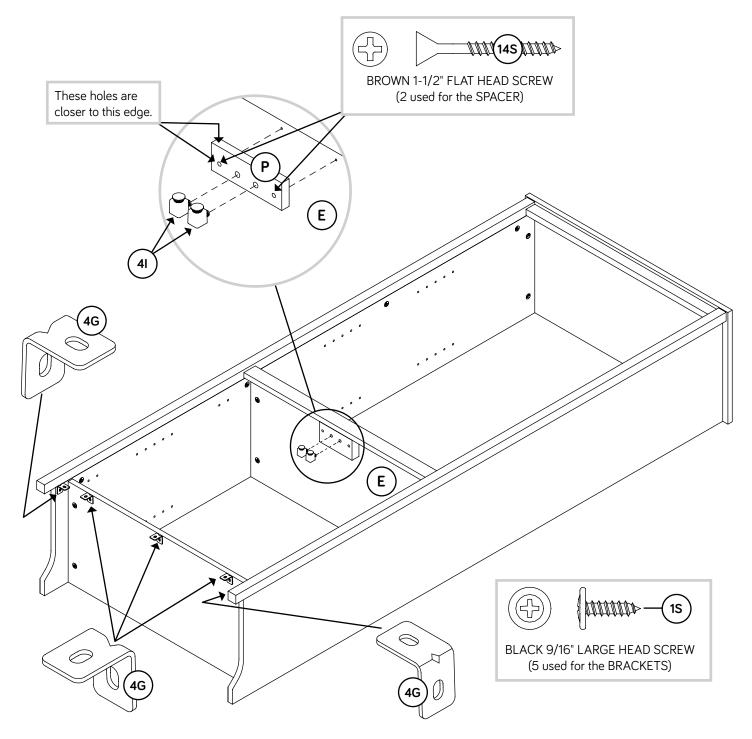


- Carefully turn your unit over onto its front edges.
- Fasten the BASE (L) to the ENDS (A and B) and BOTTOM (D). Use five BLACK 9/16" LARGE HEAD SCREWS (1S) through the METAL BRACKETS on the ENDS and BOTTOM and into the BASE.

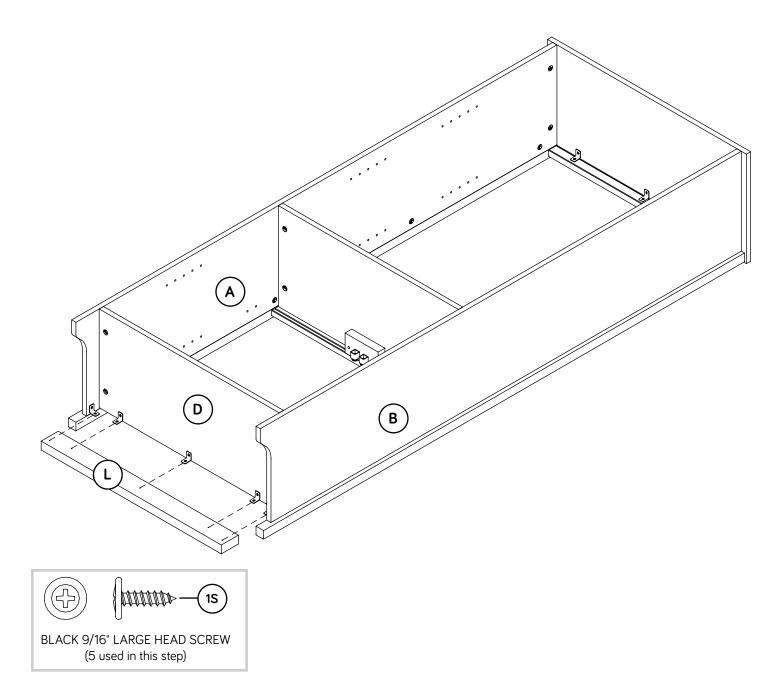


- Open the FURNITURE TIPPING RESTRAINT KIT (97), and fasten the SAFETY STRAP to the TOP (C2). Use the provided SHORT SCREW.
- NOTE: Position the SAFETY STRAP exactly as shown.
- Unfold the BACK (F) and lay it over your unit.
- Make equal margins along all four edges of the BACK (F). Push on opposite corners of your unit if needed to make it "square".
- Fasten the BACK (F) to your unit using the NAILS (1N).
- NOTE: Be sure to tap NAILS into the holes that line up over the SHELF (E).




Do <u>not</u> stand the unit upright without the BACK fastened. The unit may collapse.

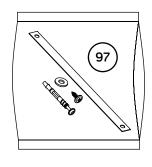


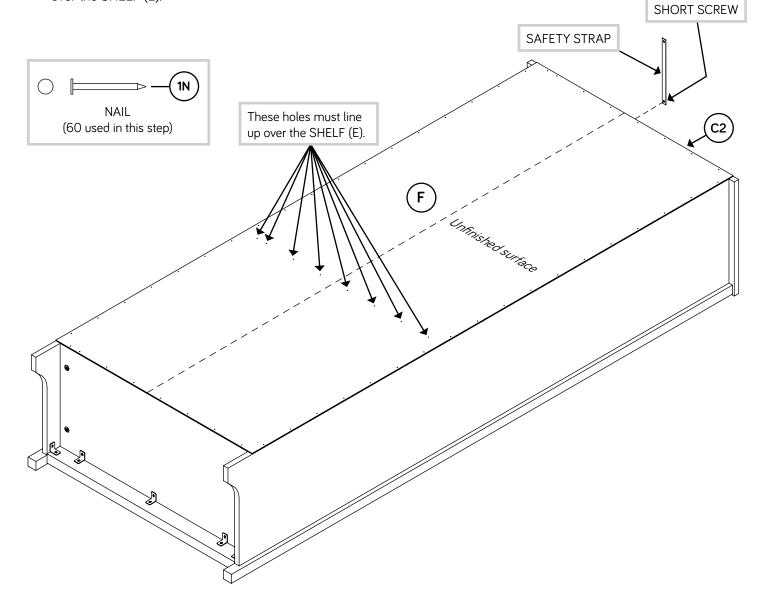


- ▼ IMPORTANT: The unit must be placed against a wall.
- Carefully stand your unit upright in its final location against a wall. We recommend using the SAFETY STRAP for added stability.
- NOTE: Do <u>not</u> turn the SAFETY DRYWALL ANCHOR into a wall stud. If you prefer to fasten the SAFETY STRAP to a wall stud, go to your local hardware store for proper hardware.
- **▼** INSTALLATION INSTRUCTIONS:
 - 1. Insert the SAFETY DRYWALL ANCHOR through the WASHER and the end of the SAFETY STRAP.
 - 2. Using a Phillips screwdriver or a hand drill, press the screw slightly onto the drywall.
 - 3. Apply pressure; turn the screw until a pilot hole is made and the nylon sheath slips through.
 - 4. Turn the screw until it is flush against the wall and you feel a firm resistance.
 - 5. Continue to turn until the screw starts spinning freely.
- NOTE: Before moving your unit to a different location, unscrew the SAFETY DRYWALL ANCHOR from your wall. The nylon sheath will remain behind your wall.

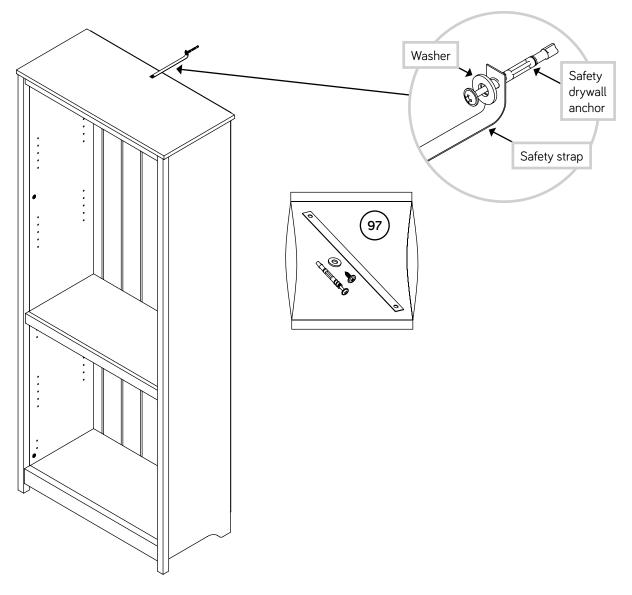


Fasten four HINGES (14H) to the DOORS (G). Use eight BLACK 1/2" FLAT HEAD SCREWS (11S).

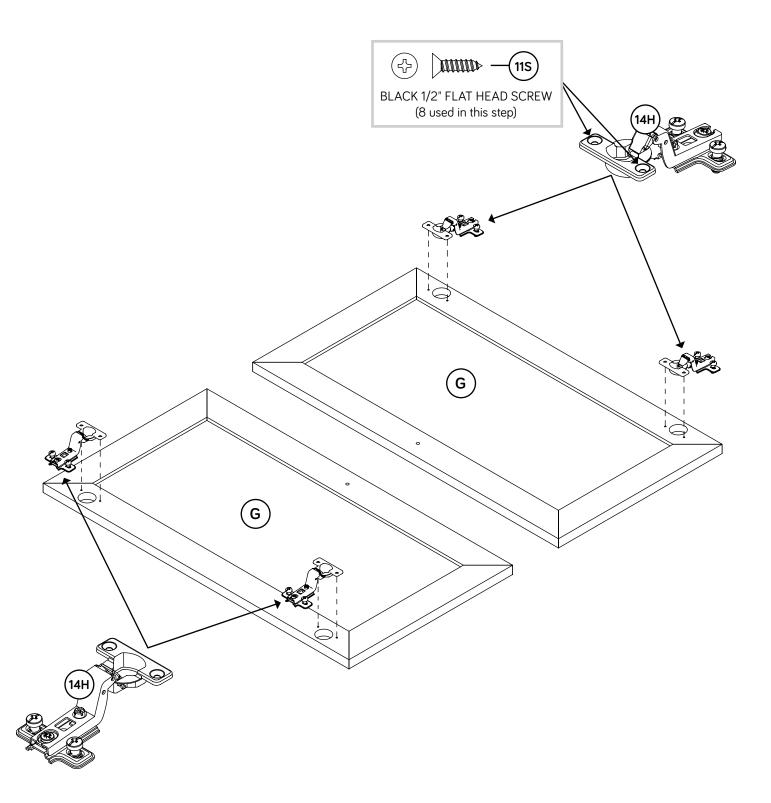


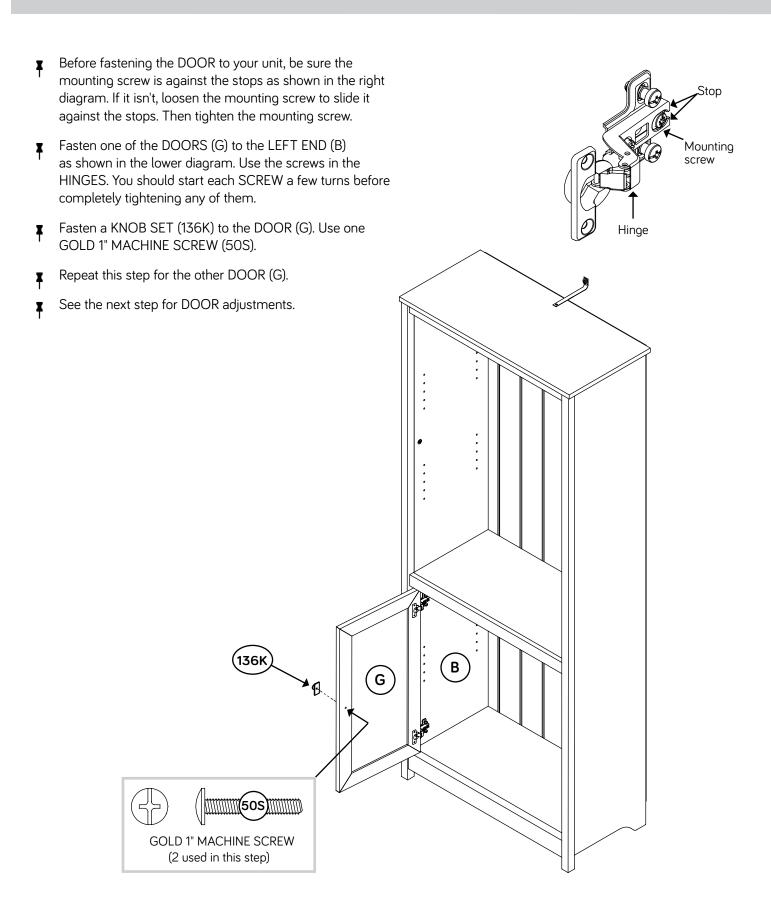


- Refer to the enlarged diagram to identify the parts on the HINGES.
- The DOORS may need some adjustments. Follow the text below to make needed adjustments.
- DOOR ADJUSTMENTS:
 To adjust the DOORS from side to side (horizontal), turn the adjusting screw in or out.

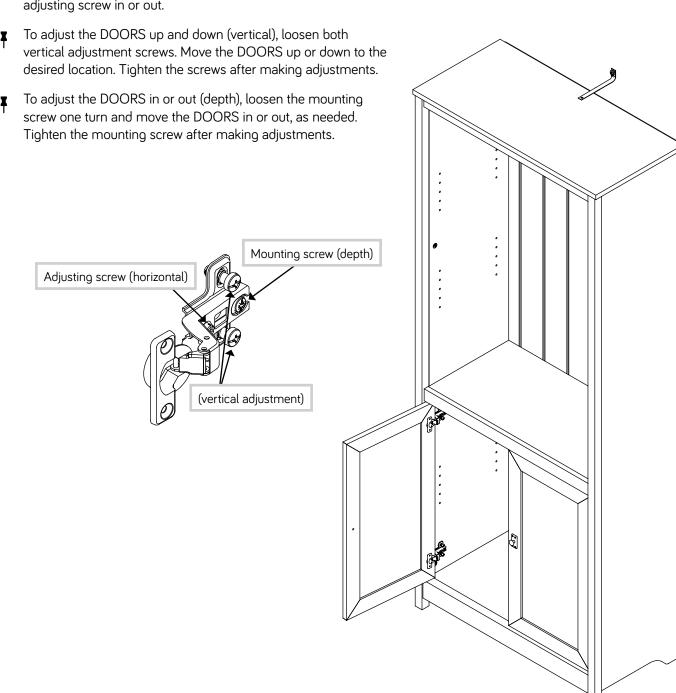

- Slide an ADJUSTABLE SHELF MOLDING* (O) onto the notched edge of an ADJUSTABLE SHELF (H).
- Repeat this step for the other ADJUSTABLE SHELF (H).
- *U.S. Patent No. 5,499,886

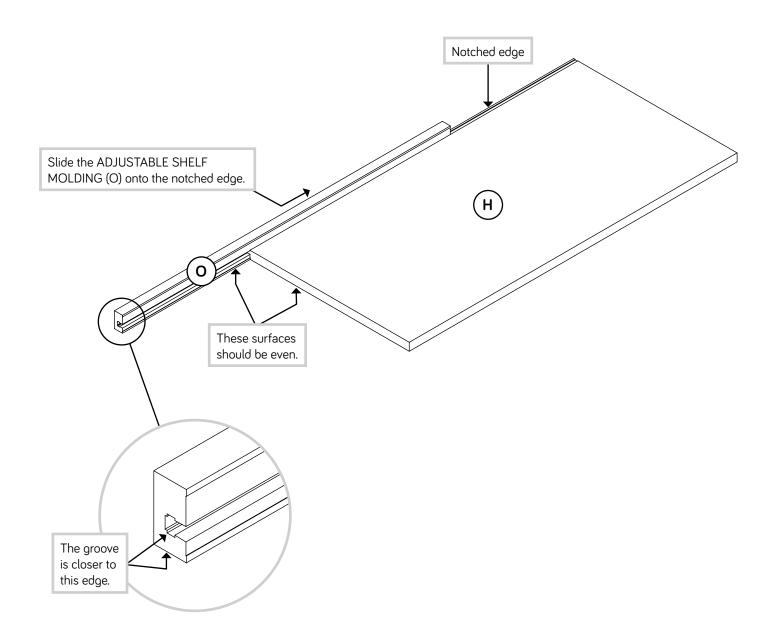

- Push the RUBBER SLEEVES (2R) over the METAL PINS (1R). Insert the METAL PINS into the hole locations of your choice in the ENDS (A and B). Set the ADJUSTABLE SHELVES (H and I) onto the METAL PINS.
- Using your hammer, gently tap a CAM COVER (12P) onto each visible HIDDEN CAM.
- NOTE: Please read the back pages of the instruction booklet for important safety information.
- This completes assembly. Clean with a damp cloth. Wipe dry.

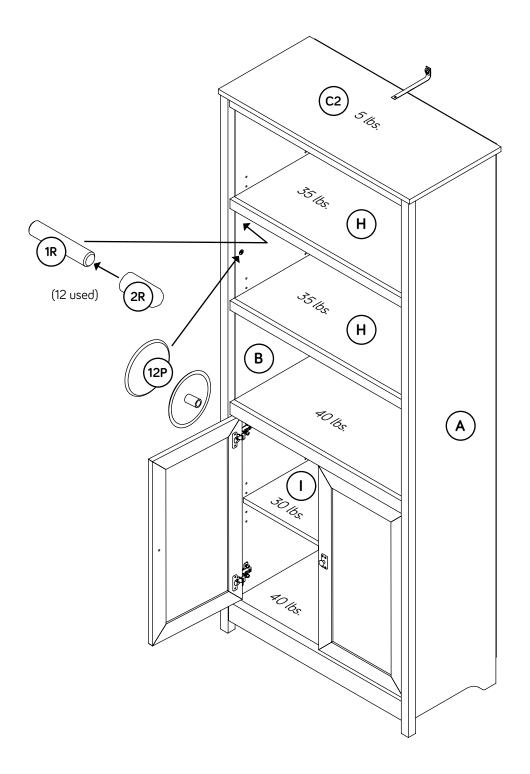

▲ WARNING

Please use your furniture correctly and safely. Improper use can cause safety hazards, or damage to your furniture or household items. Carefully read the following chart.

Look out for:	What can happen:	How to avoid the problem:
 Overloaded shelves. Improper loading can cause the product to be top-heavy. 	Risk of injury.Top-heavy furniture can tip over.Overloaded shelves can break.	 Never exceed the weight limits shown in the instructions. Work from bottom to top when loading shelves. Place the heavier items on the lower shelves.
Improperly moving furniture that is not designed and equipped with casters.	 Furniture can tip over or break if improperly moved. Physical injury. Furniture can be very heavy. 	 Unload shelves from top to bottom before moving the furniture. Do not push furniture, especially on a carpeted floor. Have a friend help you lift the item and set it in place. This unit must be positioned against a wall.
Children climbing on the shelves can cause the product to tip.	Risk of injury or death.	 Do not allow children to climb on the shelves. Avoid placing items like toys or candy on upper shelves. Use the supplied tipping restraint kit for added stability.
Placing TVs on furniture items that are not designed to support a television is hazardous.	Risk of injury or death. TVs can be very heavy. Plus the weight and location of the picture tube tends to make TVs unbalanced and prone to tipping forward.	This product is not designed to support a television.