
www.teknikoffice.co.uk

Teknik

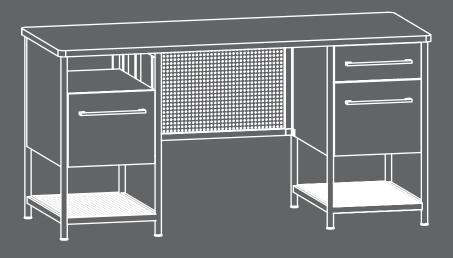

Business or **pleasure**. Works both ways.

Boulevard Cafe Desk

Model 5420701


NOTE: THIS INSTRUCTION BOOKLET CONTAINS <u>IMPORTANT</u> SAFETY INFORMATION.

PLEASE READ AND KEEP FOR FUTURE REFERENCE.

Table of Contents

Assembly Tools Required

Part Identification	3
Hardware Identification	4
Assembly Steps	5-21
Français	22-24
Español	25-27
Safety	28-30
Warranty	31

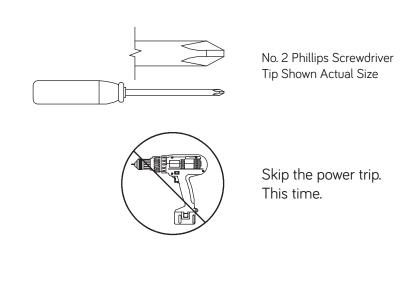

Part Identification




While not all parts are labeled, some of the parts will have a label or an inked letter on the edge to help distinguish similar parts from each other. Use this part identification to help identify similar parts.

Α	RIGHT END (1)
В	LEFT END (1)
С	RIGHT UPRIGHT (1)
D	LEFT UPRIGHT (1)
Е	TOP (1)
F	BOTTOM (2)
G	BACK (2)


Н	SHELF (1)
I	MODESTY PANEL (1)
J	DRAWER FRONT (1)
K	LARGE DRAWER FRONT (2)
L	RIGHT DRAWER SIDE (1)
М	LEFT DRAWER SIDE (1)
N	DRAWER BACK (1)

0	DRAWER BOTTOM (1)
Р	LARGE RIGHT DRAWER SIDE (2)
Q	LARGE LEFT DRAWER SIDE (2)
R	LARGE DRAWER BACK (2)
S	LARGE DRAWER BOTTOM (2)

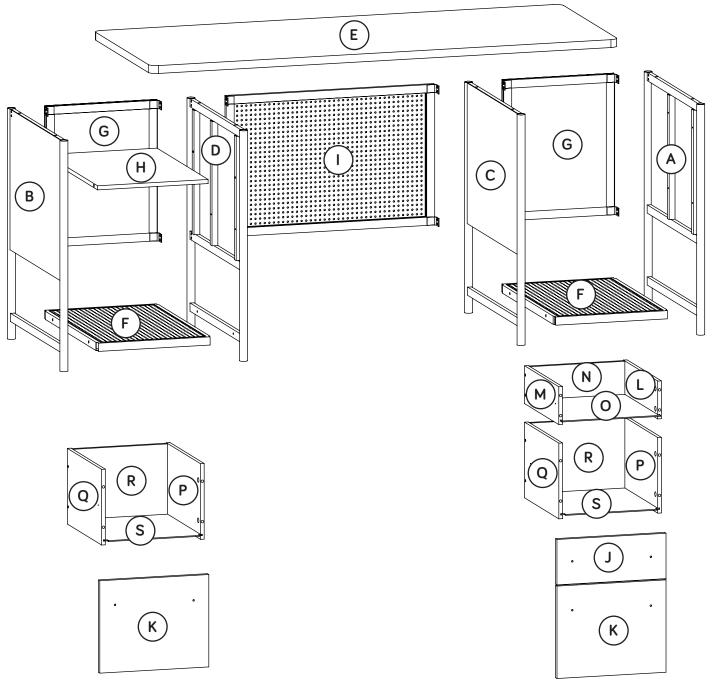

Hardware Identification

Screws are shown actual size. You may receive extra hardware with your unit. (EXTENSION SET SHOWN SEPARATED) CAM **HIDDEN EXTENSION RAIL - 6 EXTENSION SLIDE - 6** CAM - 12 SCREW - 12 300 FILE ADJUSTABLE GLIDE - 8 PULL - 3 GLIDE - 4 HANGER - 4 APPLIQUE 10 BUMPER CARD - 1 L- WRENCH - 1 CARD - 1 BLACK 1-5/8" WAFER HEAD SCREW - 12 BLACK 1-1/2" FLAT HEAD SCREW - 12 14) BLACK 3/4" HEX HEAD SCREW - 8 BLACK 1/2" WAFER HEAD SCREW - 4 BLACK 1/2" MACHINE SCREW - 12 BLACK 1/2" PAN HEAD SCREW - 18

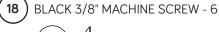












- Assemble your unit on a carpeted floor or on the empty carton to avoid scratching your unit or the floor.
- Fasten a BACK (G) to the RIGHT END (A) and RIGHT UPRIGHT (C). Use eight BLACK 5/16" WAFER HEAD SCREWS (19).
- NOTE: You should start each SCREW a few turns before completely tightening any of them.

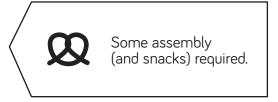


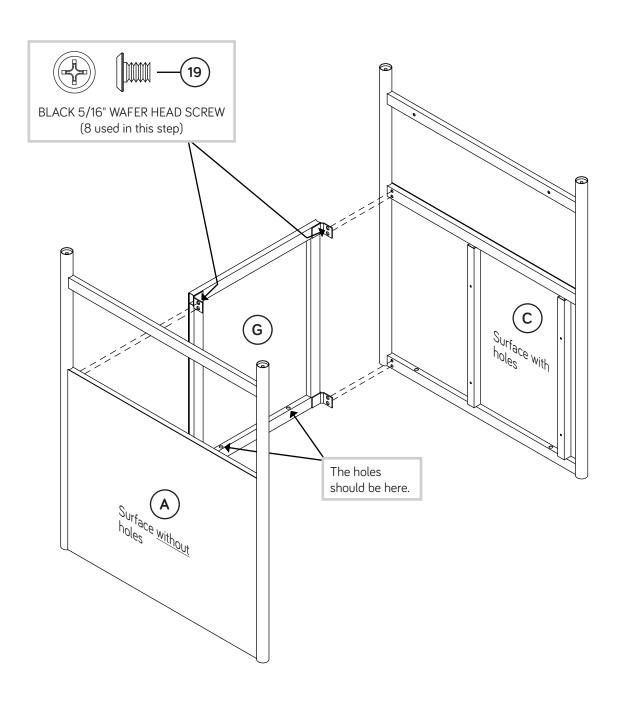


- Fasten the other BACK (G) to the LEFT END (B) and LEFT UPRIGHT (D). Use eight BLACK 5/16" WAFER HEAD SCREWS (19).
- NOTE: You should start each SCREW a few turns before completely tightening any of them.

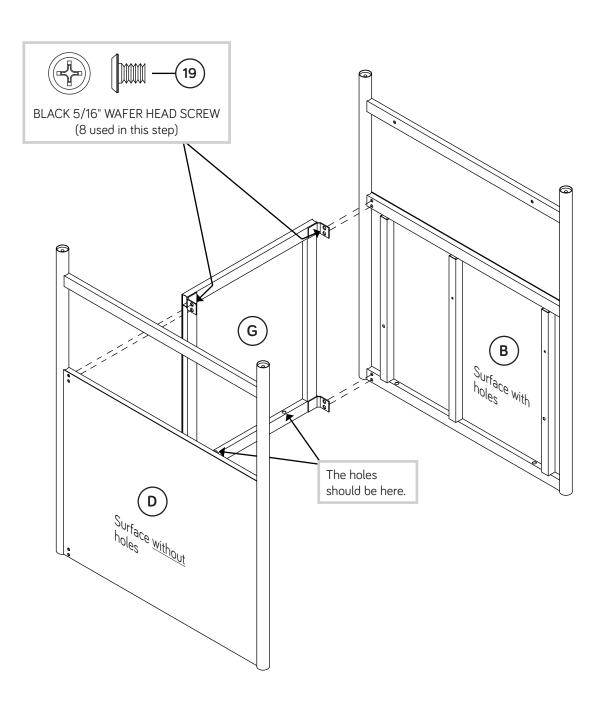


- Fasten the MODESTY PANEL (I) to the UPRIGHTS (C and D). Use eight BLACK 5/16" WAFER HEAD SCREWS (19).
- NOTE: You should start each SCREW a few turns before completely tightening any of them.

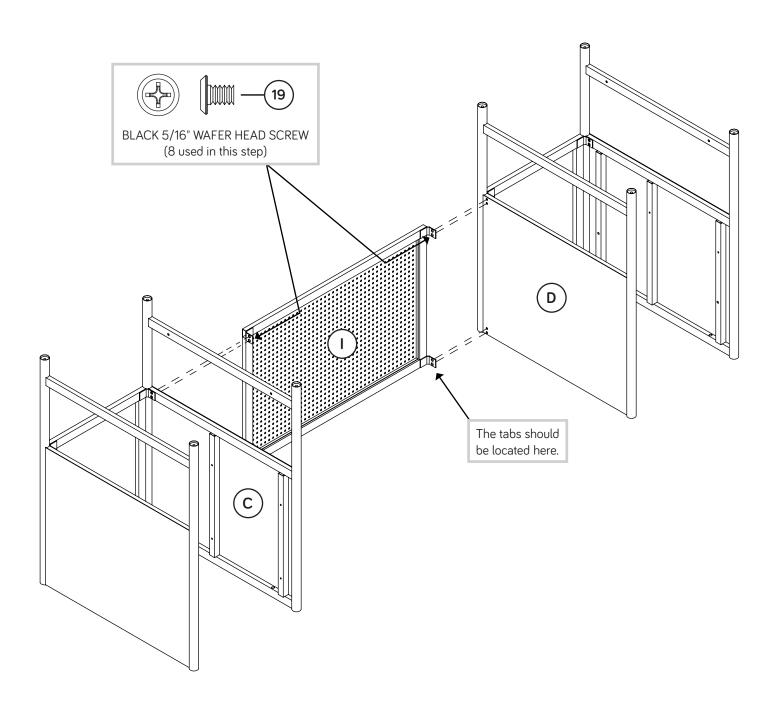


- NOTE: You may need someone's help in this step.
- Fasten the ENDS (A and B), UPRIGHTS (C and D), and BACKS (G) to the TOP (E). Use twelve BLACK 1-5/8" WAFER HEAD SCREWS (12).
- NOTE: You should start each SCREW a few turns before completely tightening any of them.

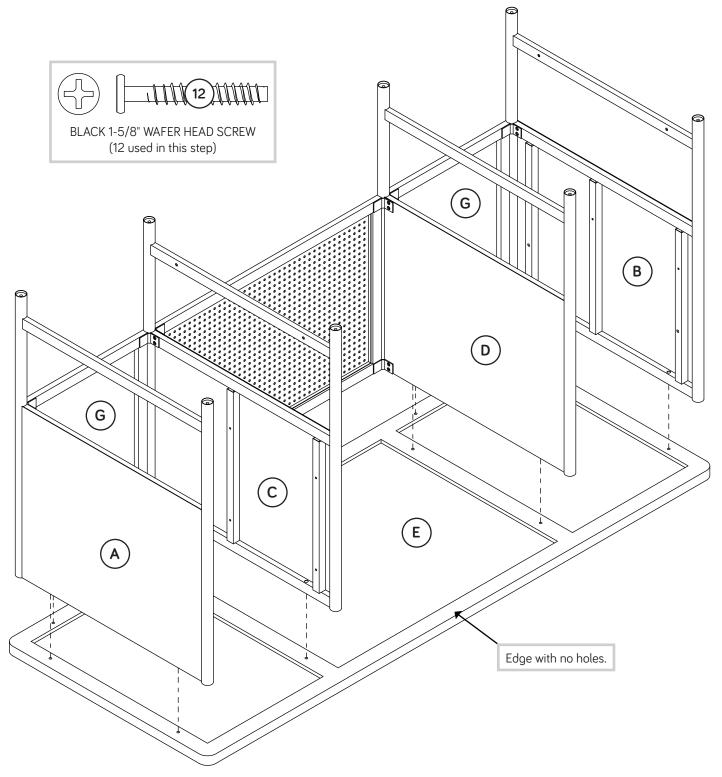

- Fasten the SHELF (H) to the LEFT END (B) and LEFT UPRIGHT (D). Use four BLACK 1/2" WAFER HEAD SCREWS (15).
- NOTE: You should start each SCREW a few turns before completely tightening any of them.

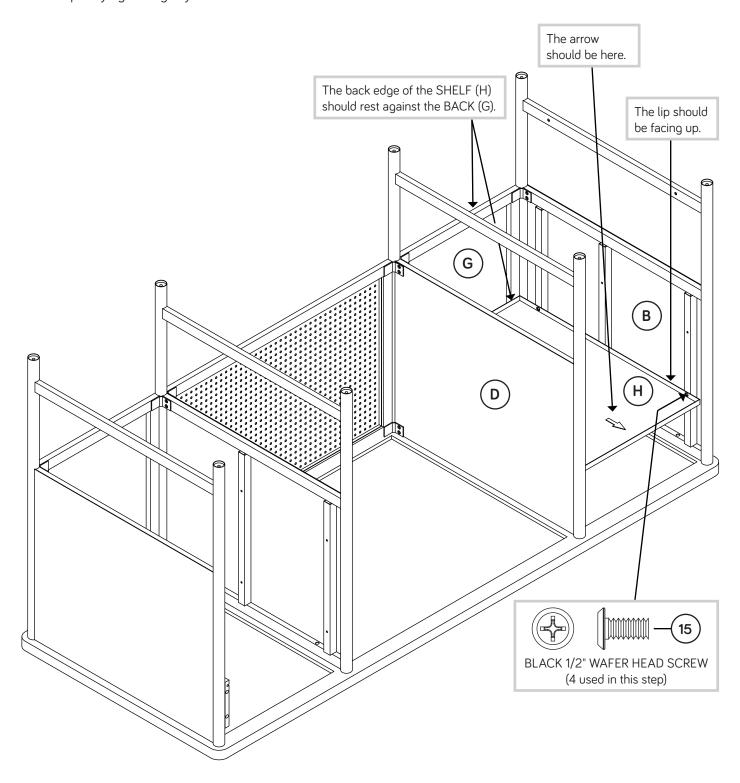


- Fasten the BOTTOMS (F) to the ENDS (A and B) and UPRIGHTS (C and D). Use eight BLACK 3/4" HEX HEAD SCREWS (14) and tighten with the L-WRENCH (11).
- NOTE: You should start each SCREW a few turns before completely tightening any of them.

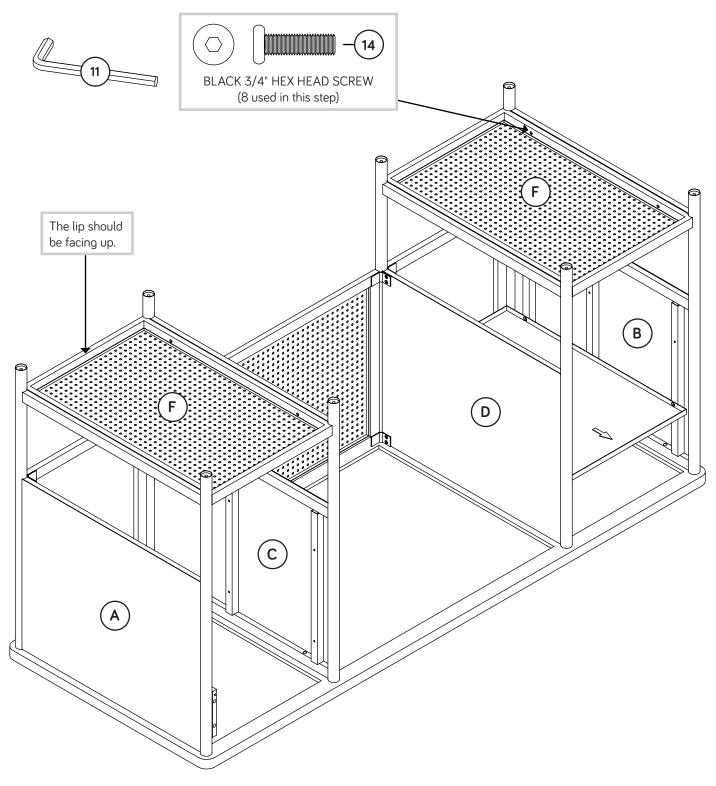

Separate the EXTENSION SLIDES (2) from the EXTENSION RAILS (1) as shown in the upper diagram below. Be prepared, the parts are greasy.


- Fasten six EXTENSION RAILS (1) to the ENDS (A and B) and UPRIGHTS (C and D). Use twelve BLACK 1/2" MACHINE SCREWS (16).
- NOTE: For each EXTENSION RAIL, turn a SCREW into the hole shown in the enlarged diagram. Then, slide the inner cartridge of the EXTENSION RAIL in to find the other hole that lines up with the hole in the ENDS and UPRIGHTS. Turn a SCREW into this hole.
- NOTE: The EXTENSION SLIDES will be used later for the DRAWERS.

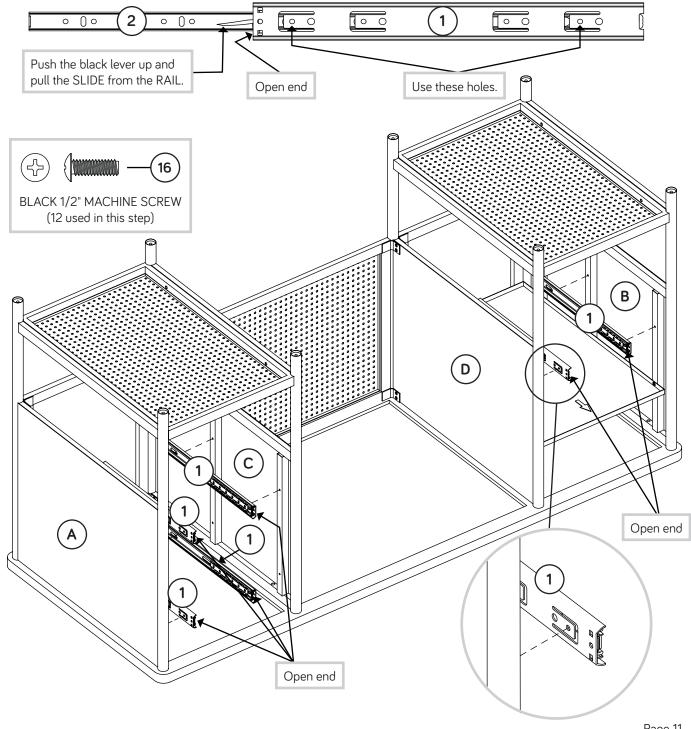


- Turn eight ADJUSTABLE GLIDES (8) into the bottom of the ENDS (A and B) and UPRIGHTS (C and D).
- NOTE: Turn the ADJUSTABLE GLIDES completely in. Final adjustments will be made after the unit is standing upright.



Now might be a good time to refresh your drink.

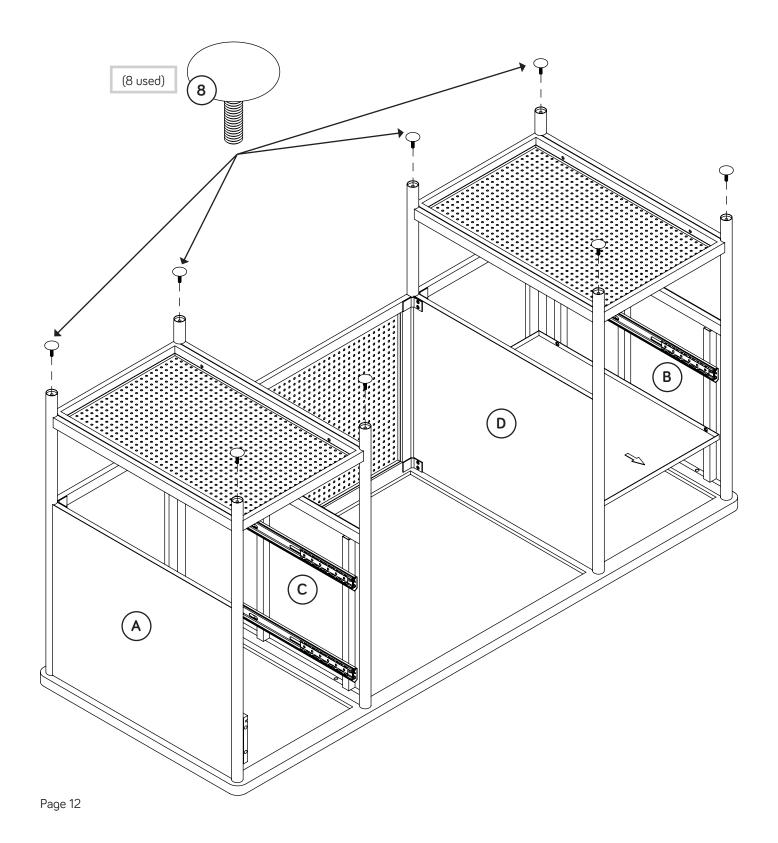


Push twelve HIDDEN CAMS (3) into the DRAWER SIDES (L and M) and LARGE DRAWER SIDES (P and Q).

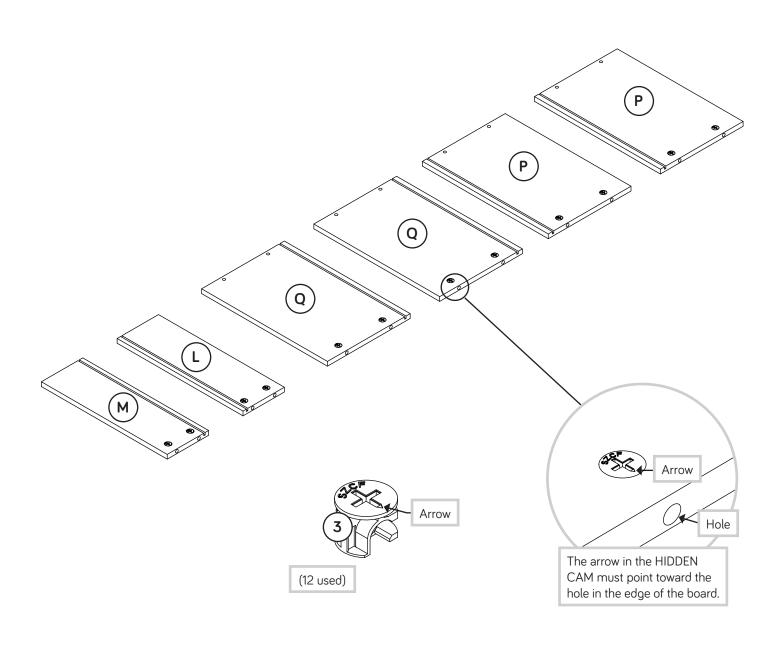

Turn twelve CAM SCREWS (4) into the exact holes shown in the DRAWER FRONTS (J and K). (12 used) J


1

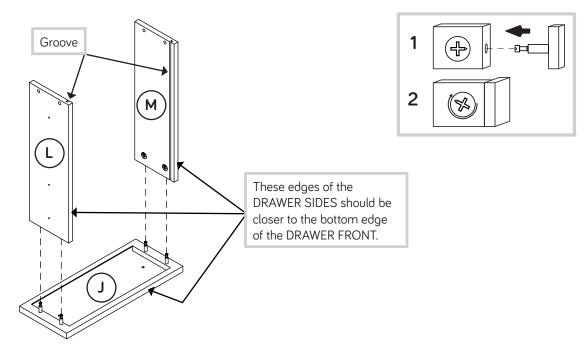


Fasten the DRAWER SIDES (L and M) to the DRAWER FRONT (J). Tighten four HIDDEN CAMS.

2

With the palm of your hand, tap the DRAWER BOTTOM down into the grooves.

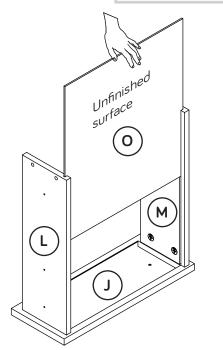


Slide the DRAWER BOTTOM (O) into the grooves in the DRAWER SIDES (L and M).

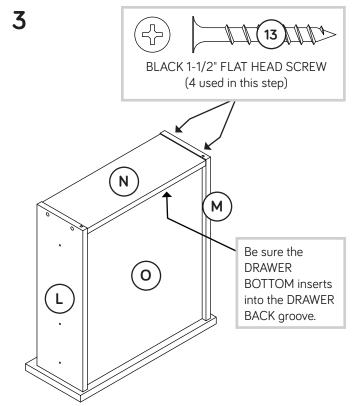

- Fasten the DRAWER BACK (N) to the DRAWER SIDES (L and M). Use four BLACK 1-1/2" FLAT HEAD SCREWS (13).
- NOTE: Be sure the DRAWER BOTTOM (O) inserts into the groove of the DRAWER BACK (N).


Fasten two EXTENSION SLIDES (2) to the DRAWER SIDES (L and M). Use six BLACK 1/2" PAN HEAD SCREWS (17).

- Peel four STICKERS from the APPLIQUE CARD (9) and stick one onto each HIDDEN CAM in the drawer.
- Fasten the PULL (7) to the DRAWER FRONT (J). Use two BLACK 3/8" MACHINE SCREWS (18).

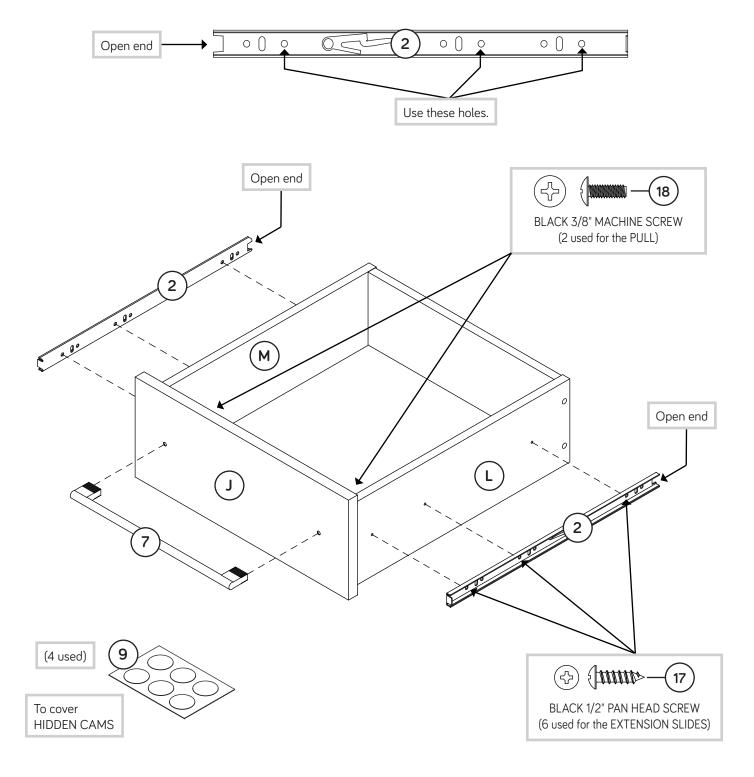


These edges of the LARGE DRAWER SIDES should be closer to the bottom edge of the LARGE DRAWER FRONT.

Fasten the LARGE DRAWER SIDES (P and Q) to the LARGE DRAWER FRONT (K). Tighten four HIDDEN CAMS.

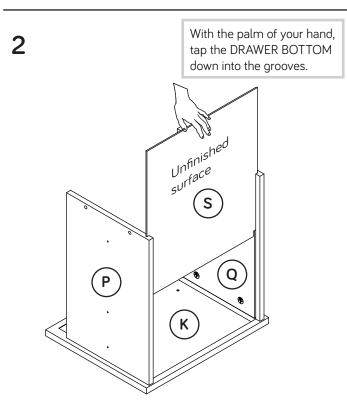


Slide the LARGE DRAWER BOTTOM (S) into the grooves in the LARGE DRAWER SIDES (P and Q).

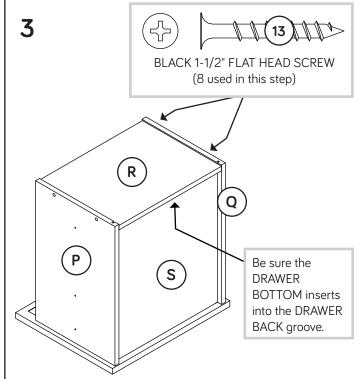


- Fasten the LARGE DRAWER BACK (R) to the LARGE DRAWER SIDES (P and Q). Use four BLACK 1-1/2" FLAT HEAD SCREWS (13).
- NOTE: Be sure the LARGE DRAWER BOTTOM (S) inserts into the groove of the LARGE DRAWER BACK (R).
- Repeat this step for the other large drawer.


- Fasten two EXTENSION SLIDES (2) to the LARGE DRAWER SIDES (P and Q). Use six BLACK 1/2" PAN HEAD SCREWS (17).
- Peel four STICKERS from the APPLIQUE CARD (9) and stick one onto each HIDDEN CAM in the large drawer.
- Fasten the PULL (7) to the LARGE DRAWER FRONT (K). Use two BLACK 3/8" MACHINE SCREWS (18).
- Repeat this step for the other large drawer.

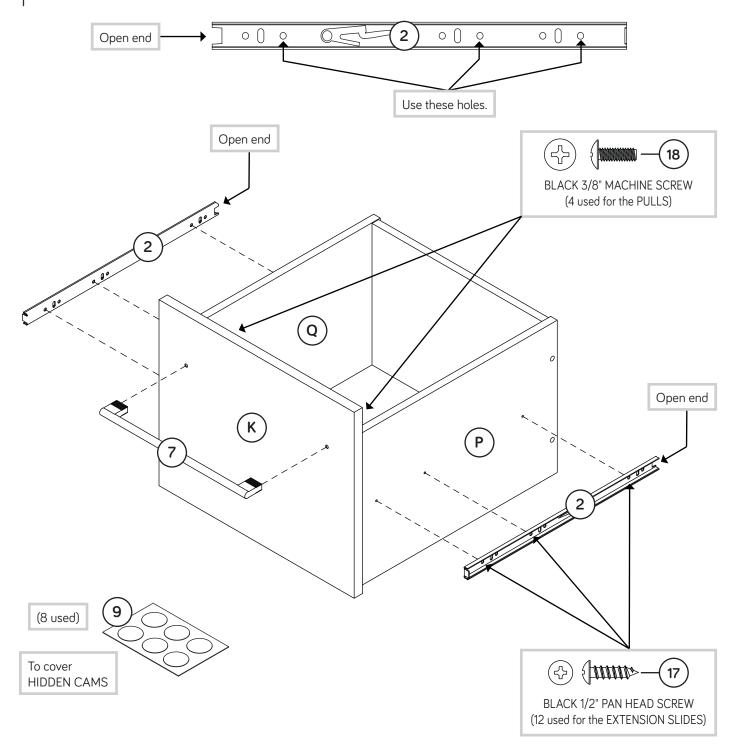


- Push two FILE GLIDES (5) onto the LARGE DRAWER SIDES (P and Q).
- Place two FILE HANGERS (6) onto the FILE GLIDES (5) on the LARGE DRAWER SIDES (P and Q).
- Repeat this step for the other large drawer.

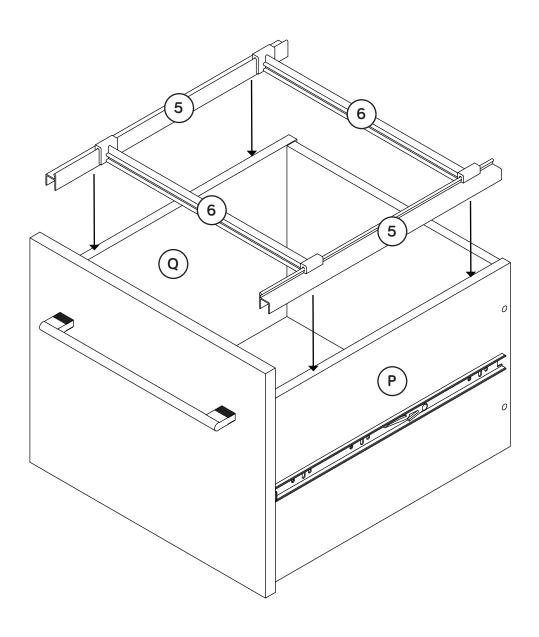


- Carefully stand your unit upright.
- Peel the BUMPERS from the BUMPER CARD (10) and stick them onto the front edge of the SHELF (H).

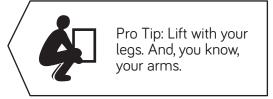

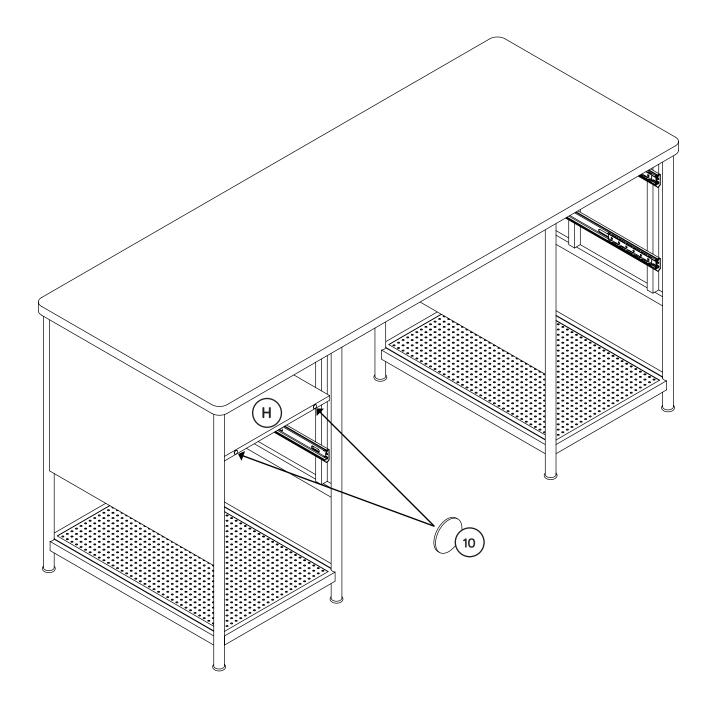

- Position your unit in its final location.
- NOTE: To raise a corner of the unit, turn the ADJUSTABLE GLIDE counter-clockwise. To lower a corner, turn the ADJUSTABLE GLIDE clockwise.
- To insert the drawers into your unit, line up the EXTENSION SLIDES on the drawers with the EXTENSION RAILS on the unit and push the drawers into the unit until the drawers are fully inserted. The drawers will push in hard until they are all the way in, then they will slide in and out easier.
- NOTE: Please read the back pages of the instruction booklet for important safety information.
- This completes assembly. Clean with your favorite furniture polish or a damp cloth. Wipe dry.

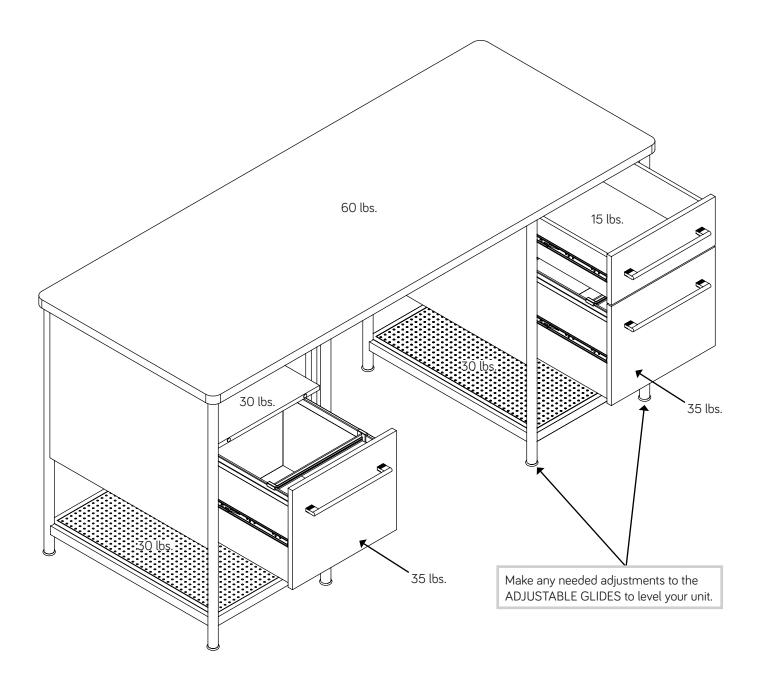

WARNINGPlease use your furniture correctly and safely. Improper use can cause safety hazards, or damage to your furniture or household items. *Carefully read the following chart.* Look out for: What can happen: How to avoid the problem: • Overloaded shelves or drawers. • Risk of injury. • Never exceed the weight limits shown in • Improper loading can cause the product • Top-heavy furniture can tip over. the instructions. • Overloaded shelves and drawers can to be top-heavy. • Work from bottom to top when loading shelves and drawers. Place the heavier items on the lower shelves or in lower drawers. • Improperly moving furniture that is not • Furniture can tip over or break if • Unload shelves and drawers from top to designed and equipped with casters. improperly moved. bottom before moving the unit. • Physical injury. Furniture can be very • Do not push furniture, especially on a heavy. carpeted floor. Have a friend help you lift • Breakage of tops - particularly with the item and set it in place. double pedestal furniture (drawers at both • Provide support to the center section of the top when lifting the furniture. • Placing TVs on furniture items that are • Risk of injury or death. TVs can be very • This product is not designed to support a not designed to support a television is heavy. Plus the weight and location of the television. hazardous. picture tube tends to make TVs unbalanced and prone to tipping forward.