


Otto - Dining Tables & Benches

TAOT1200 - TAOT1800 - LB1050 - LB1650




ASSEMBLY INSTRUCTIONS

Otto
Dining Tables & Benches

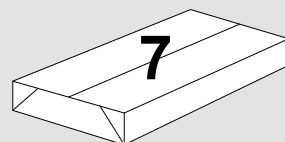

Pack 1:
1x Top


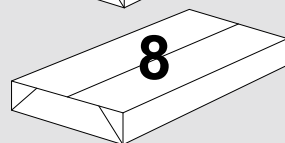


Pack 2:
1x Leg Pack & Fitting
Kit





Pack 3:
1x Rail Pack


TOOLS REQUIRED
FOR ASSEMBLY

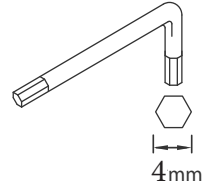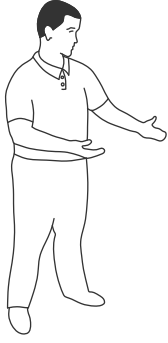


DONT STRUGGLE
2 MAN LIFT

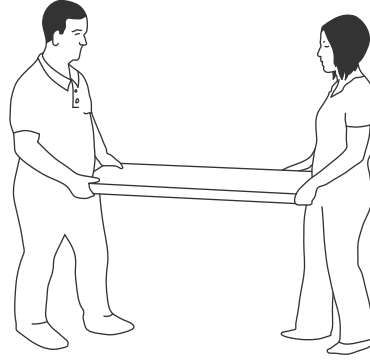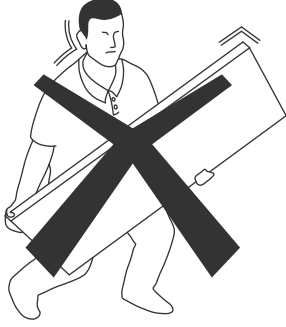


ALWAYS HANDLE
ITEMS WITH CARE

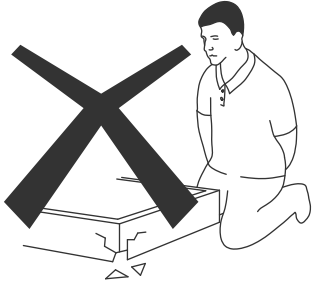

IF UNSURE CALL
FOR ASSISTANCE

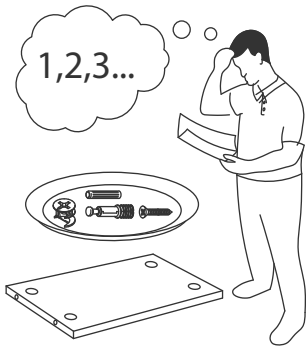


KEEP FITTINGS AWAY
FROM CHILDREN

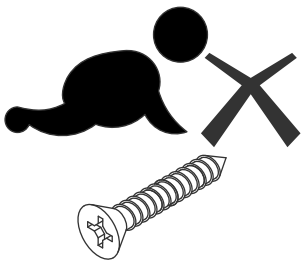





Please check that you have all the panels

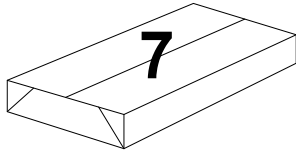



PACK 1:
1 x Top Panel

1200 x 700mm = TAOT1200
1800 x 700mm = TAOT1200
1050 x 350mm = LB1050
1650 x 350mm = LB1650

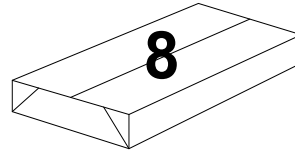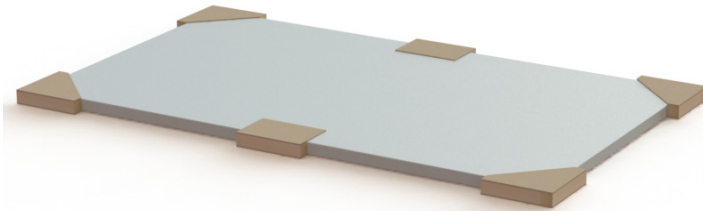


PACK 2:
1 x Leg Pack

350 x 415mm = OT-BLD
700 x 700mm = OT-ELD

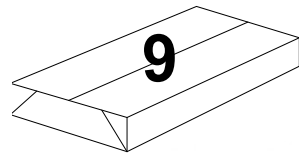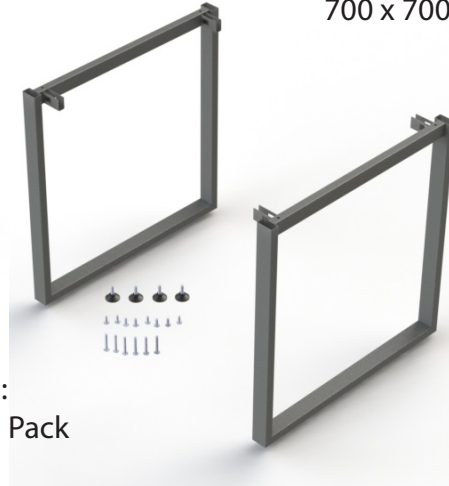

PACK 3:
1 x Rail Pack

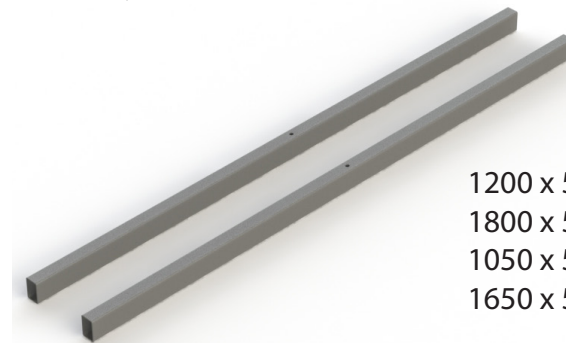

1200 x 50mm = OT-CR12
1800 x 50mm = OT-CR18
1050 x 50mm = OT-CR10
1650 x 50mm = OT-CR16



Please check that you have all the fittings

FITTINGS SUPPLIED



Connector Bolt - M6

Size 50mm PCS 6



Connector Bolt - M6

Size 20mm PCS 8



Screw-in Foot - M8


Size 48 Dia. x 10mm PCS 4

OTTO DINING TABLE & BENCH ASSEMBLY

1

Step 1


Unpack your new Otto dining table / bench seating unit and please recycle all packaging.

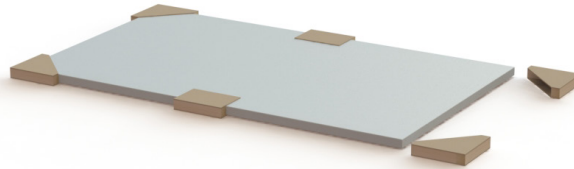

2

Step 2



Screw in the M8 adjustable foot into the leg frames as shown and turn clockwise to tighten.

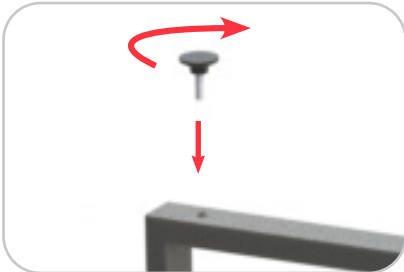

3

Step 3



Slide the cross rails into the spigots on the end leg and attach the M6 x 20mm bolt as shown.

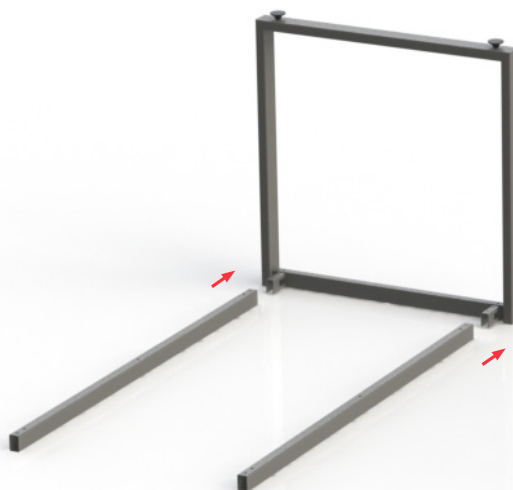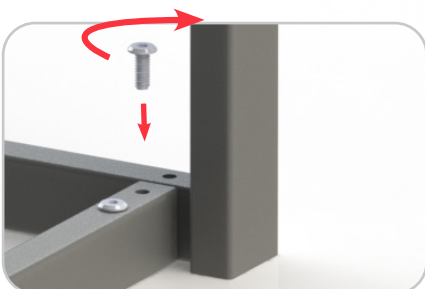

4

Step 4


Repeat by attaching the remaining end leg to the cross rails and attach the M6 x 20mm bolt as shown.

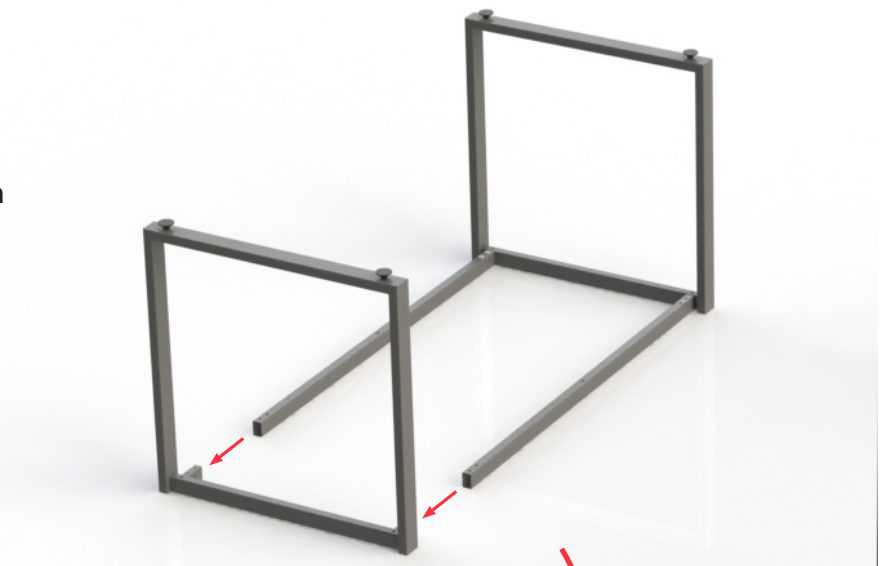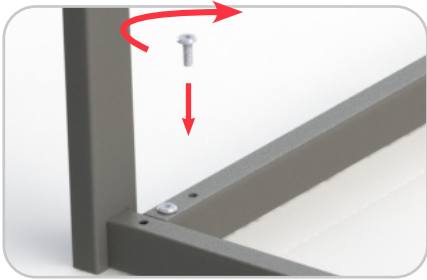

5

Step 5

Place the top panel face down and align the holes in the frame with the inserts in the top panel.

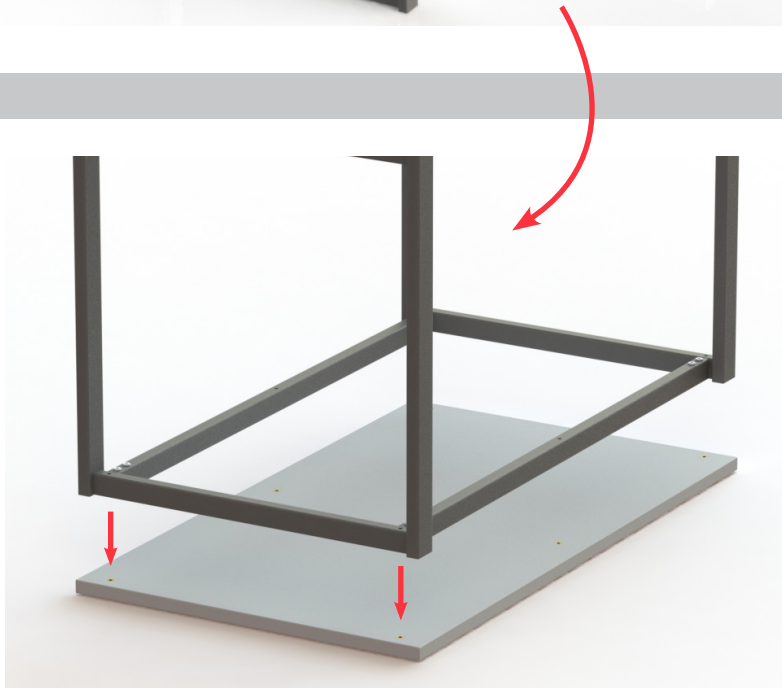

6

Step 6

Attach the M6 x 50mm bolts as shown to secure the frame to the top.

