



Priva - Screens

PRV-SQ01 - PRV-SQ02

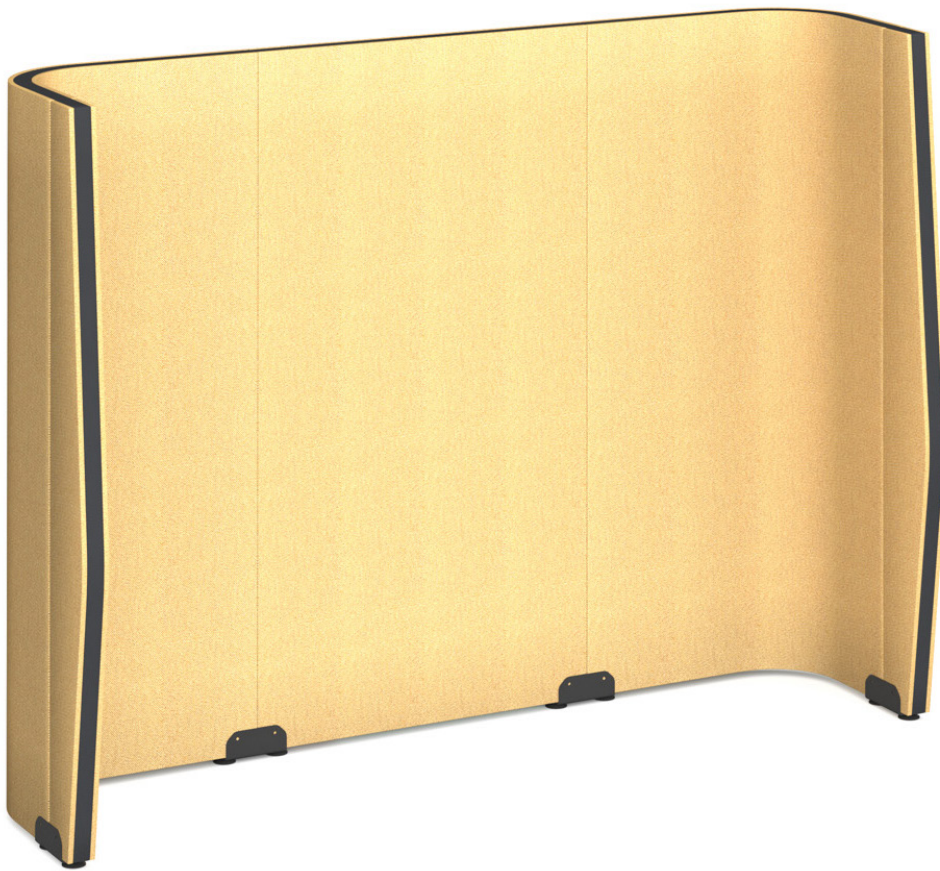



ASSEMBLY INSTRUCTIONS

Priva
Screens


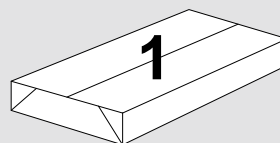


Pack 1:
1x Screen Panels



TOOLS REQUIRED
FOR ASSEMBLY

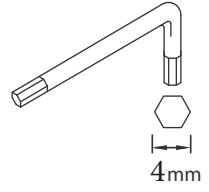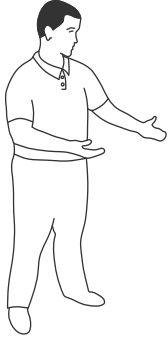


DONT STRUGGLE
2 MAN LIFT

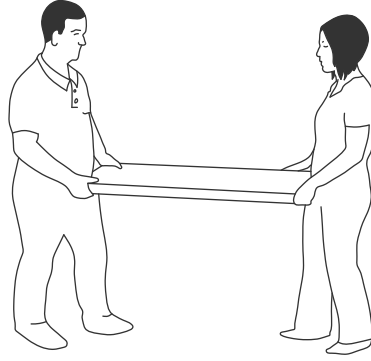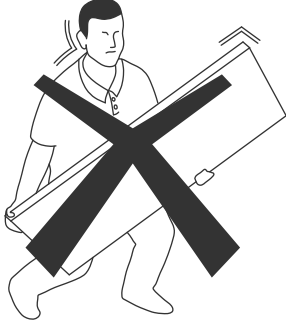


ALWAYS HANDLE
ITEMS WITH CARE

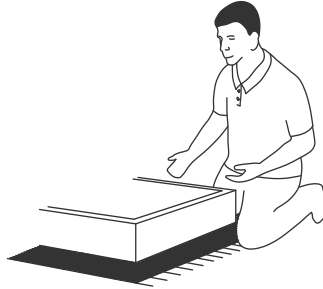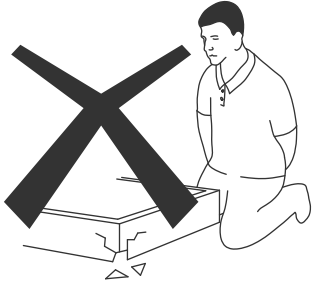

IF UNSURE CALL
FOR ASSISTANCE

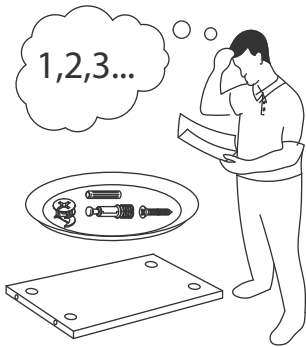


KEEP FITTINGS AWAY
FROM CHILDREN

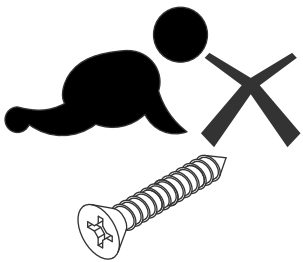



Please check that you have all the parts

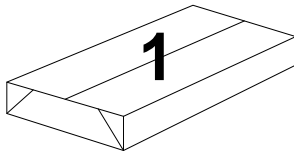

PACK 1:
1 x Screen Panels



Please check that you have all the fittings

FITTINGS SUPPLIED



Connector Bolt - M6
Top fixing kit

Size **PCS**
50mm **4**
&
20mm **4**



C/SK Bolt - M6
Panel fixing kit

Size **PCS**
30mm **8**
(Per screen panel)



Top Fixing Bracket

Size **PCS**
120 x 120mm **2**




Panel Fixing Bracket

Size **PCS**
120 x 30mm **1**
(Per screen panel)



Panel Fixing Clamp

Size **PCS**
120 x 60mm **1**
(Per screen panel)

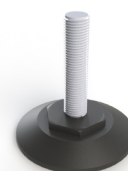

Adjustable Foot

Size **PCS**
40dia. x 30mm **2**
(Per screen panel)

PRIVA WORKSTATION POD ASSEMBLY

1

Step 1

Unpack your new Priva screen panels and please recycle all packaging.



2

Step 2

Align the top and bottom fixing brackets as shown using the provided M6 bolts and re-fit the infill strip.

