

Priva - Workstation Pods


PRV-WS01R - PRV-WS02R - PRV-WS03R

PRV-WS01A - PRV-WS02A - PRV-WS03A




ASSEMBLY INSTRUCTIONS

Priva
Workstation Pods


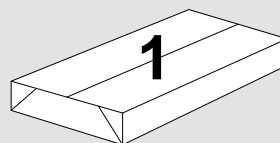


Pack 1:
1x Screen Panels


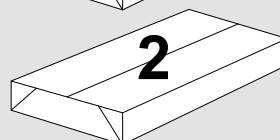


Pack 2:
1x Top Pack



TOOLS REQUIRED
FOR ASSEMBLY

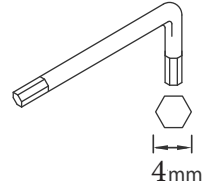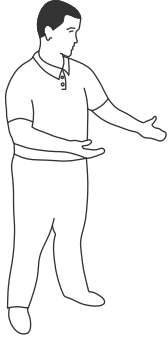


DONT STRUGGLE
2 MAN LIFT

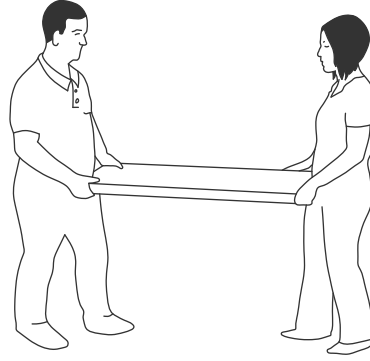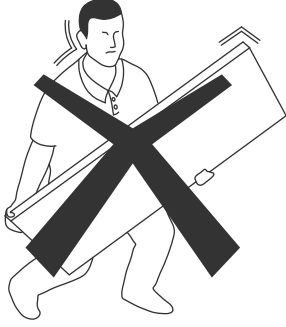


ALWAYS HANDLE
ITEMS WITH CARE

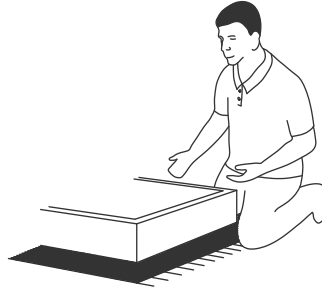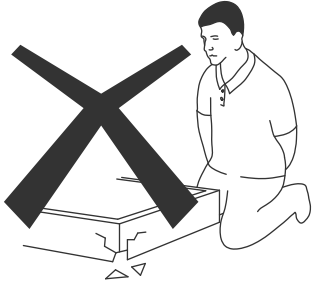

IF UNSURE CALL
FOR ASSISTANCE

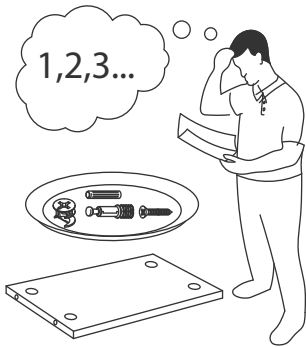


KEEP FITTINGS AWAY
FROM CHILDREN

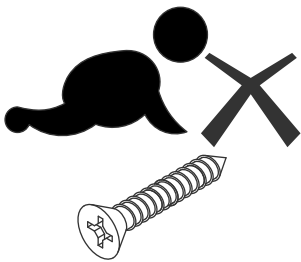





Please check that you have all the parts

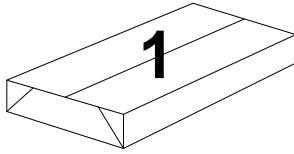

PACK 1:
1 x Screen Panels

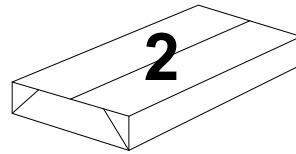

PACK 2:
1 x Top Pack

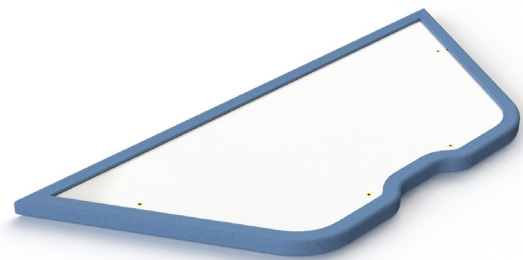

Please check that you have all the fittings

FITTINGS SUPPLIED



Connector Bolt - M6
Top fixing kit

Size **PCS**
50mm **4**
&
20mm **4**



C/SK Bolt - M6
Panel fixing kit

Size **PCS**
30mm **8**
(Per screen panel)



Top Fixing Bracket

Size **PCS**
120 x 120mm **2**




Panel Fixing Bracket

Size **PCS**
120 x 30mm **1**
(Per screen panel)



Panel Fixing Clamp

Size **PCS**
120 x 60mm **1**
(Per screen panel)

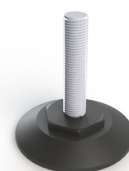

Adjustable Foot

Size **PCS**
40dia. x 30mm **2**
(Per screen panel)

PRIVA WORKSTATION POD ASSEMBLY

1

Step 1


Unpack your new Priva booth workstation pod and please recycle all packaging.



2

Step 2



Align the top and bottom fixing brackets as shown using the provided M6 bolts and re-fit the infill strip.

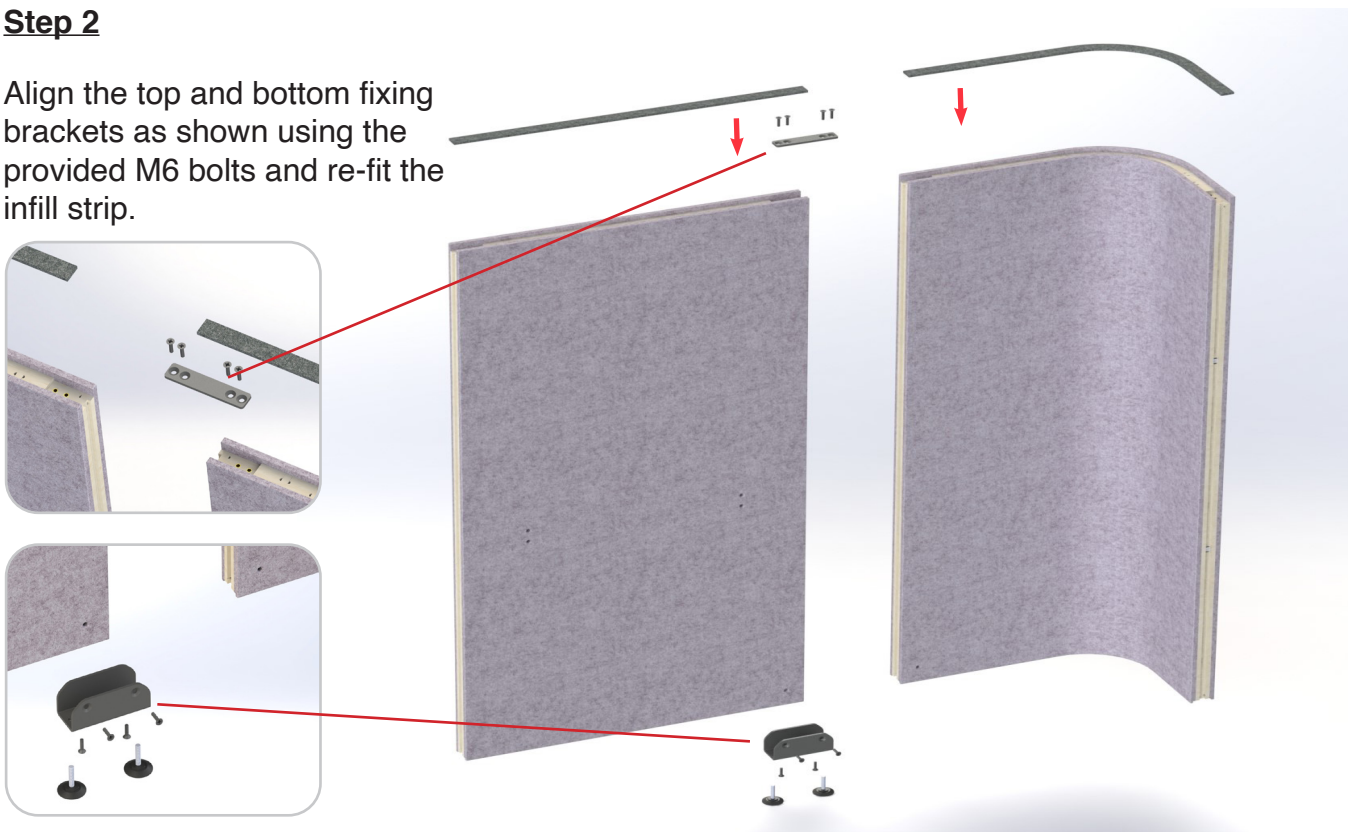

3

Step 3

Attach the top fixing bracket using the M6 x 50mm bolts as shown.

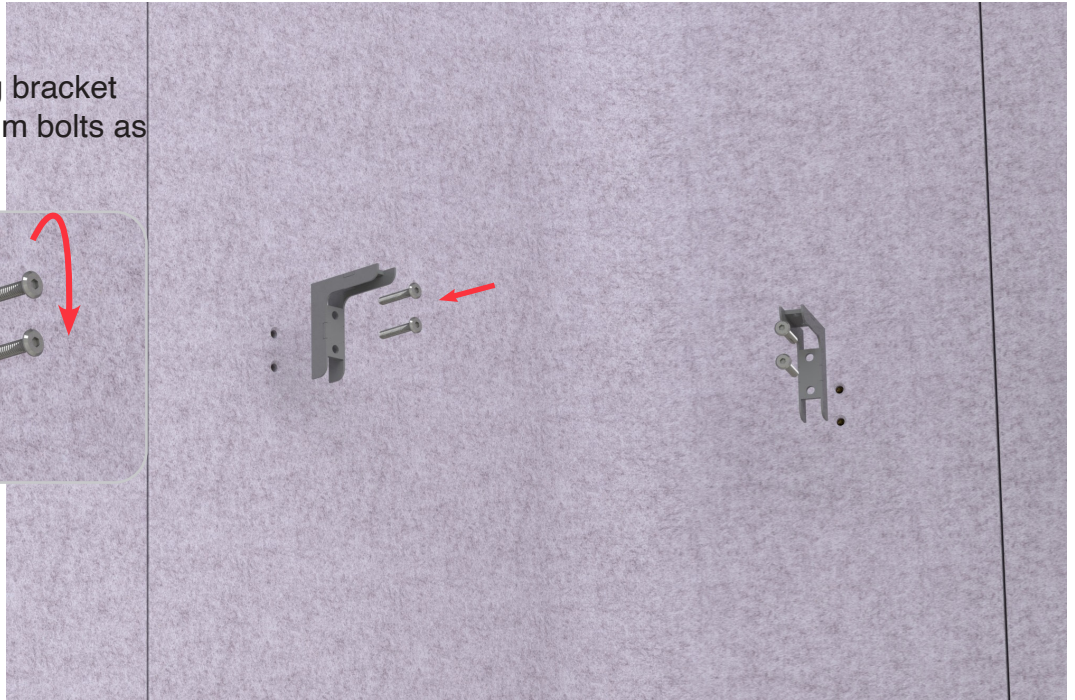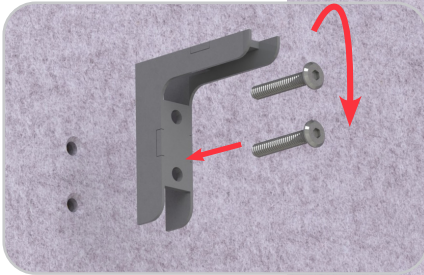

4

Step 4

Attach the M6 x 20mm bolts as shown to secure the frame to the top.

