


# Tilly - Meeting Booth

TY-B2L - TY-B4L - TY-B2H - TY-B4H




## ASSEMBLY INSTRUCTIONS


Tilly  
Meeting Booths

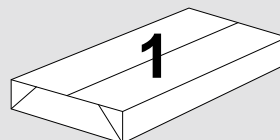

Pack 1:  
2x Sofa Units


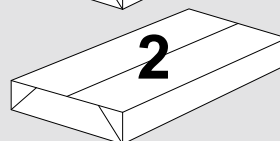


Pack 2:  
1x Linking Panel


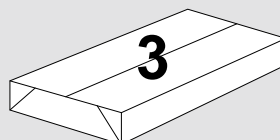


Pack 3:  
1x Top Pack &  
Fitting Kit



TOOLS REQUIRED  
FOR ASSEMBLY

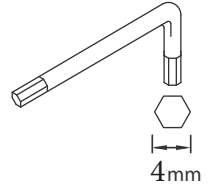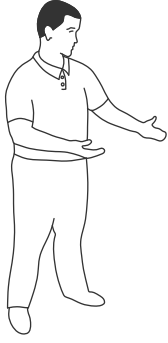


DONT STRUGGLE  
2 MAN LIFT

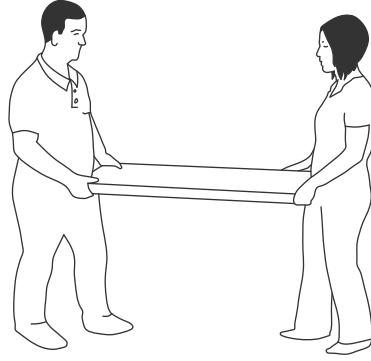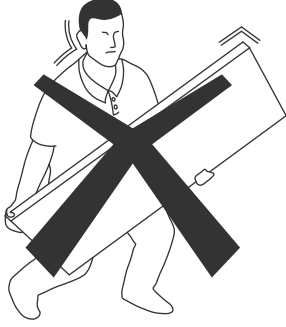


ALWAYS HANDLE  
ITEMS WITH CARE

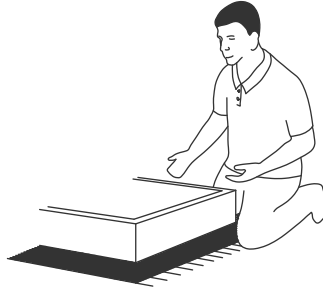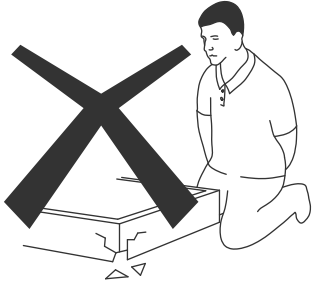

IF UNSURE CALL  
FOR ASSISTANCE

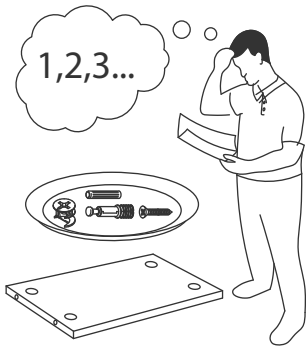


KEEP FITTINGS AWAY  
FROM CHILDREN

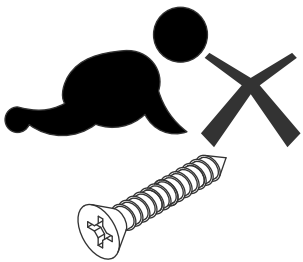





Please check that you have all the parts

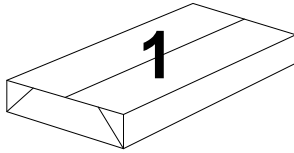

**PACK 1:**  
2 x Sofas

1100 x 700mm = TY-LBS1  
1700 x 700mm = TY-LBS2  
1100 x 700mm = TY-HBS1  
1700 x 700mm = TY-HBS2

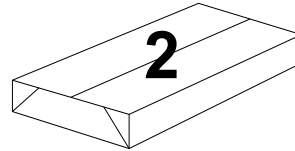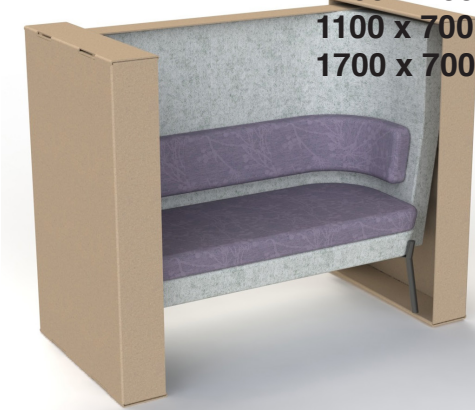


**PACK 2:**  
1 x Link Panel

1100 x 1100mm = TY-JPL  
1100 x 1450mm = TY-JPH



**PACK 3:**  
1 x Top Pack & Fitting Kit

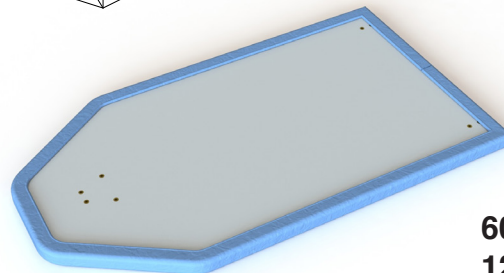

600 x 700mm = TY-B2-DESK  
1200 x 700mm = TY-B4-DESK



Please check that you have all the fittings

**FITTINGS SUPPLIED**



Connector Bolt - M6

Size            **PCS**  
50mm            **4**  
30mm            **4**



Connector Bolt - M6

Size            **PCS**  
20mm            **8**



Top Fixing Bracket

Size            **PCS**  
120 x 120mm    **2**



Link Fixing Bracket

Size            **PCS**  
120 x 30mm    **2**

# TILLY MEETING BOOTH ASSEMBLY

## 1

### Step 1



Unpack your new Tilly booth seating unit and please recycle all packaging.



## 2

### Step 2



Locate and attach the leg aligning the holes located as shown using the M6 x 20mm bolts.

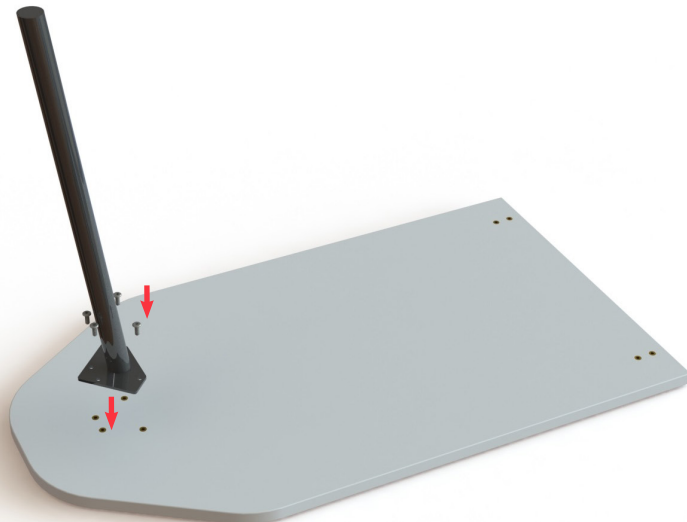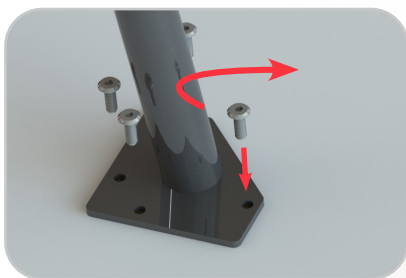

## 3

### Step 3


Locate the brackets to the fixing holes and attach using the M6 x 20mm bolts as shown.

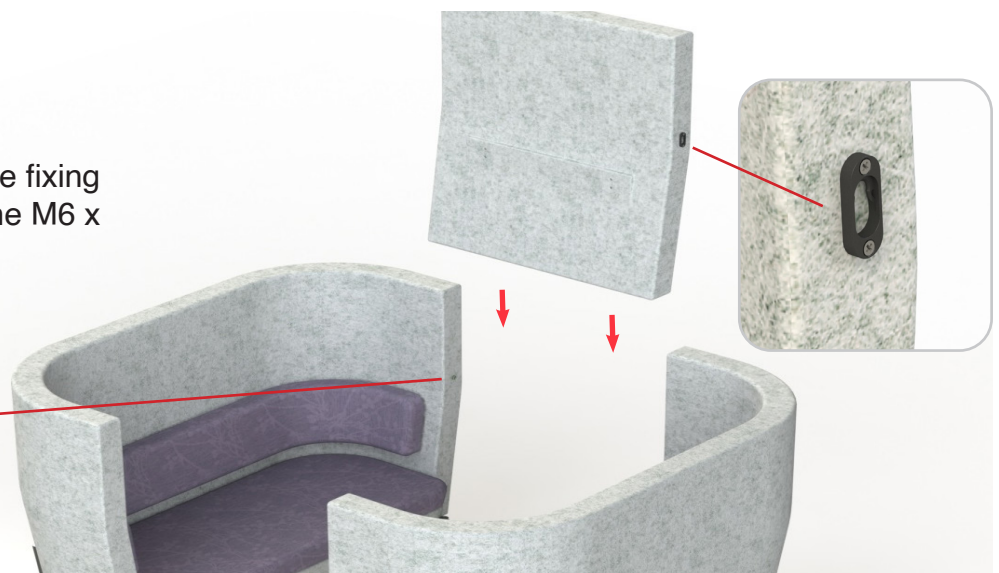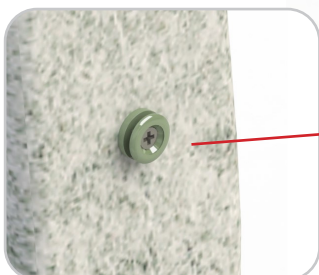

# 4

## Step 4



Locate the brackets to the fixing holes and attach using the M6 x 20mm bolts as shown.

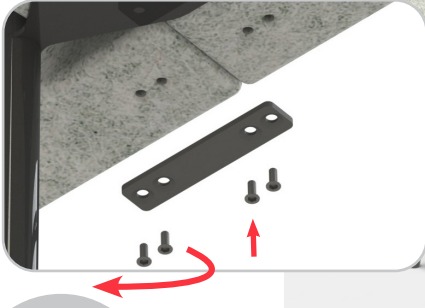

# 5

## Step 5

Attach the M6 x 50mm bolts as shown to secure the frame to the top.

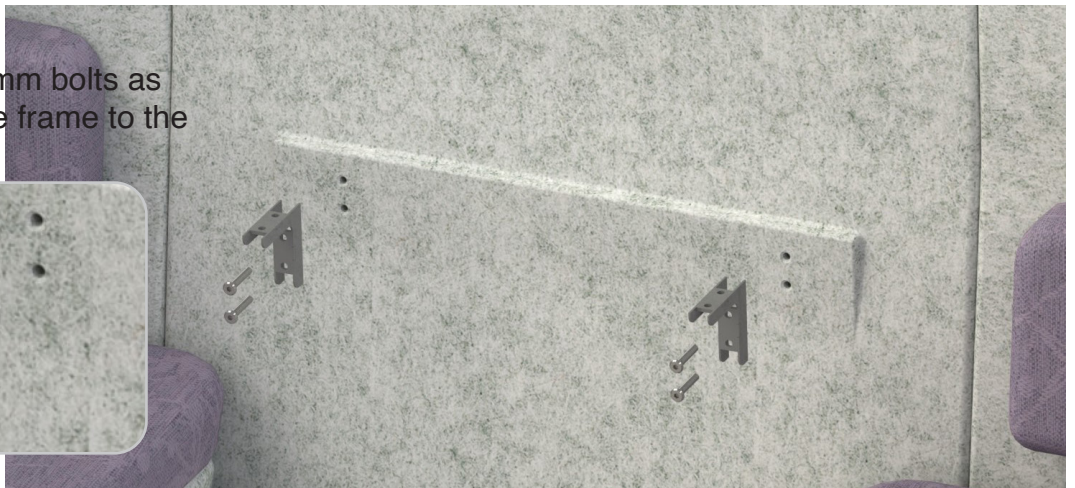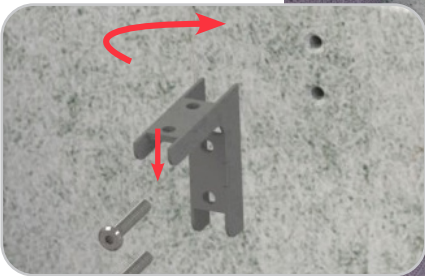

# 6

## Step 6

Attach the M6 x 50mm bolts as shown to secure the frame to the top.

