

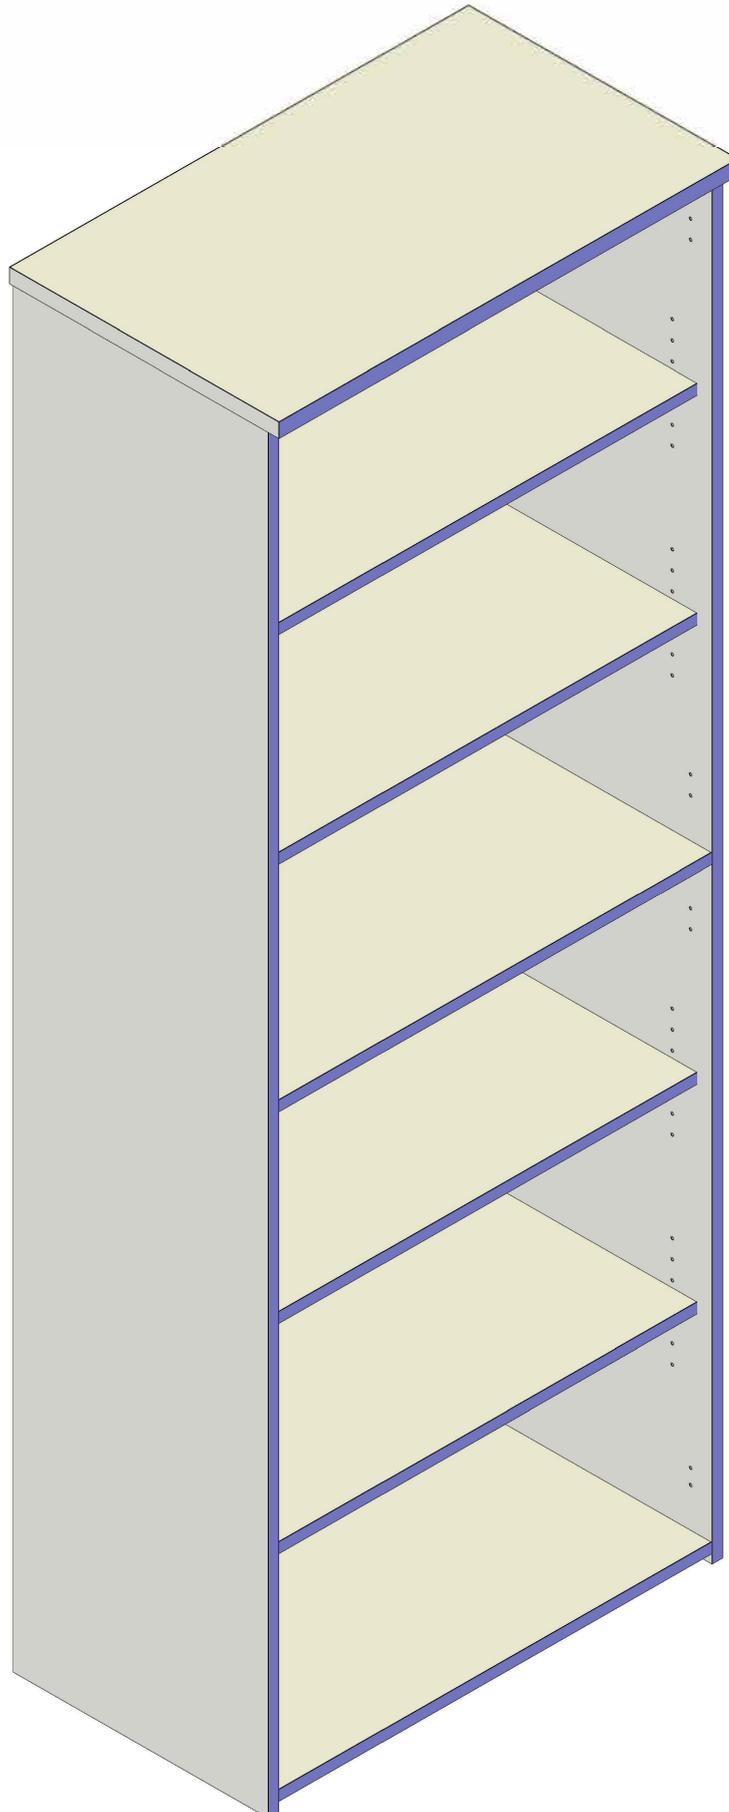


# R2140


## 800 x 470 x 2140mm Bookcase

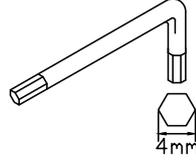


**TOOLS REQUIRED  
FOR ASSEMBLY**

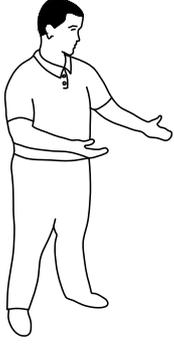


**DONT STRUGGLE  
2 MAN LIFT**

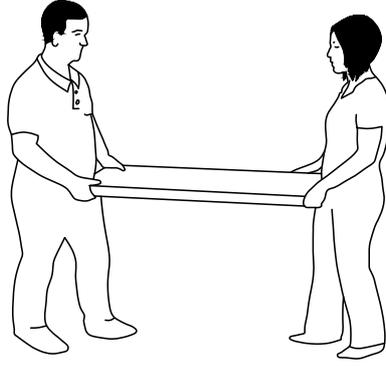

**ALWAYS HANDLE  
ITEMS WITH CARE**

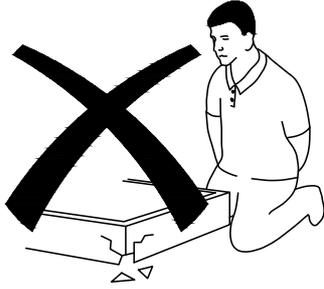

**IF UNSURE CALL  
FOR ASSISTANCE**






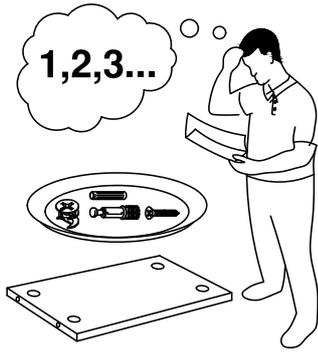


**KEEP FITTINGS AWAY  
FROM CHILDREN**





# Please check that you have all the panels!

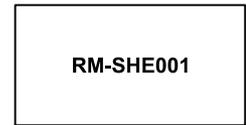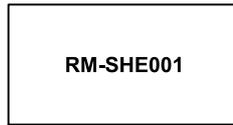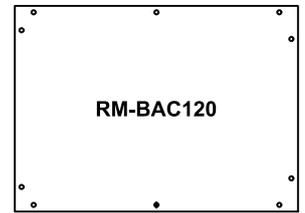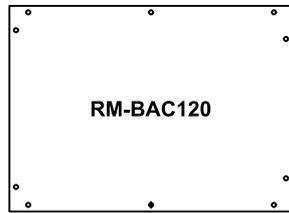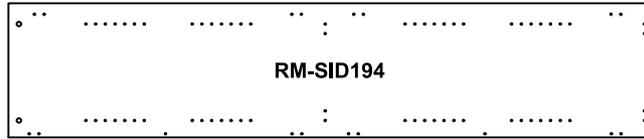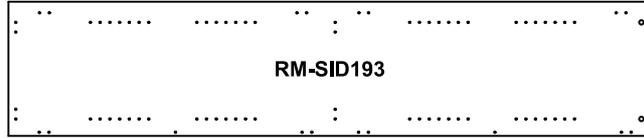

# Please check that you have all the fittings!

( Fittings Bags Supplied in Carton 2 - SS-2140S )



|           |                  |                     |           |                             |           |
|-----------|------------------|---------------------|-----------|-----------------------------|-----------|
| <b>16</b> | Cam 15N<br>CAM03 |                     | <b>16</b> | 24mm Quick fix pin<br>BLT07 |           |
|           | <b>4</b>         | Shelf clip<br>PAR07 |           |                             | <b>12</b> |



|           |                  |                     |           |                             |           |
|-----------|------------------|---------------------|-----------|-----------------------------|-----------|
| <b>16</b> | Cam 15N<br>CAM03 |                     | <b>16</b> | 24mm Quick fix pin<br>BLT07 |           |
|           | <b>4</b>         | Shelf clip<br>PAR07 |           |                             | <b>12</b> |




|           |                          |  |
|-----------|--------------------------|--|
| <b>20</b> | 17mm Cover Caps<br>CAP07 |  |
|-----------|--------------------------|--|

Prepare all the panels by inserting the listed fittings into the corresponding holes.


1

Prepare the panels by inserting the listed fittings into the corresponding holes.

Insert the cam fittings first before turning the panel over to insert the quick fix pins.






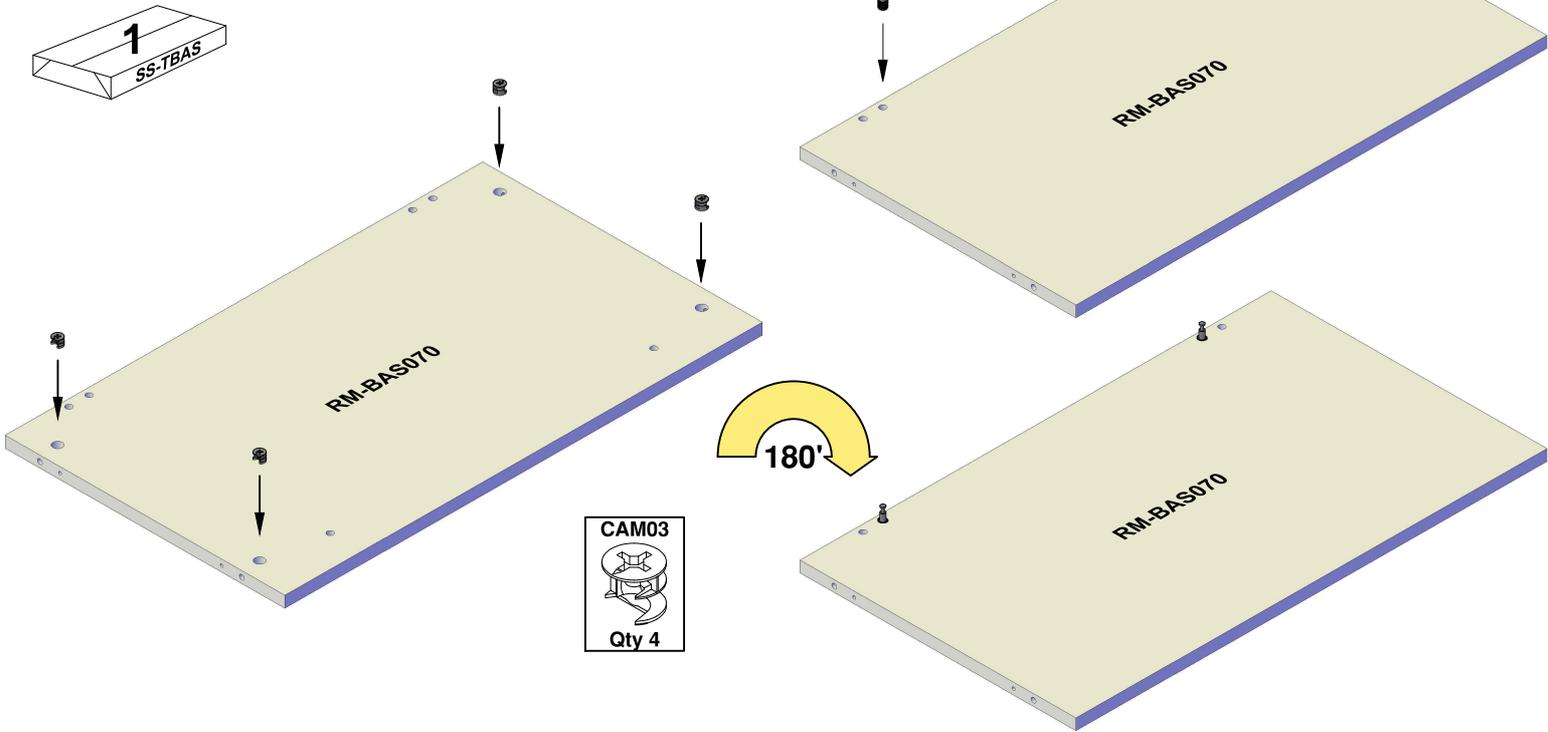


2

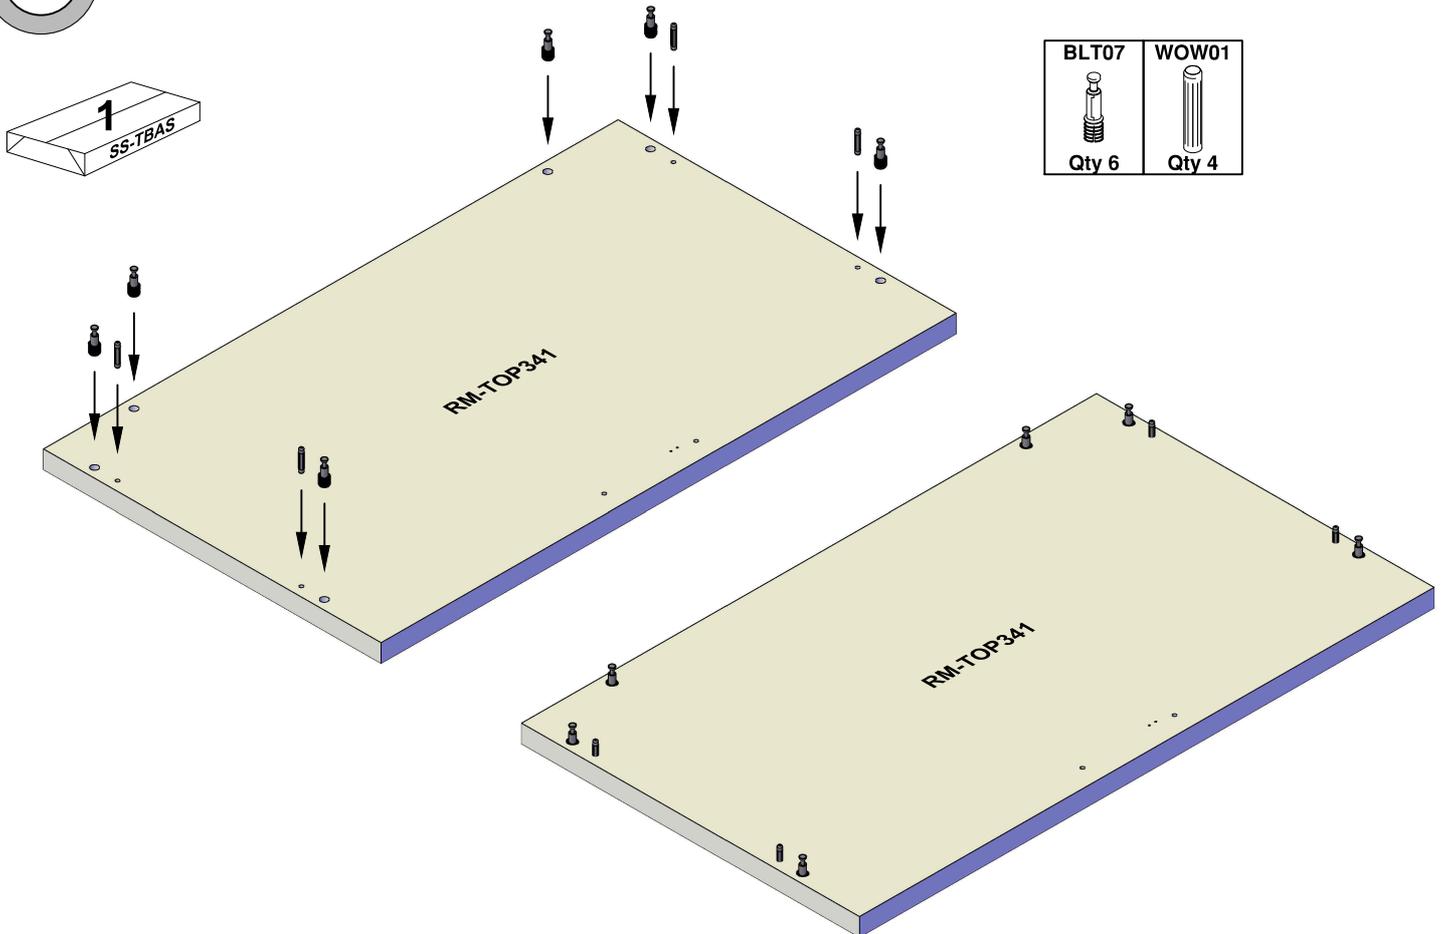


Prepare all the panels by inserting the listed fittings into the corresponding holes.


3

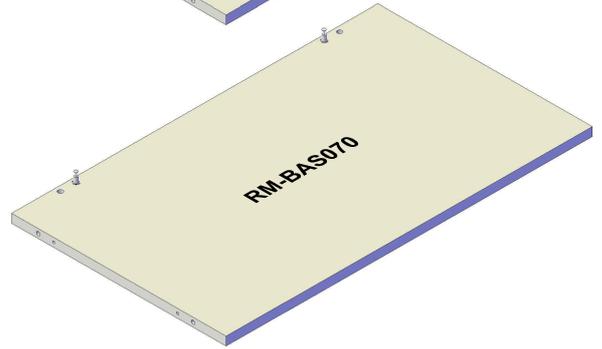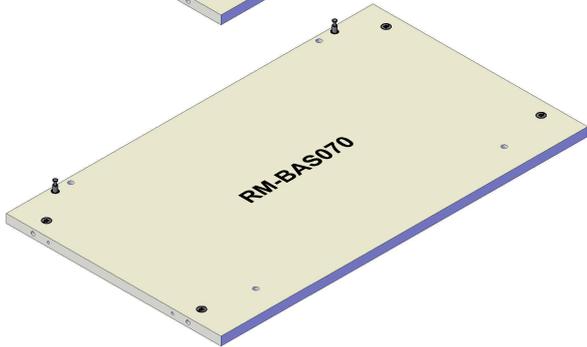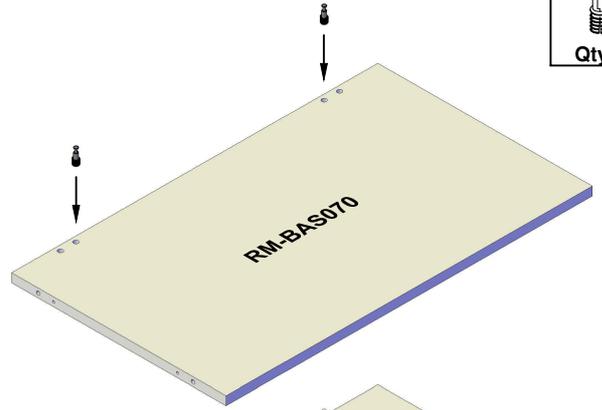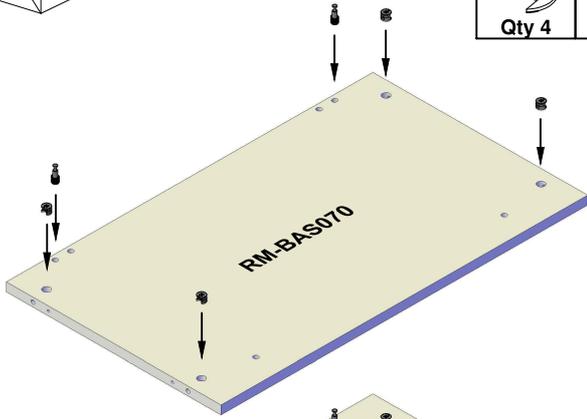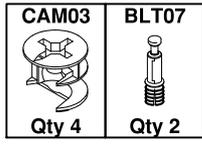

4

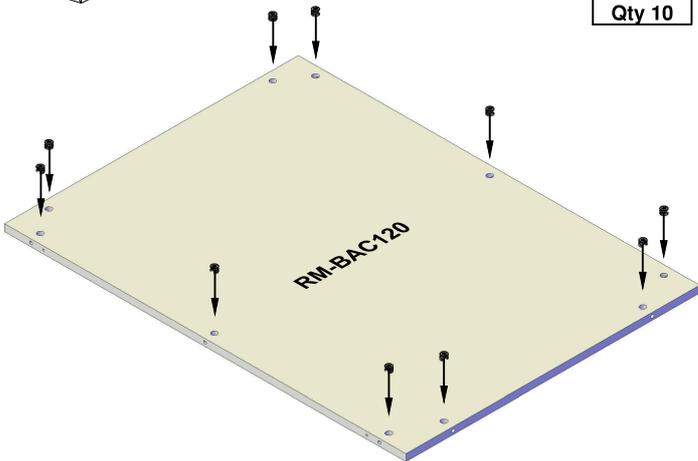


5

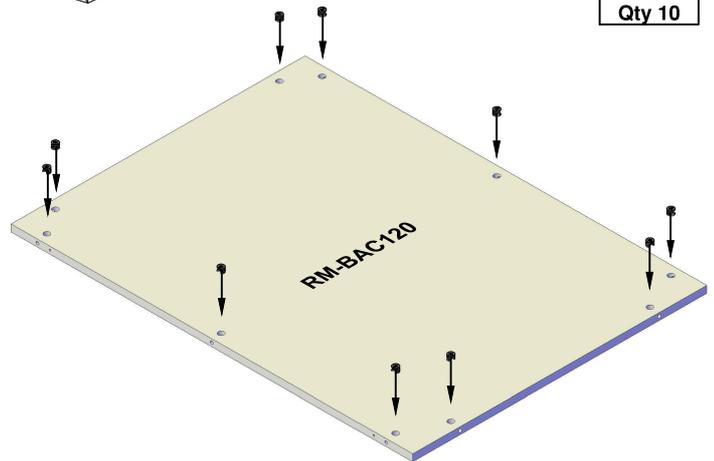

Prepare all the panels by inserting the listed fittings into the corresponding holes.


5

|   |   |  |  |
|---|---|--|--|
| <b>CAM03</b><br><br>Qty 2 | <b>BLT07</b><br><br>Qty 10 | <b>WOW01</b><br><br>Qty 8 | <b>PAR07</b><br><br>Qty 8 |
|---|---|--|--|

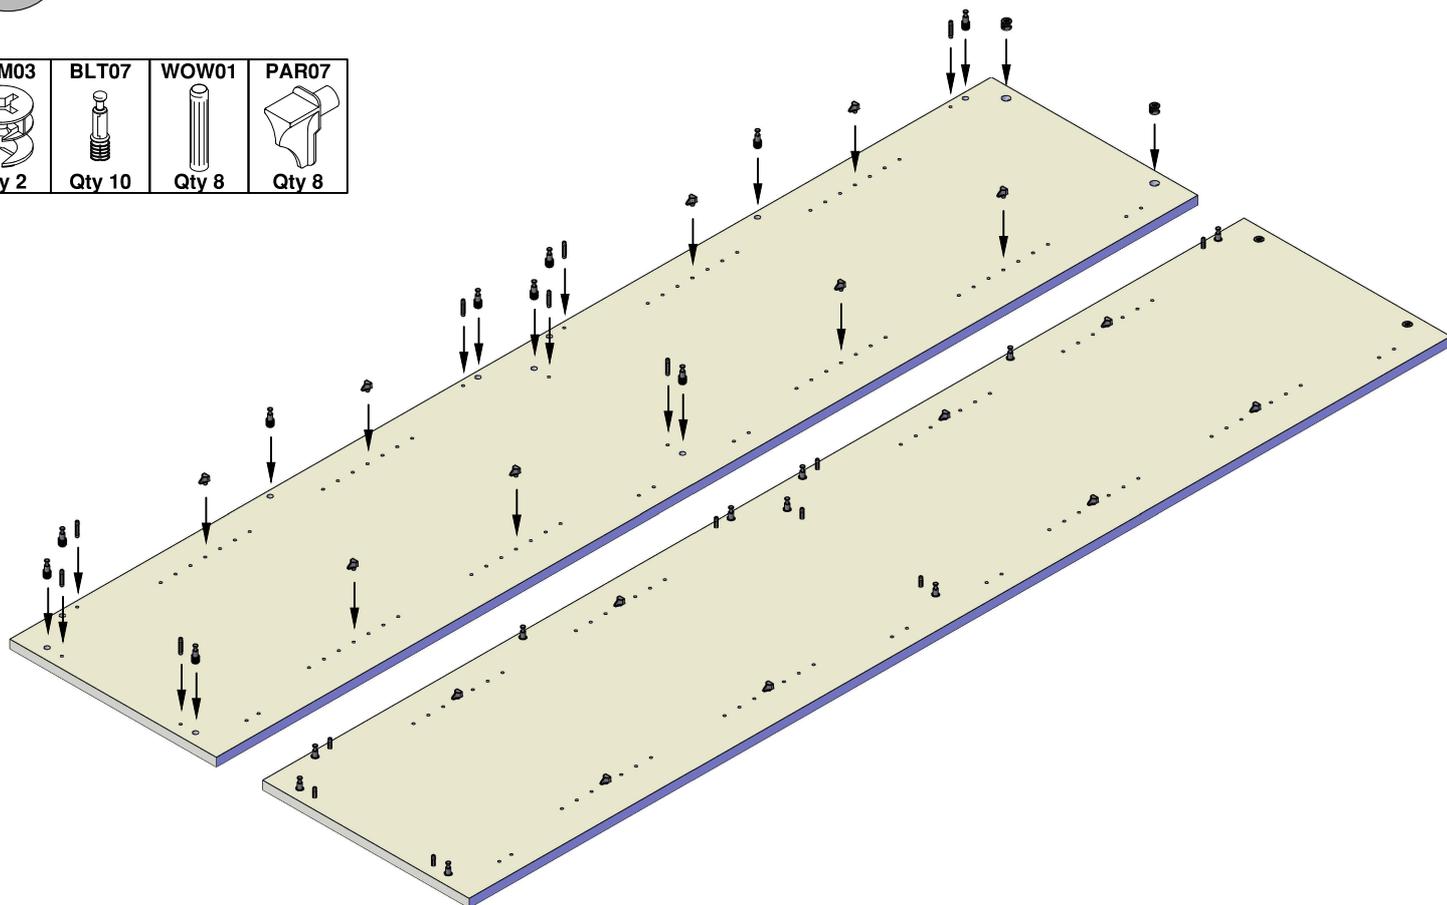



6

|   |   |  |  |
|---|---|--|--|
| <b>CAM03</b><br><br>Qty 2 | <b>BLT07</b><br><br>Qty 10 | <b>WOW01</b><br><br>Qty 8 | <b>PAR07</b><br><br>Qty 8 |
|---|---|--|--|


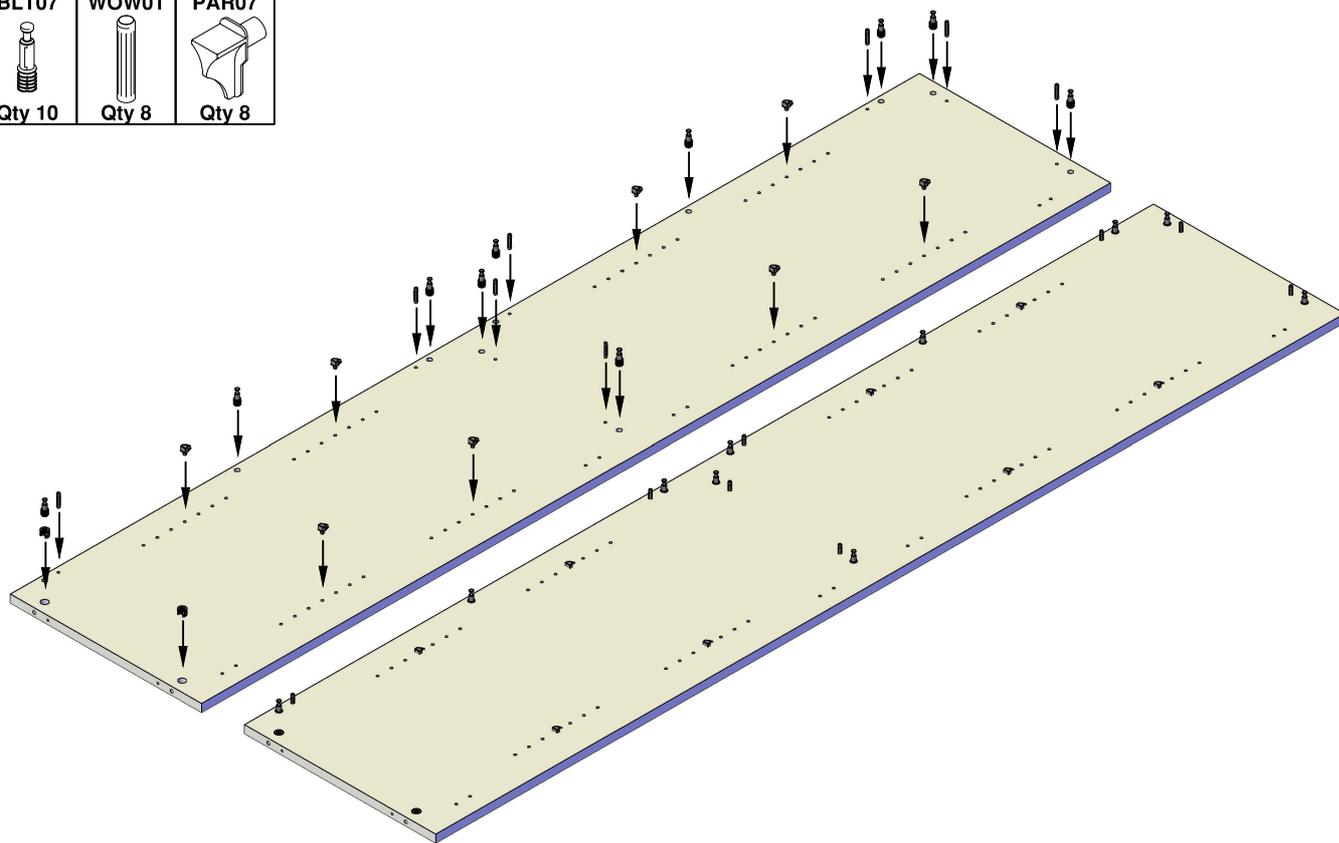




Join the panels together and tighten all cam fittings

7

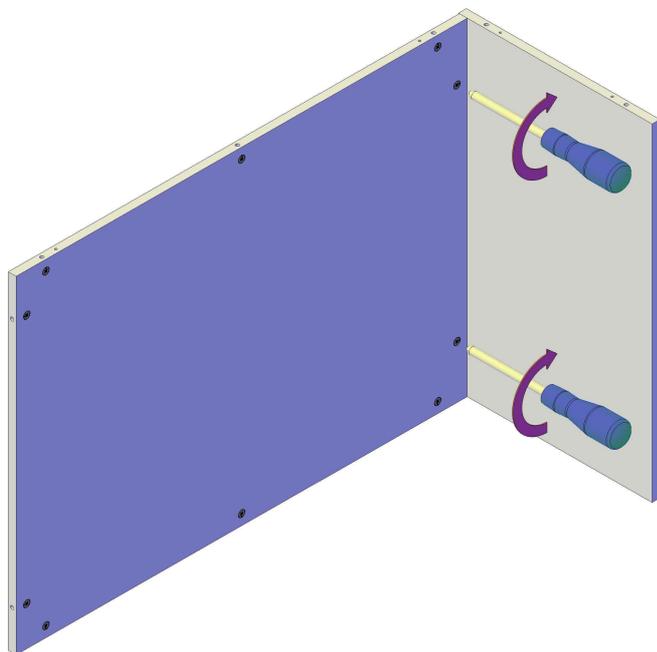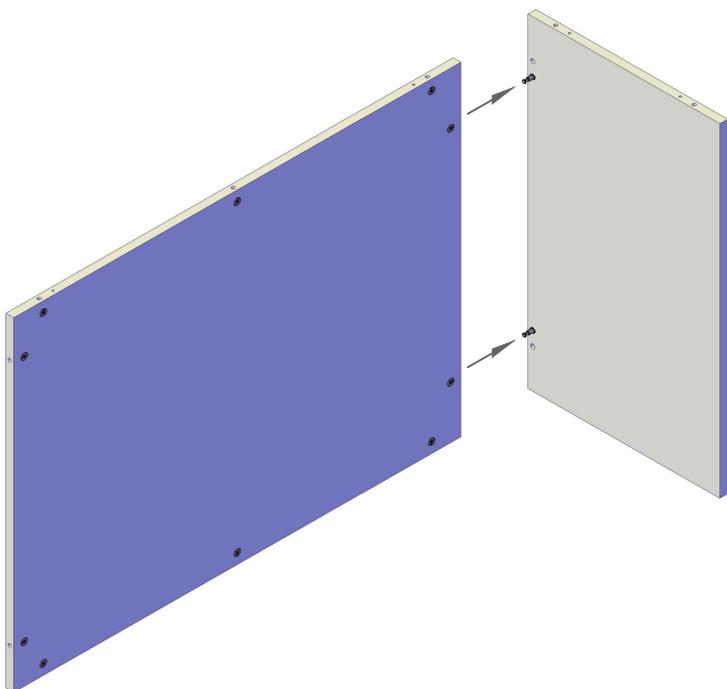




8


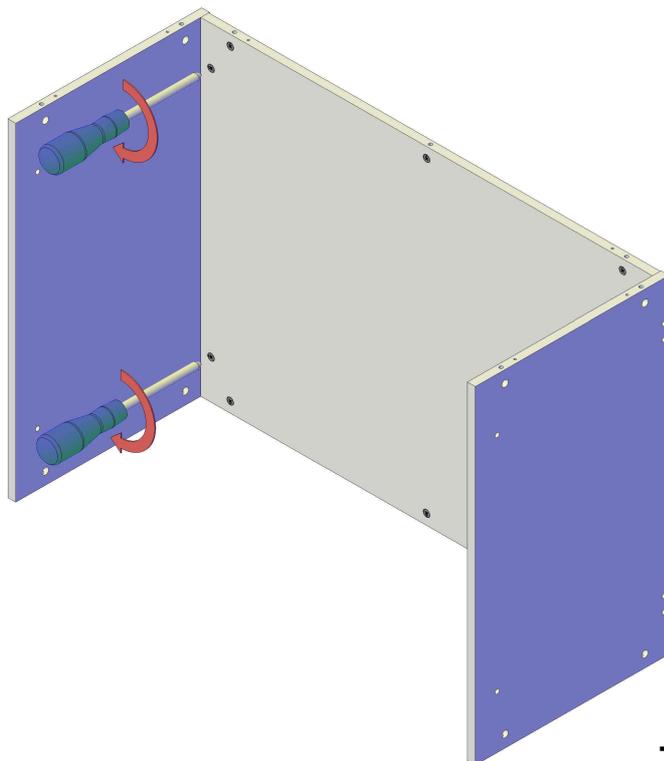
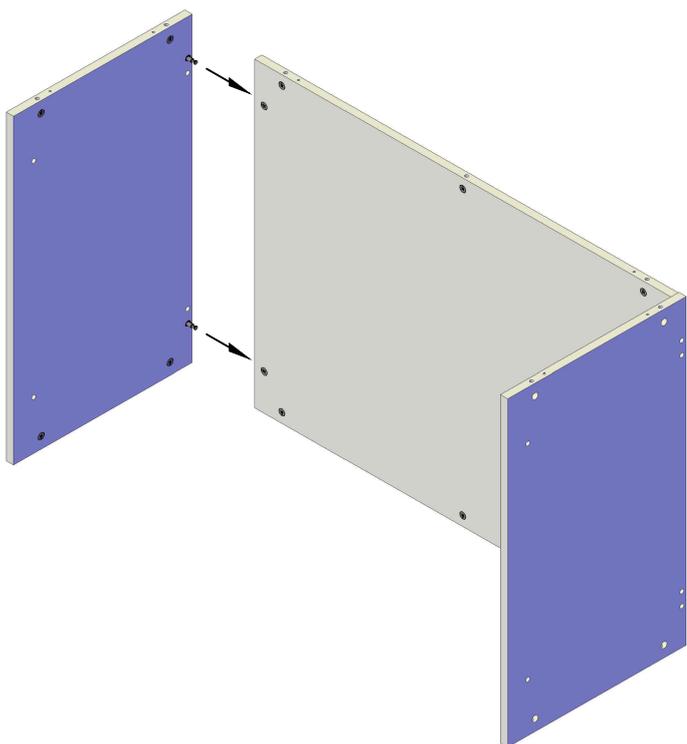


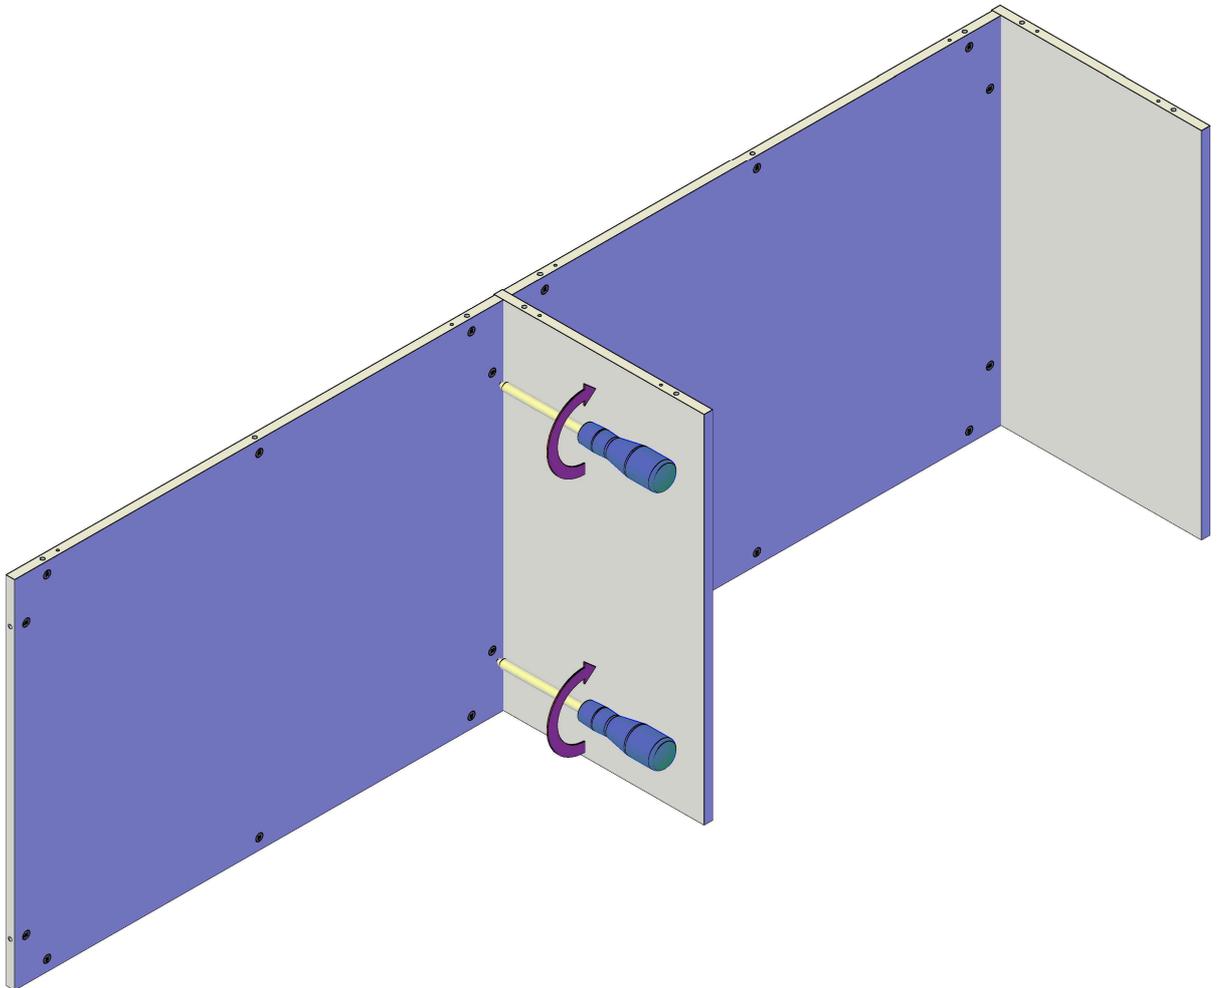
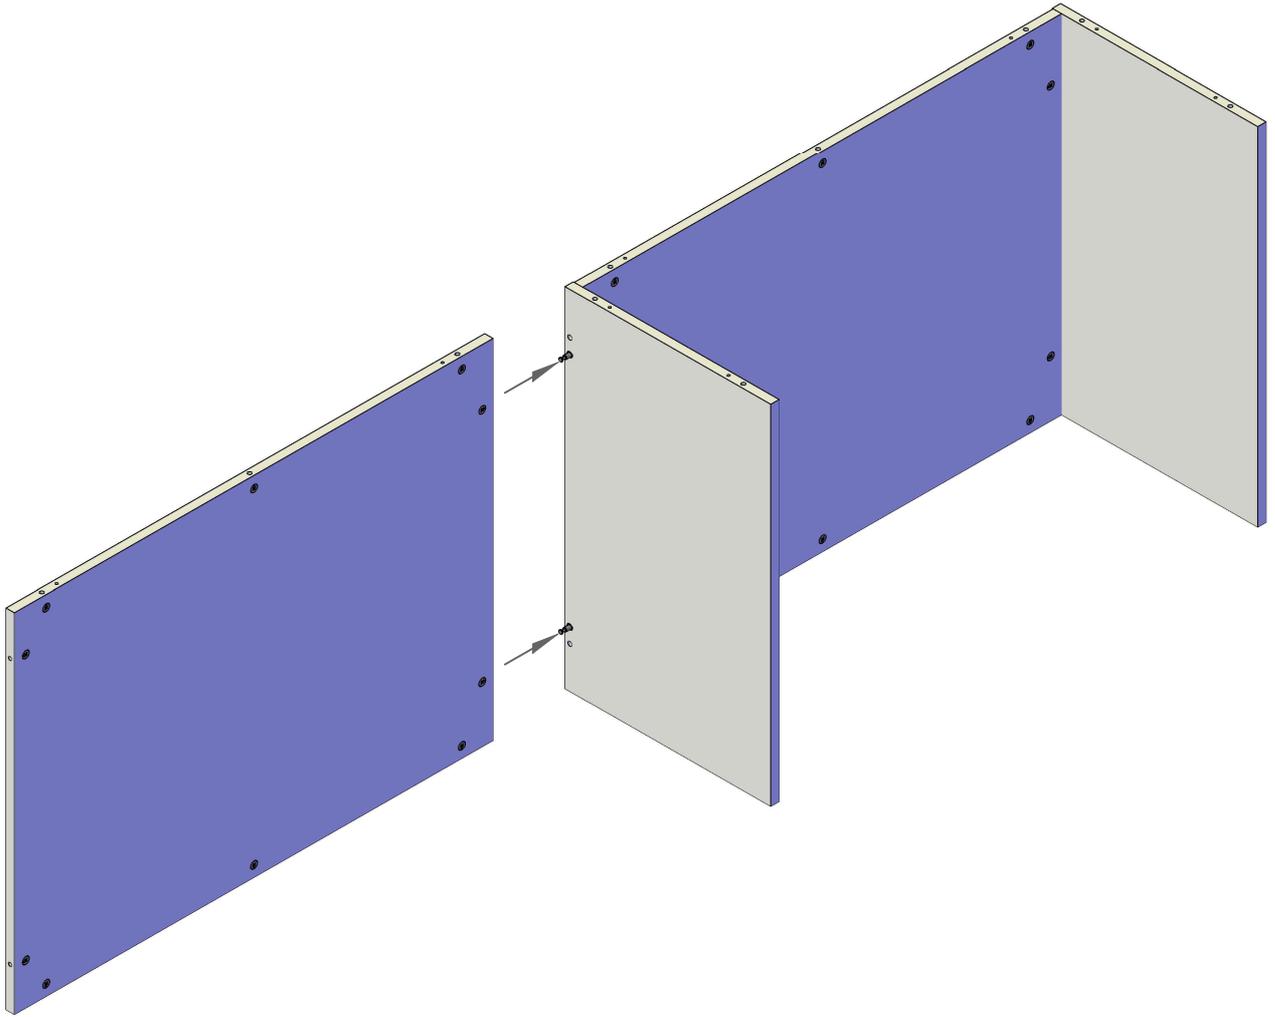




Join the panels together and tighten all cam fittings

10

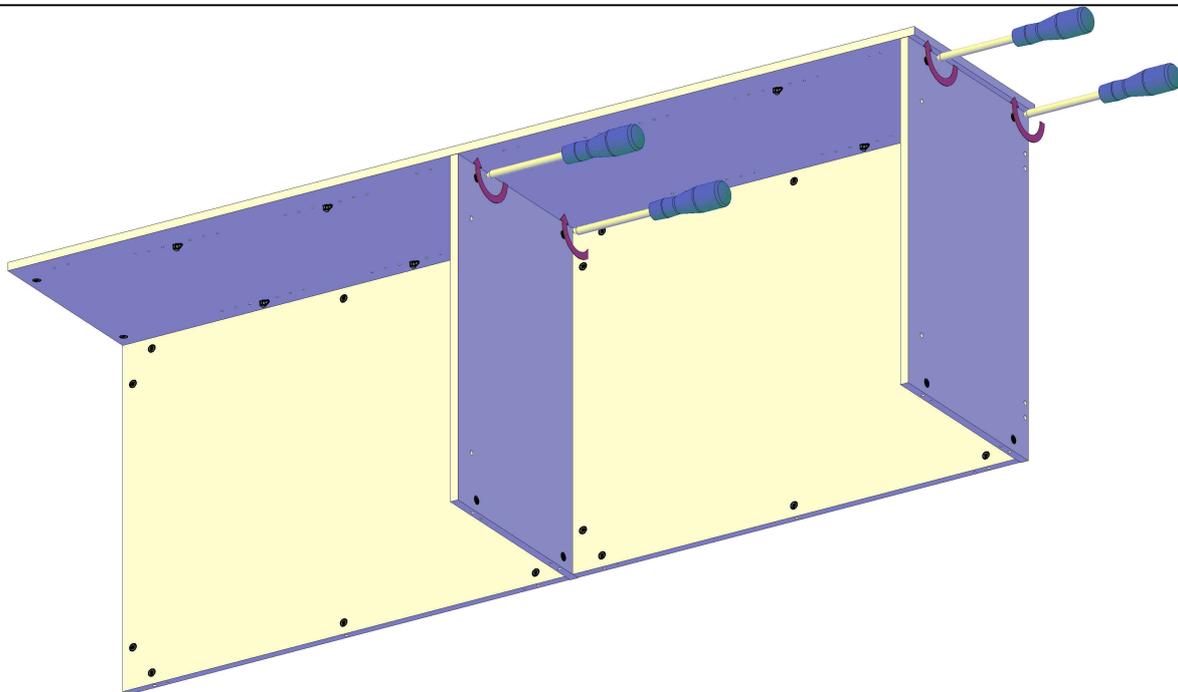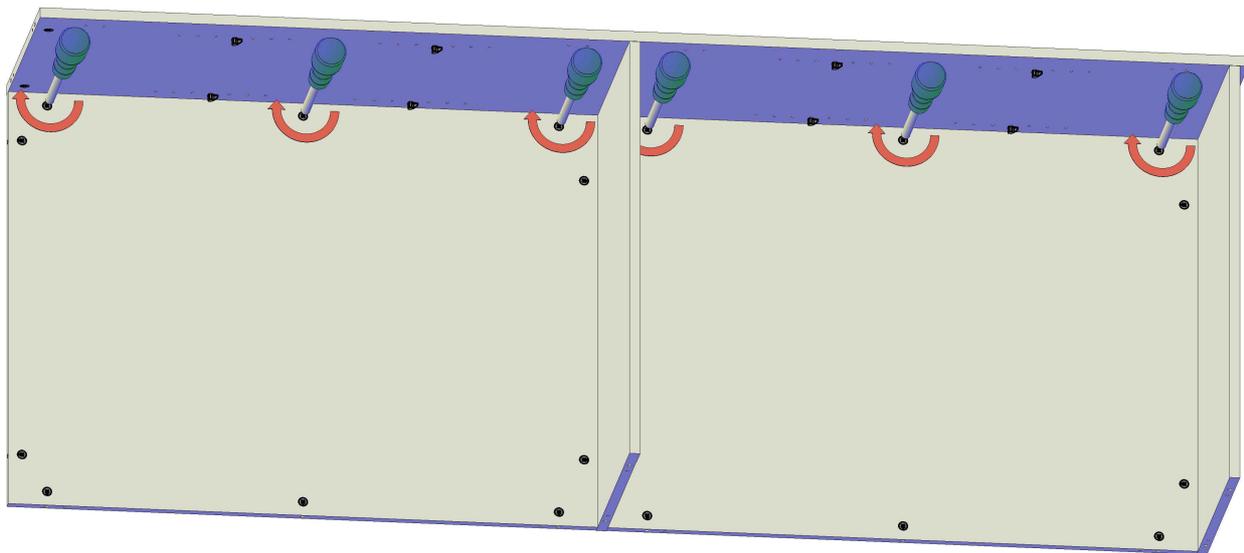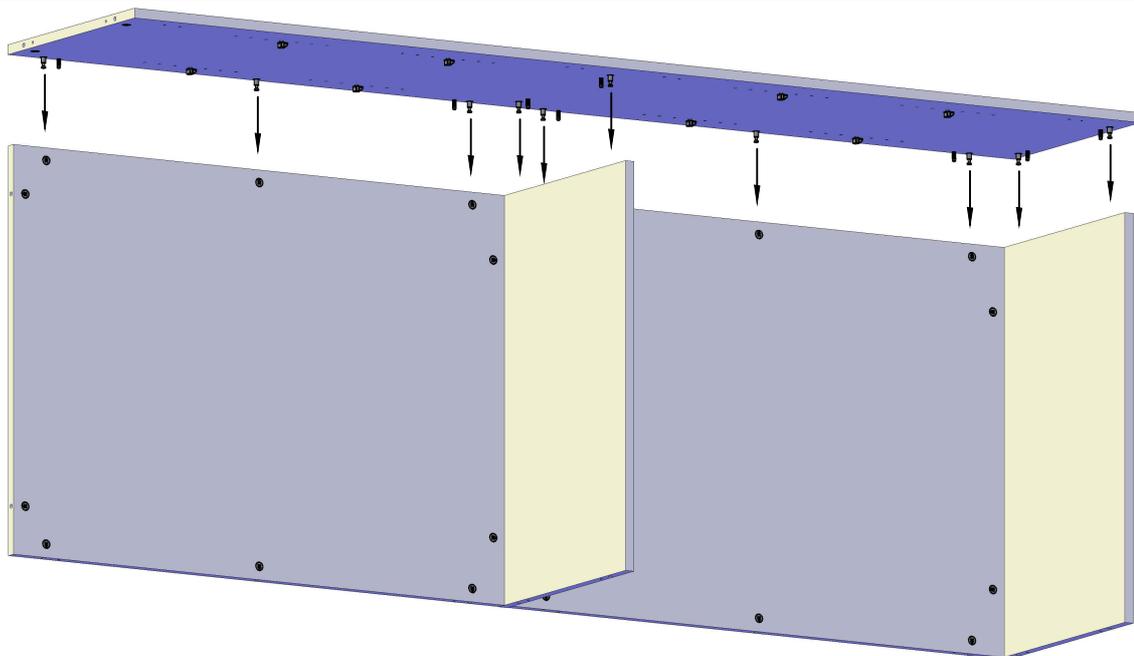

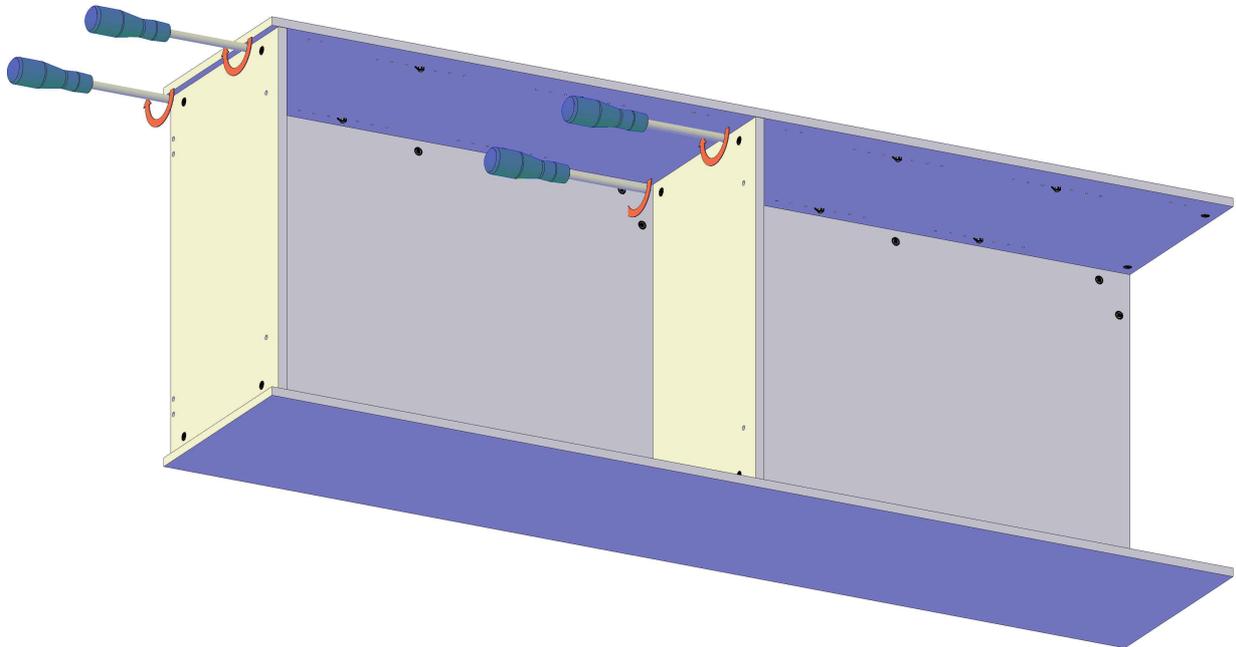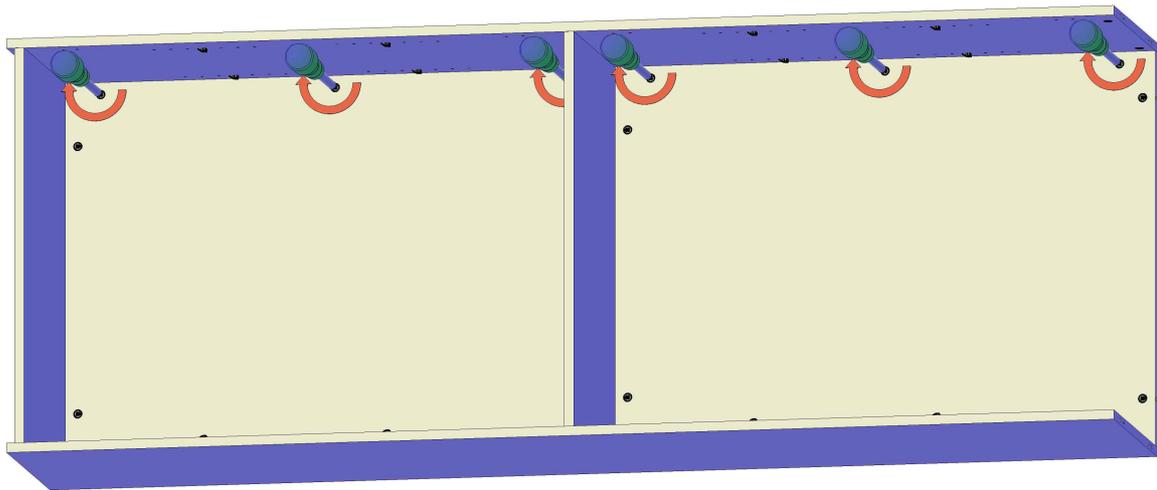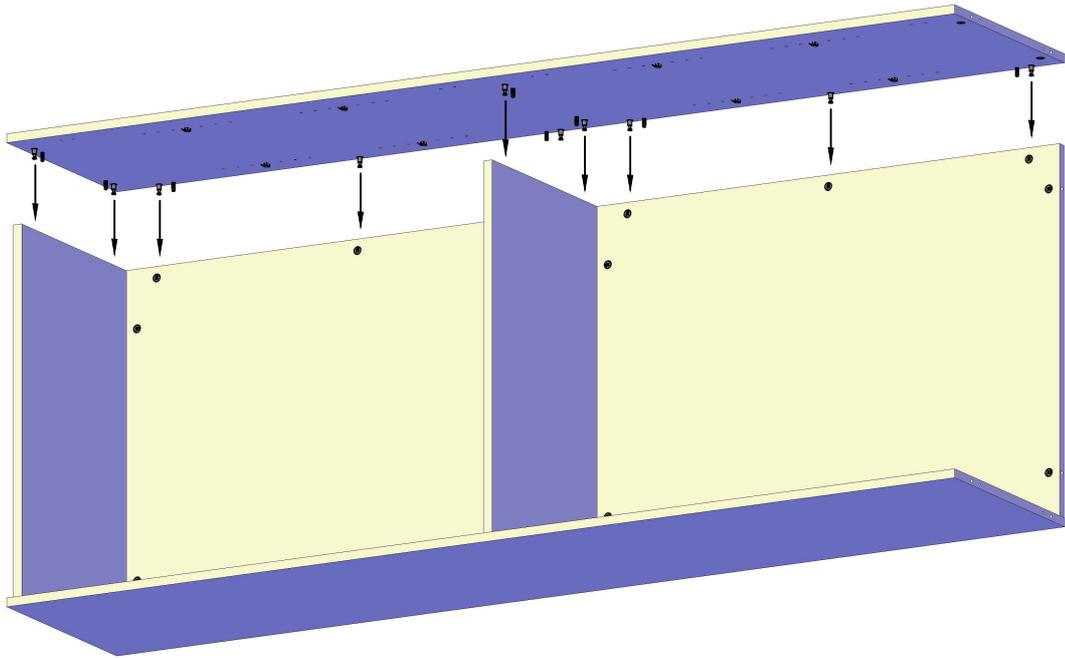


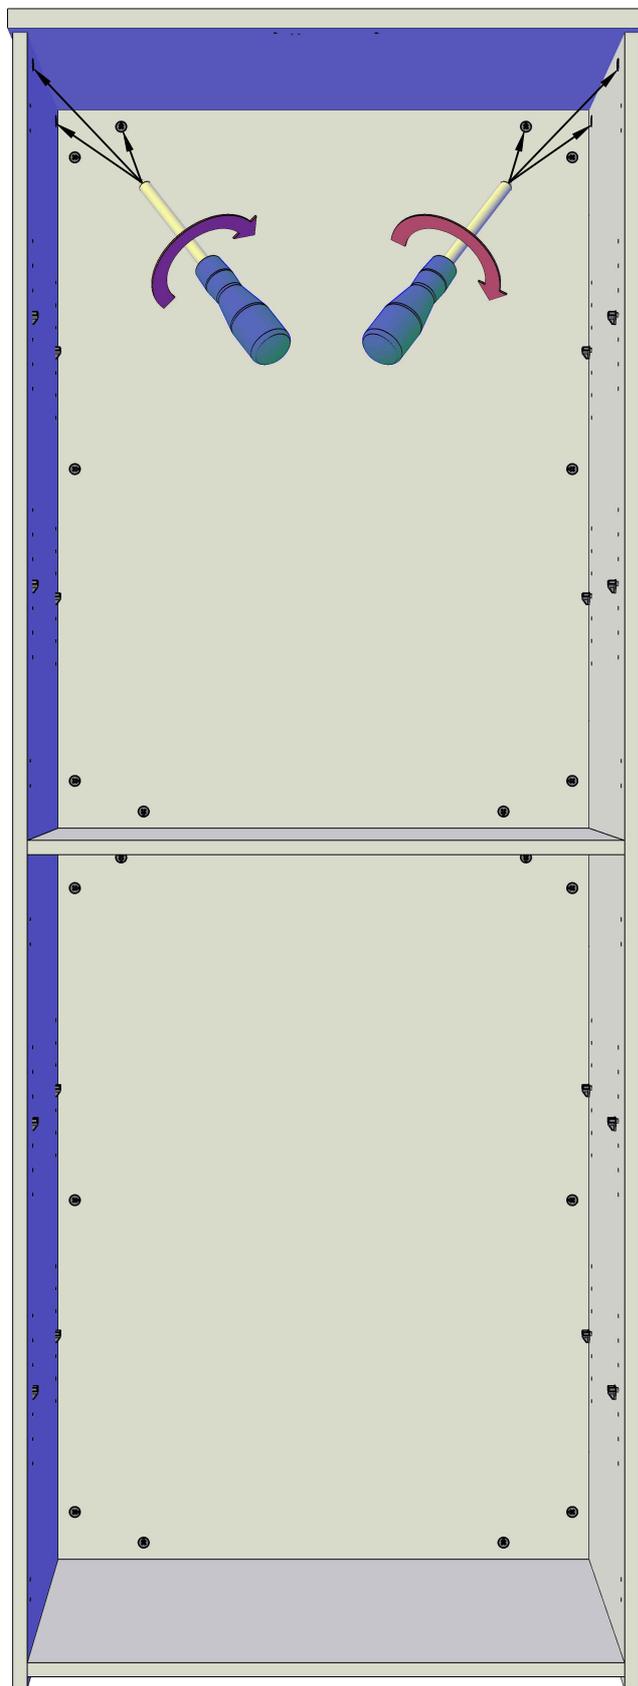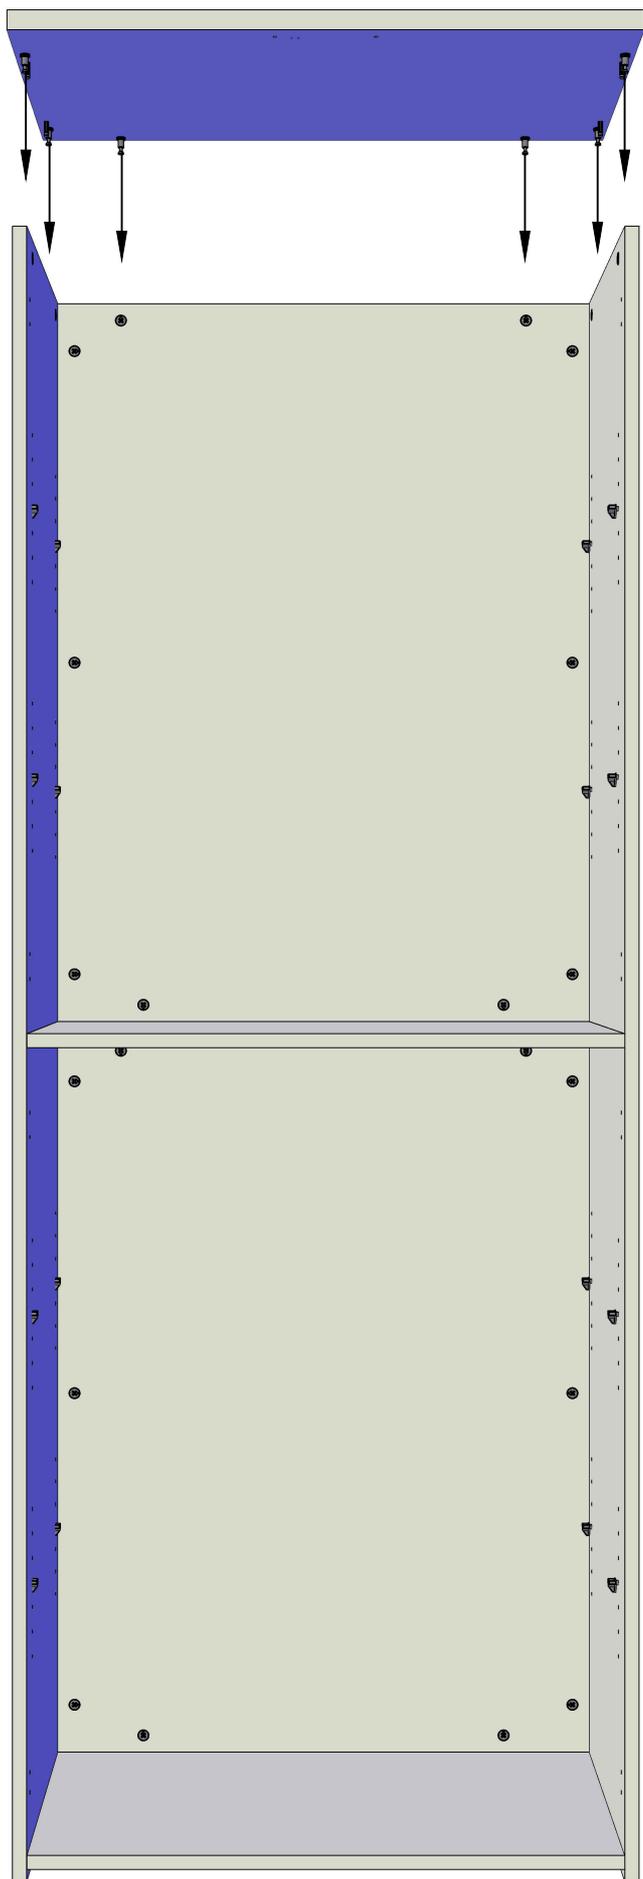

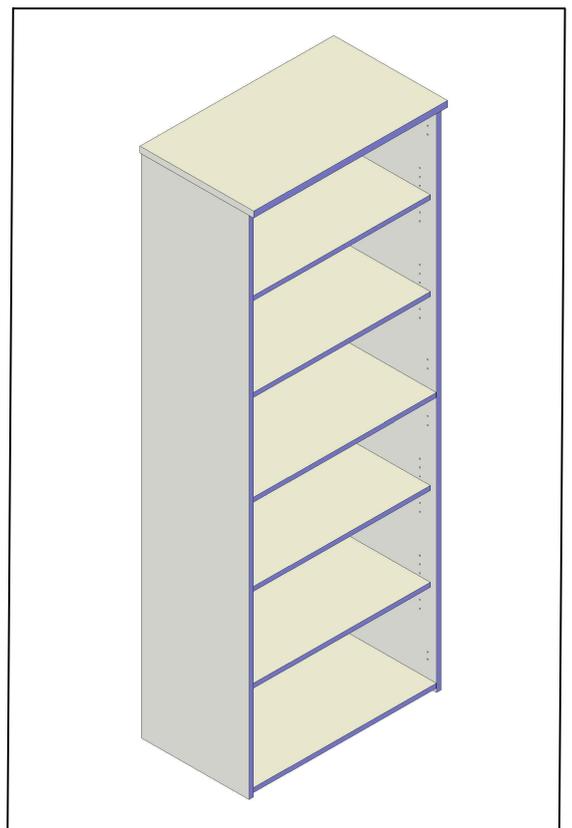
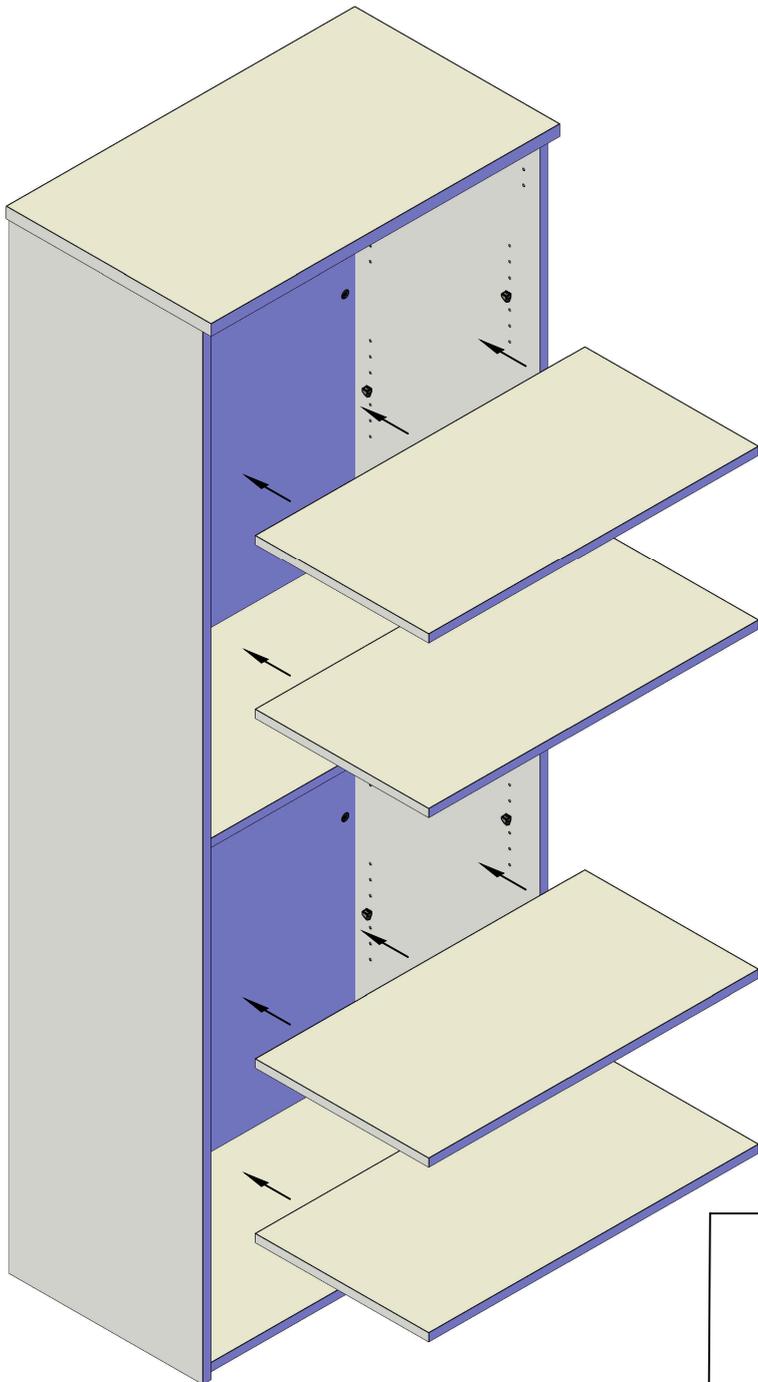


**LG**  
**MAESTRO-DIRECTIVE**  
**GLASS CUPBOARD**  
**DOORS**

|  |          |
|--|----------|
|  | <b>4</b> |
|  | <b>2</b> |
|  | <b>2</b> |
|  | <b>4</b> |
|  | <b>4</b> |
|  | <b>4</b> |
|  | <b>4</b> |
|  | <b>8</b> |
|  | <b>4</b> |
|  | <b>2</b> |

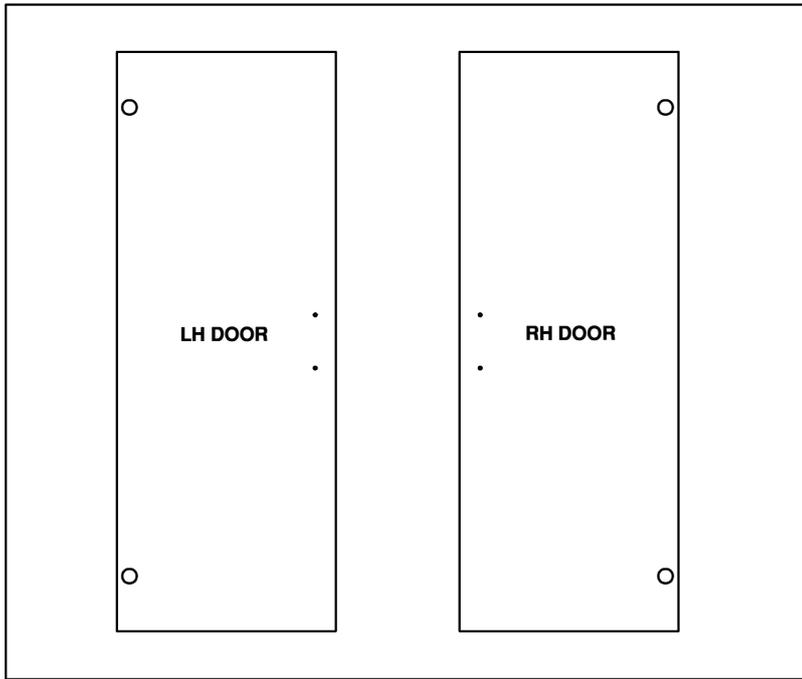


**1**

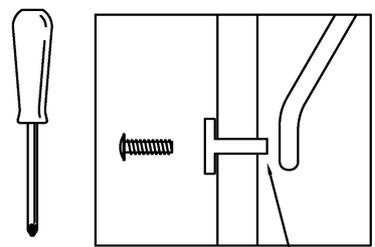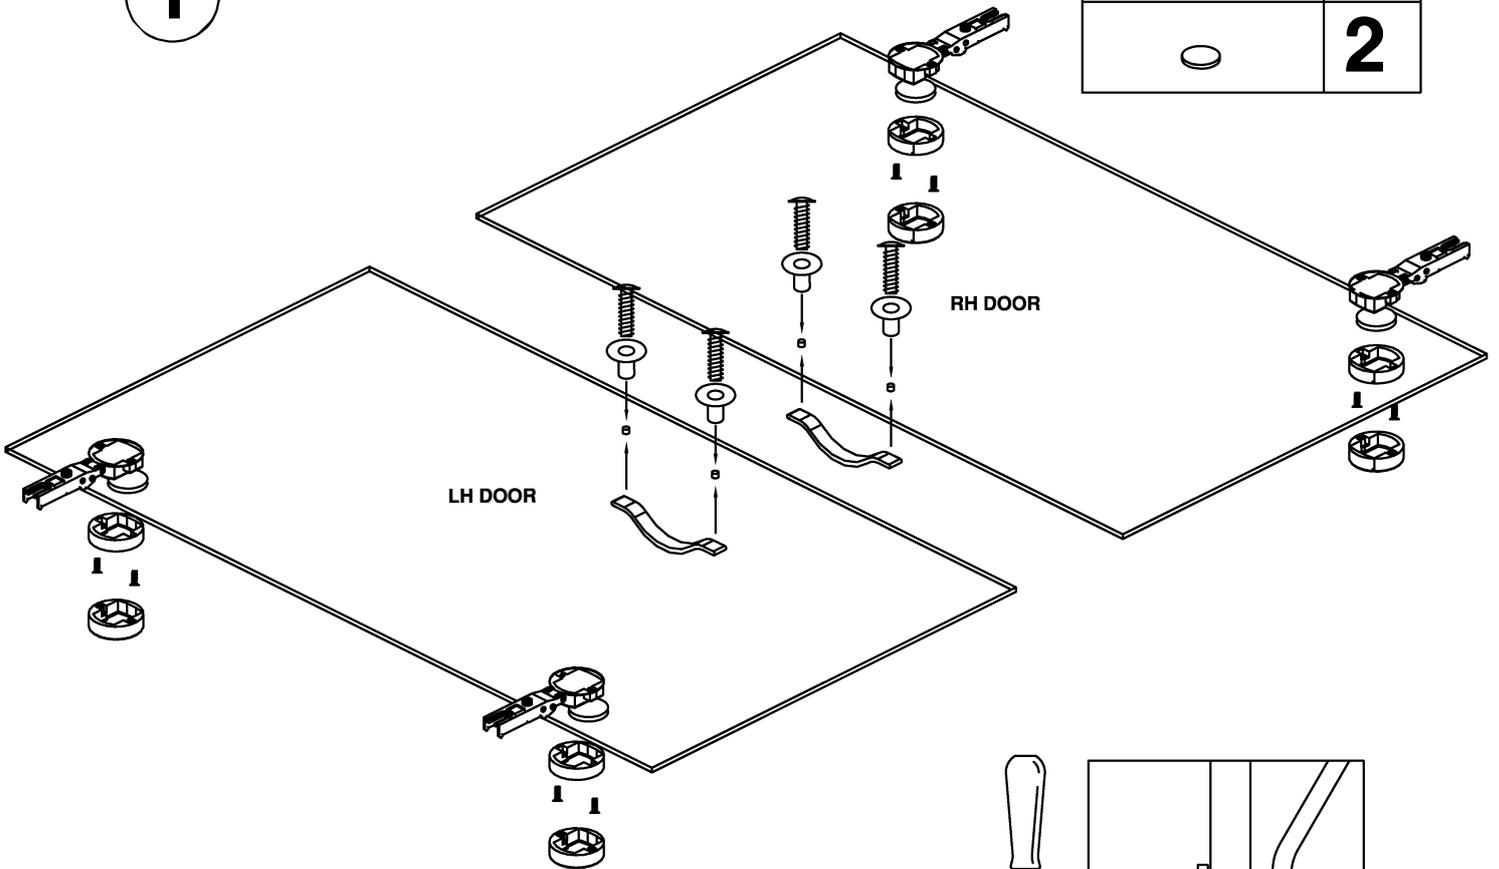


THIS PART OF THE PLASTIC INSERT  
 FORMS AS A SPACER WHEN THE  
 HANDLE IS BOLTED ON AND TIGHTENED

2

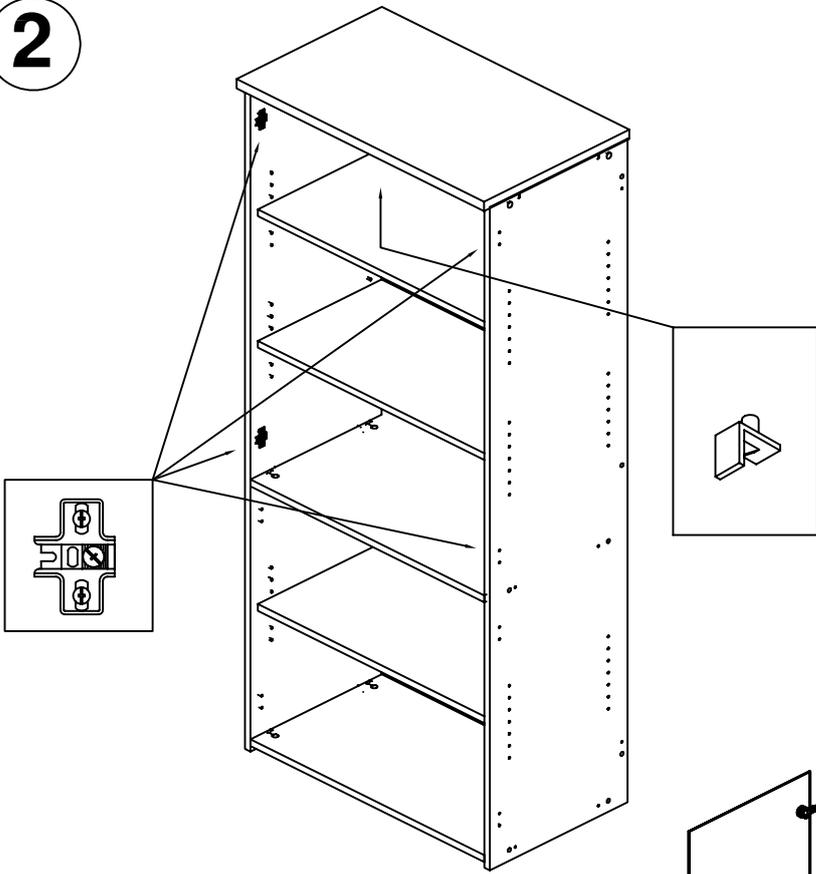

3

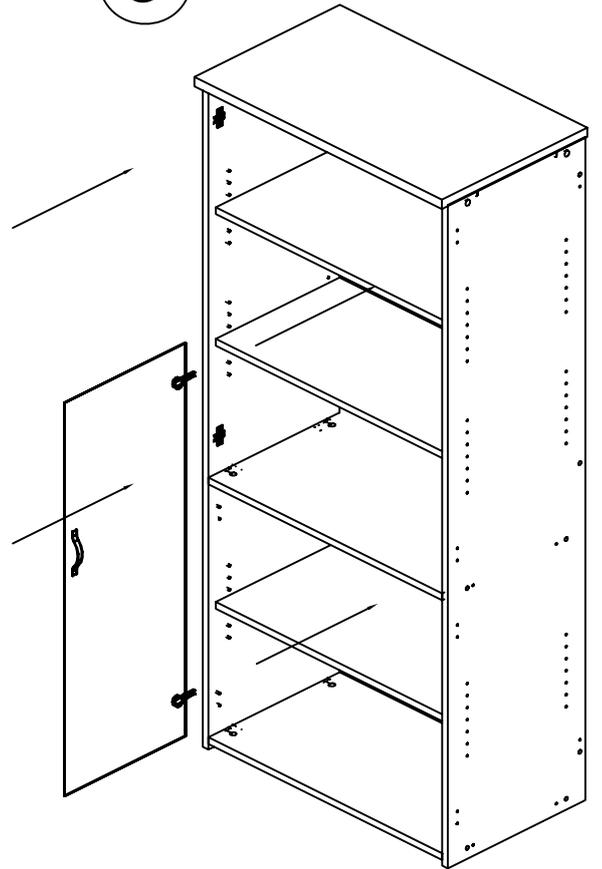

4

