


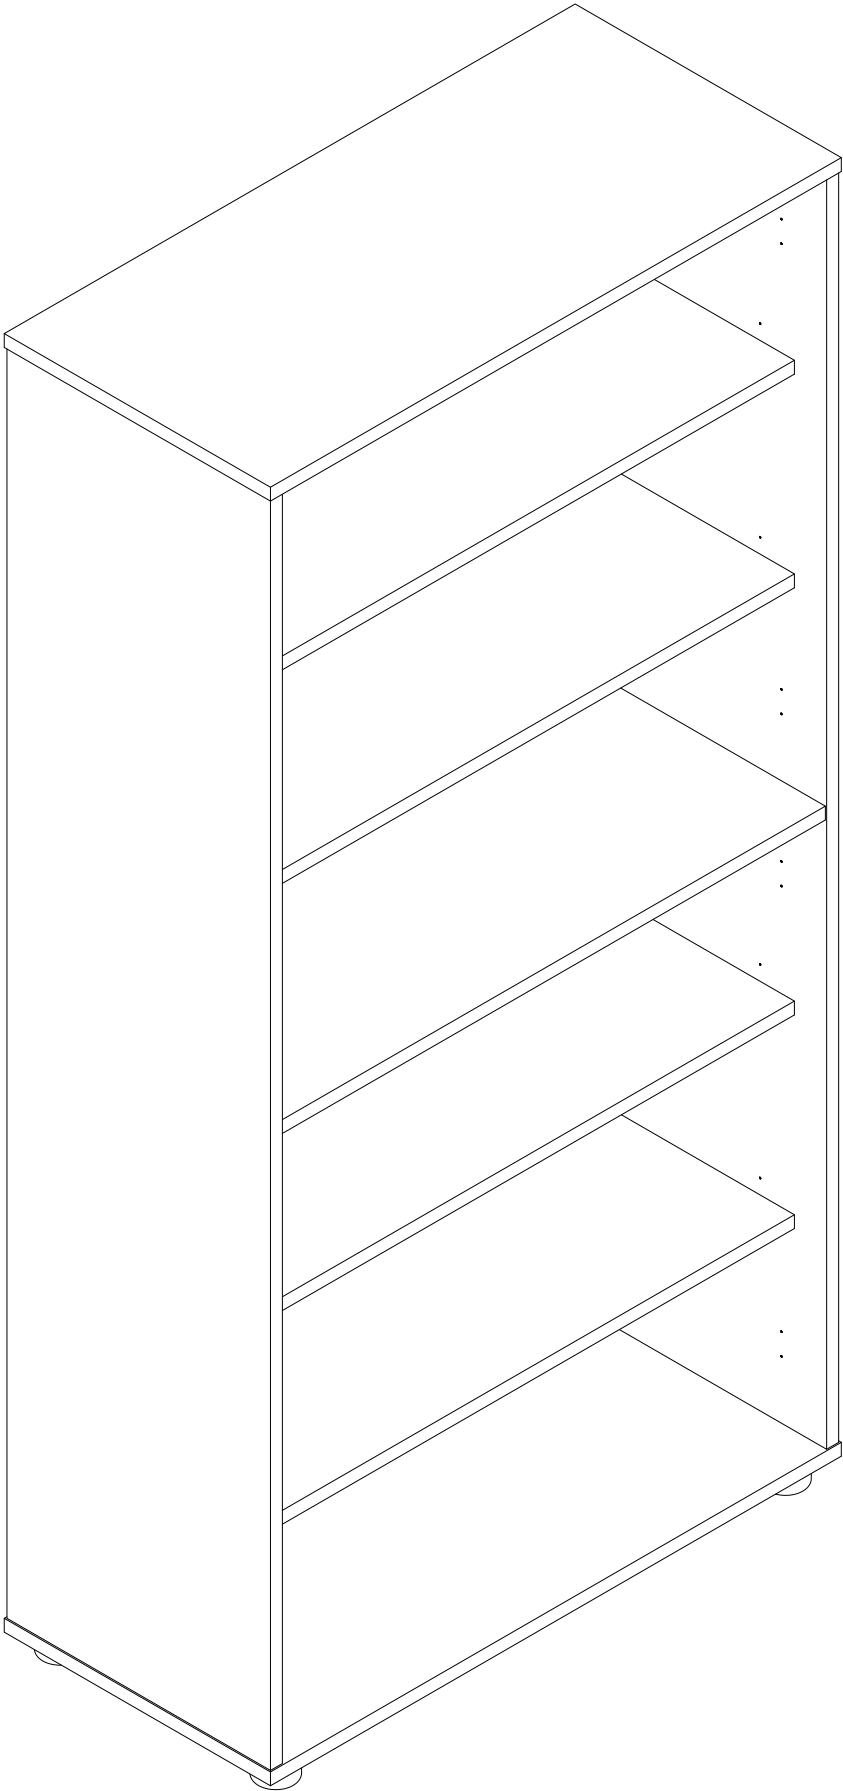




UHS1





**TOOLS REQUIRED
FOR ASSEMBLY**

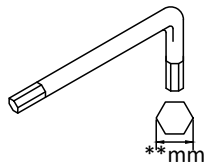


**DONT STRUGGLE
2 MAN LIFT**

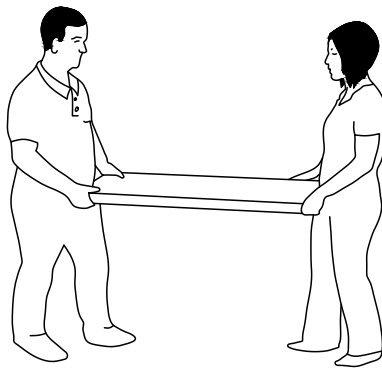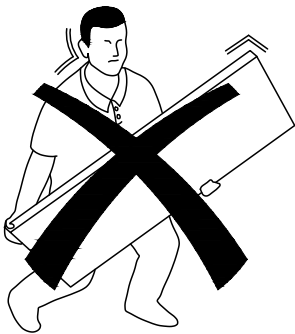



**ALWAYS HANDLE
ITEMS WITH CARE**

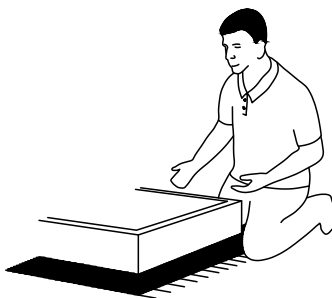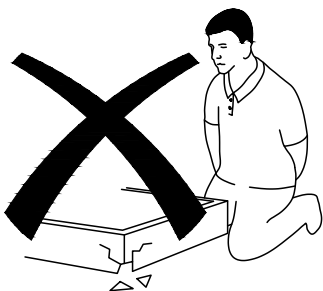

**IF UNSURE CALL
FOR ASSISTANCE**







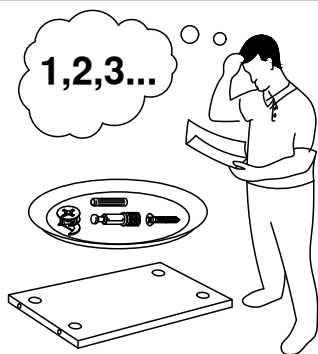


**KEEP FITTINGS AWAY
FROM CHILDREN**

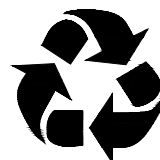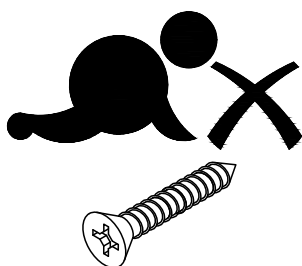




Please check that you have all the panels!

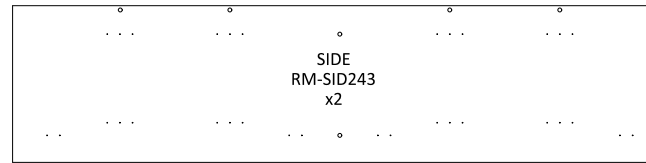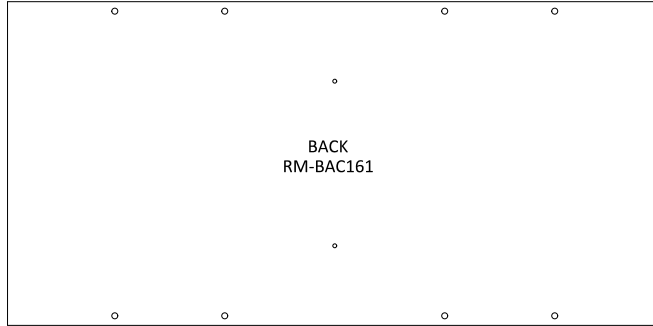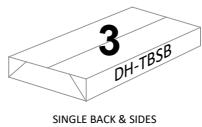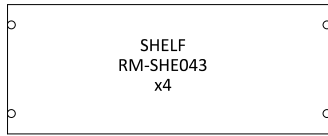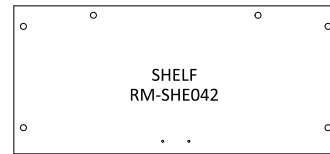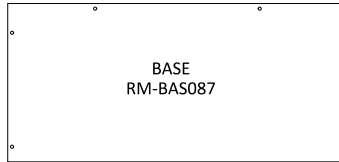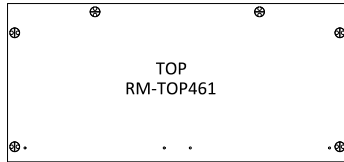

Please check that you have all the hardware!

QUANTITY - 14




24mm QUICKFIX PIN
RM-BLT006

QUANTITY - 14




15mm QUICKFIX CAM
RM-CAM03

QUANTITY - 6

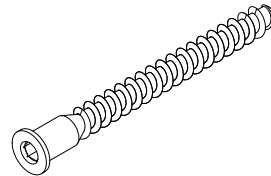


70mm CONFIRMAT SCREW
RM-CFM02

QUANTITY - 6

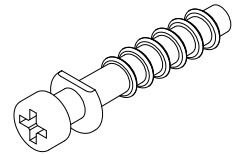


CONNECTOR SCREW
RM-PIN01

QUANTITY - 4

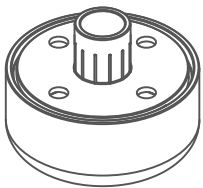


50mm ADJUSTABLE FOOT

QUANTITY - 8

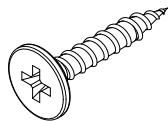


3.5 x 15mm WOOD SCREW
RM-SCR26

QUANTITY - 1

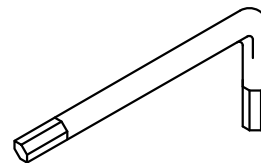


ALLEN KEY 4MM
RM-ALK01

QUANTITY - 16

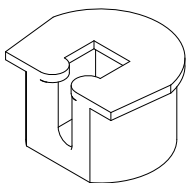

EXPANDING WEDGEFIX
SY3151

QUANTITY - 16




QUICKFIX DOWELS
SY3152

Prepare all the panels by inserting the listed fittings into the corresponding holes.

1

Step 1


Insert pins into the pre drilled holes on the side panel.

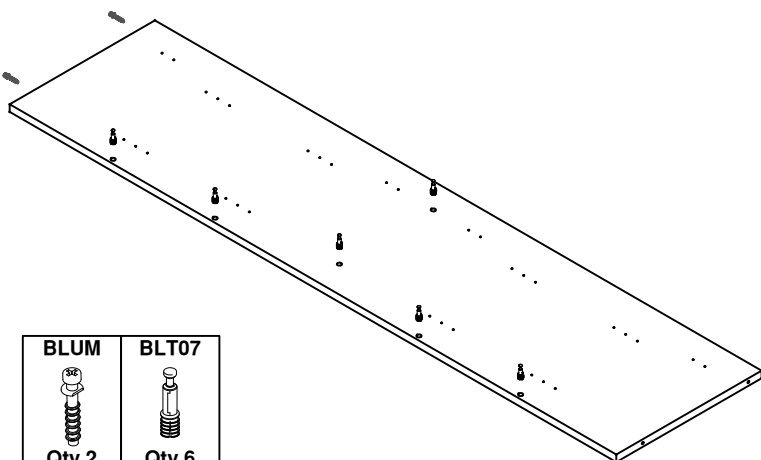

2

Step 2


Insert pins into the pre drilled holes on the side panel.

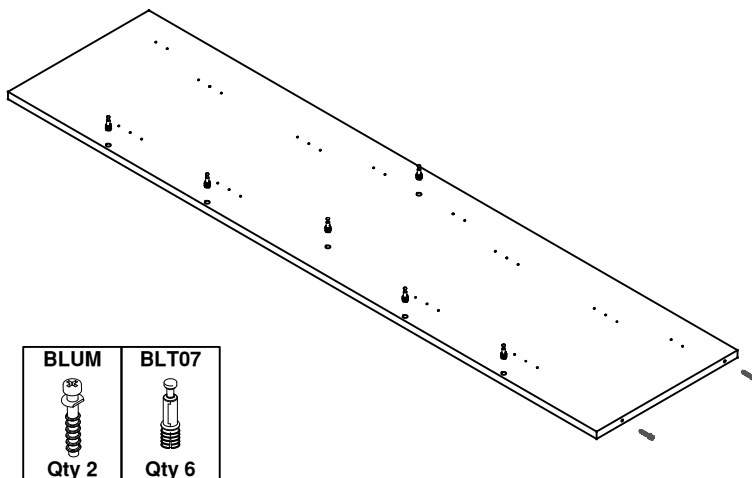

3

Step 3


Insert cams & pins into the pre drilled holes on the back panel.

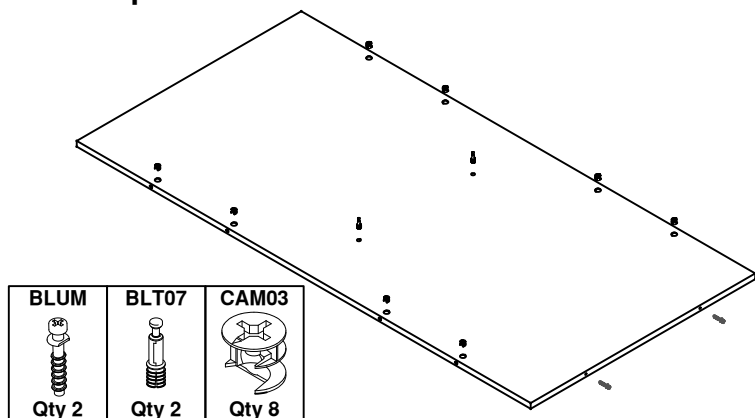

4

Step 4



Insert cams into the pre drilled holes on the fixed shelf panel.

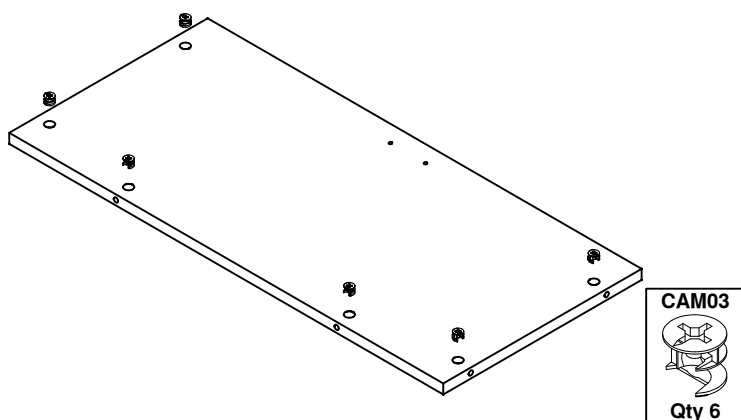

5

Step 5


Insert shelf fittings in pre drilled holes on the shelf panels. Repeat for all shelves.

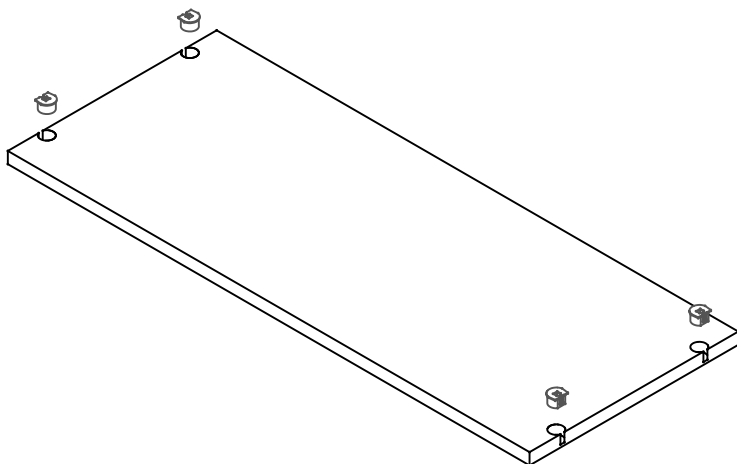

6

Step 6
Attach the fixed shelf to back panel.


Once the cams and pins are engaged ensure that the cams are fully tightened.

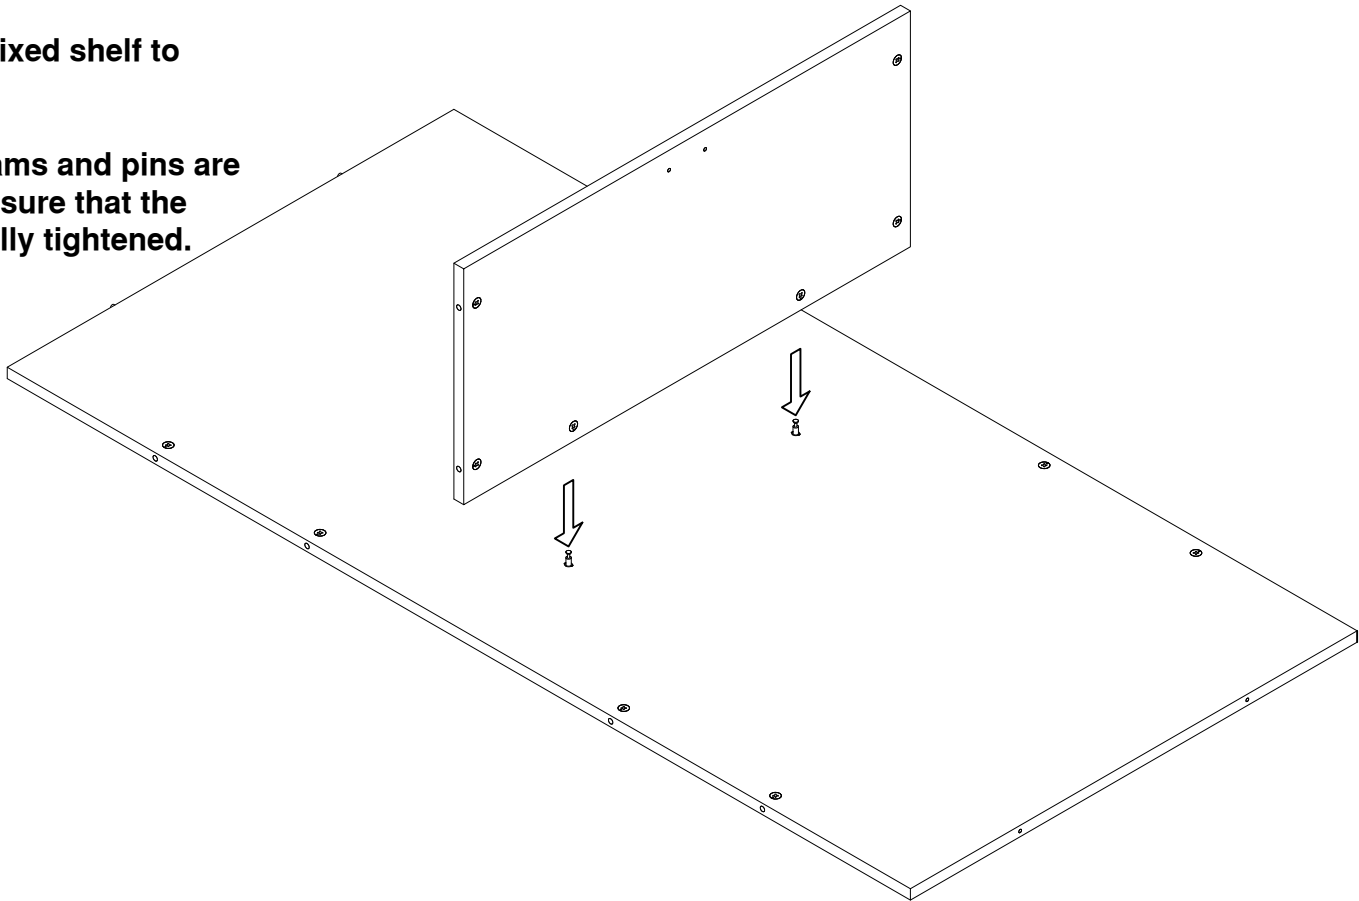

7

Step 7
Attach side panels to unit.


Once the cams and pins are engaged ensure that the cams are fully tightened.

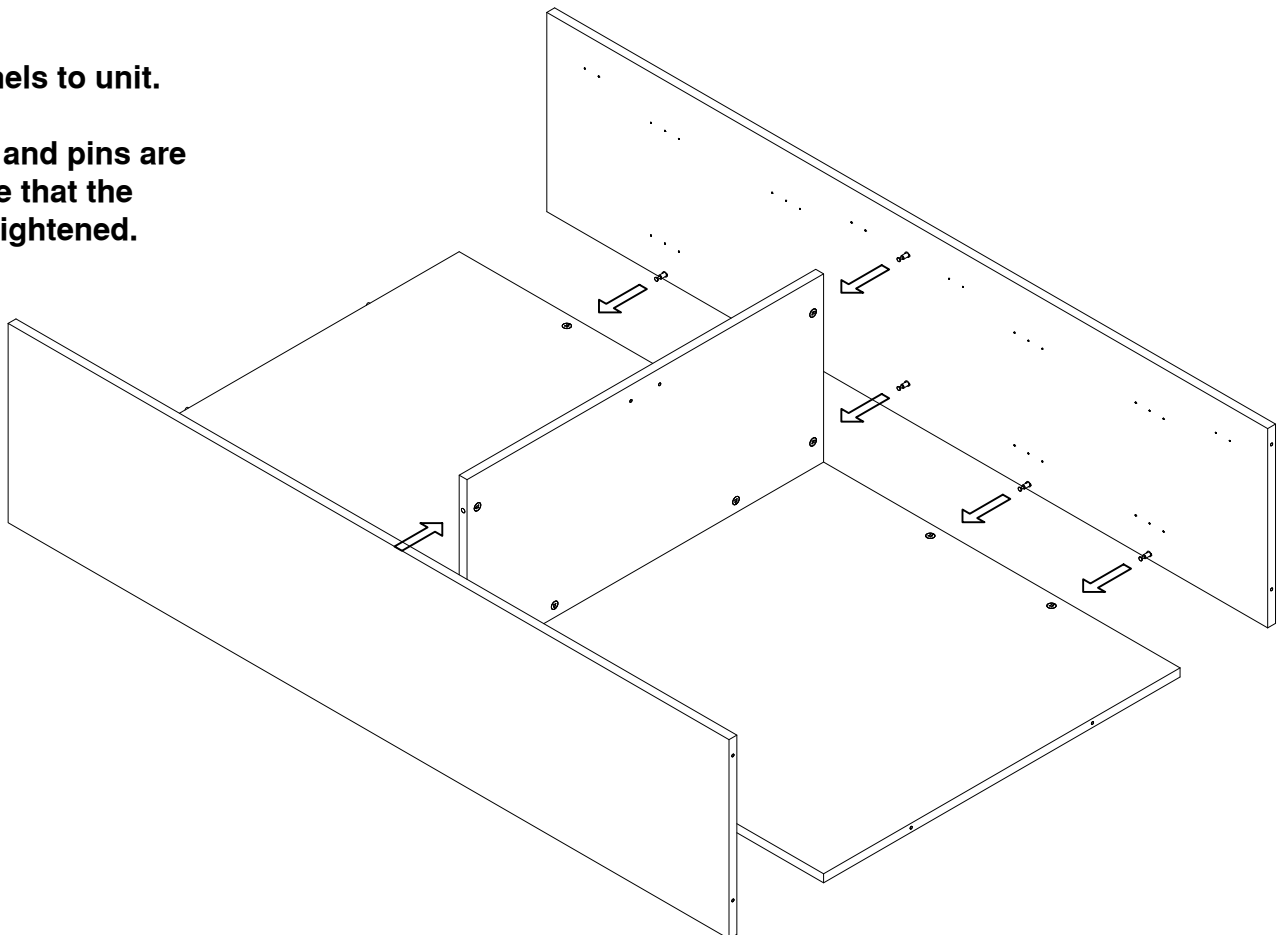

Step 8

Attach the top panel to unit.


Once the cams and pins are engaged ensure that the cams are fully tightened.

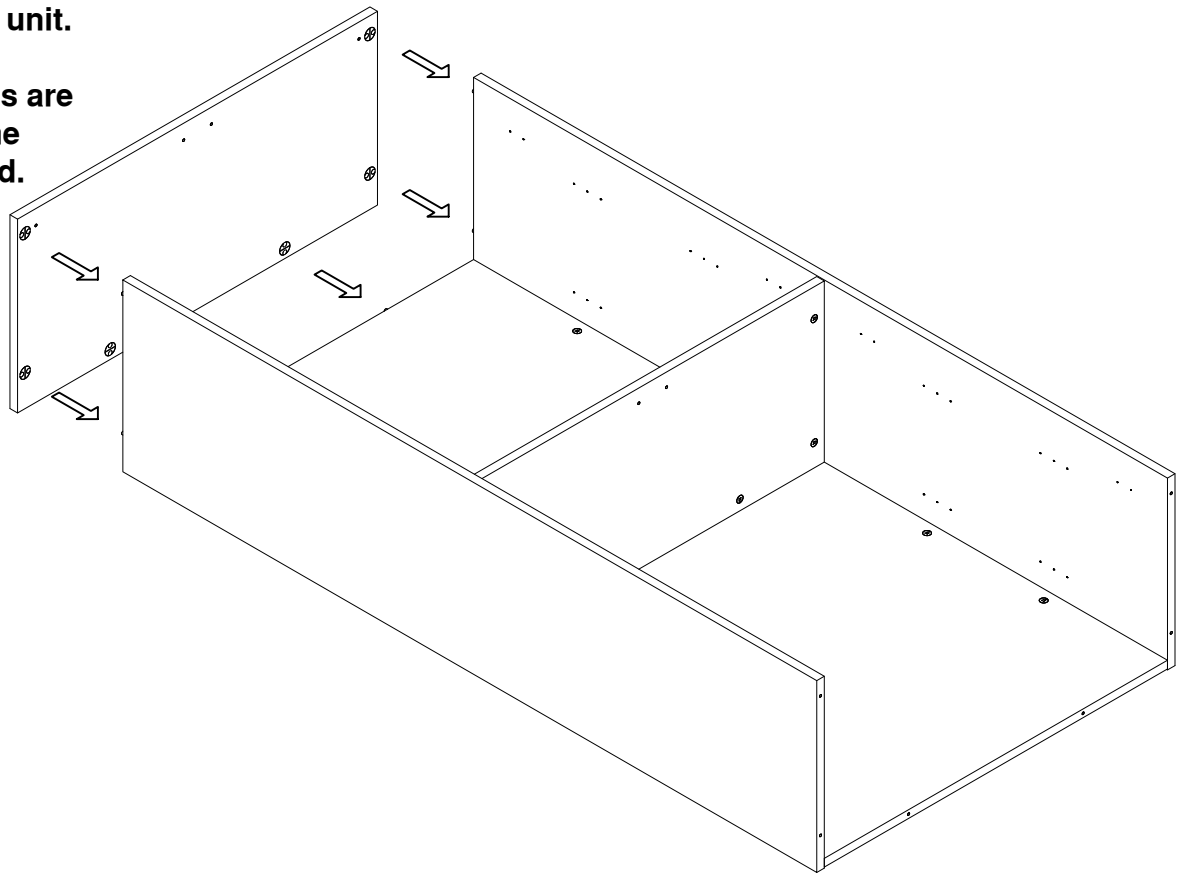**Step 9**


Attach the base to the unit using the confirmat screws provided.

A 4mm Allen key is required to insert the screws.

Ensure they are fully screwed in before attempting to attach the adjustable feet.

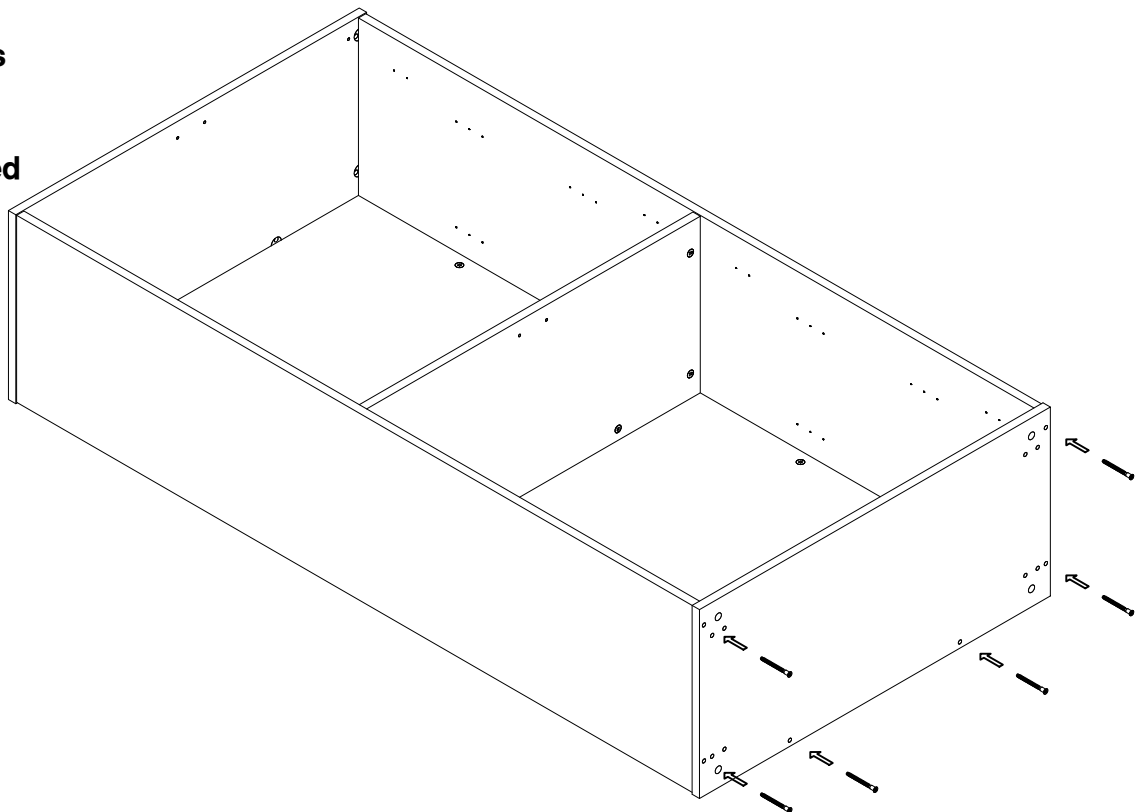

QUANTITY - 6

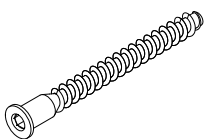


70mm CONFIRMAT SCREW
RM-CFM02

10

Step 10
Attach the 4 adjustable feet inner housings to the base of the unit.

Each foot should be attached using 2 of the 4x20mm wood screws provided.

Once attached screw on the adjustable foot outer housing.

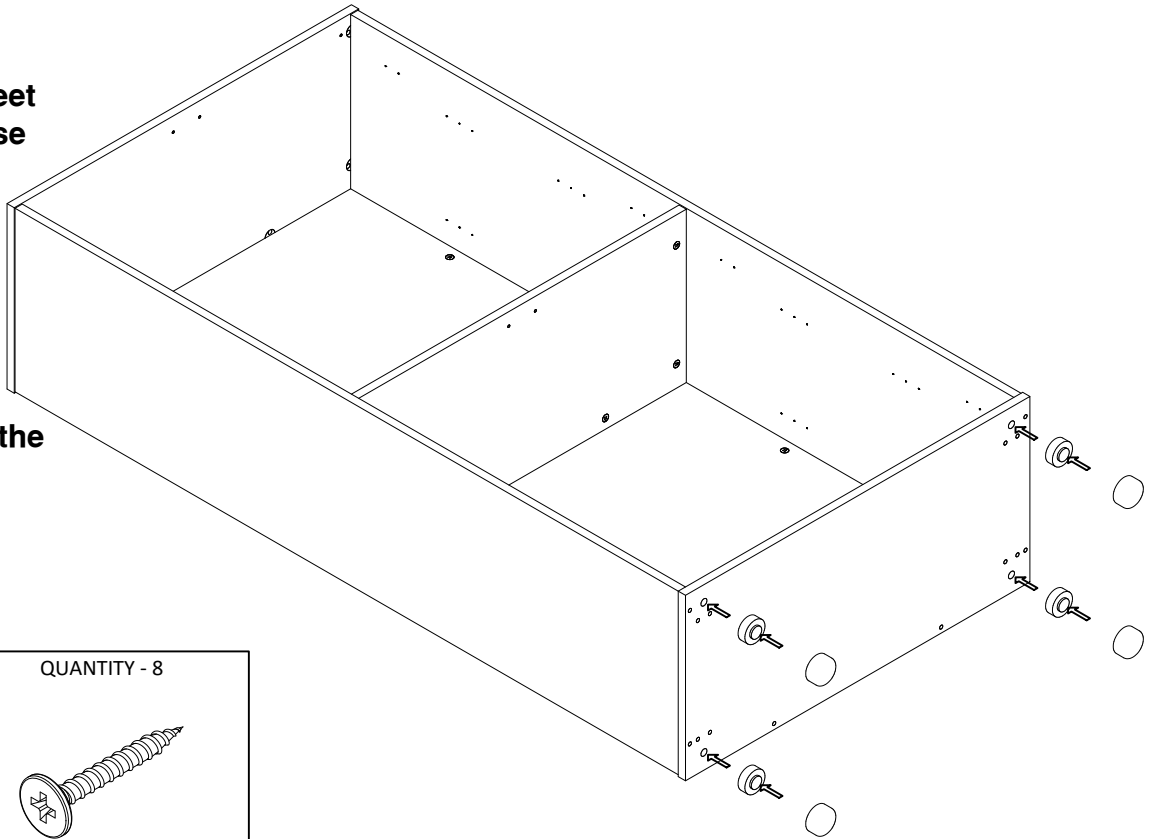


QUANTITY - 4



50mm ADJUSTABLE FOOT



QUANTITY - 8

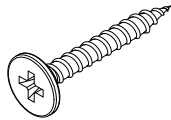


4 x 20mm WOOD SCREW
 RM-SCR37

11

Step 11
Stand unit upright, screw shelf pins into pre drilled holes in unit sides at desired heights. 2 at each side where the shelf will locate.

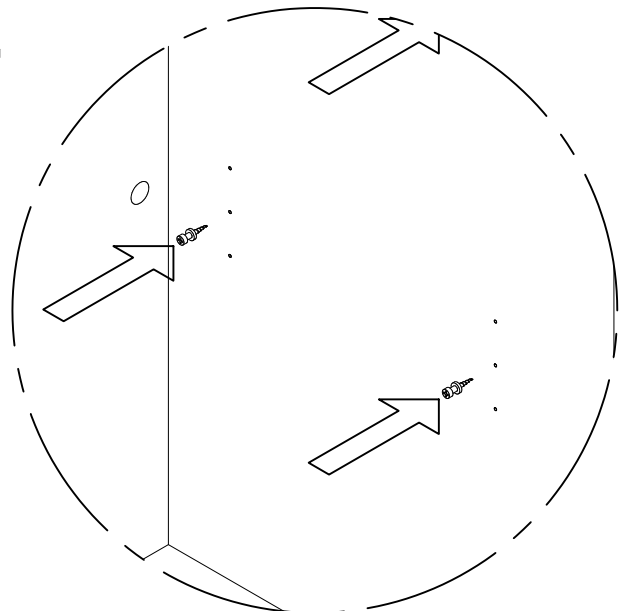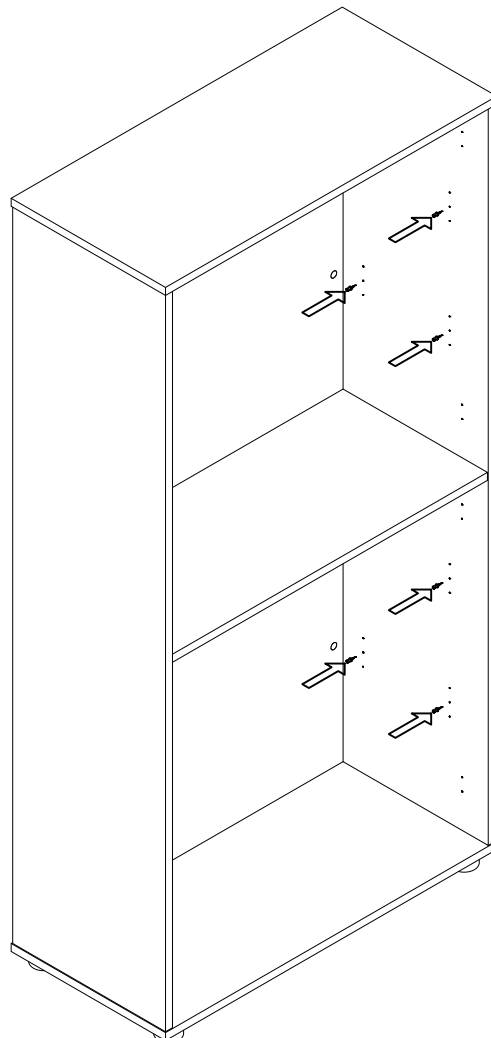


QUANTITY - 16




QUICKFIX DOWELS
 SY3152

Step 12
Drop the shelves onto the
pins making sure they fully
engage the fittings.

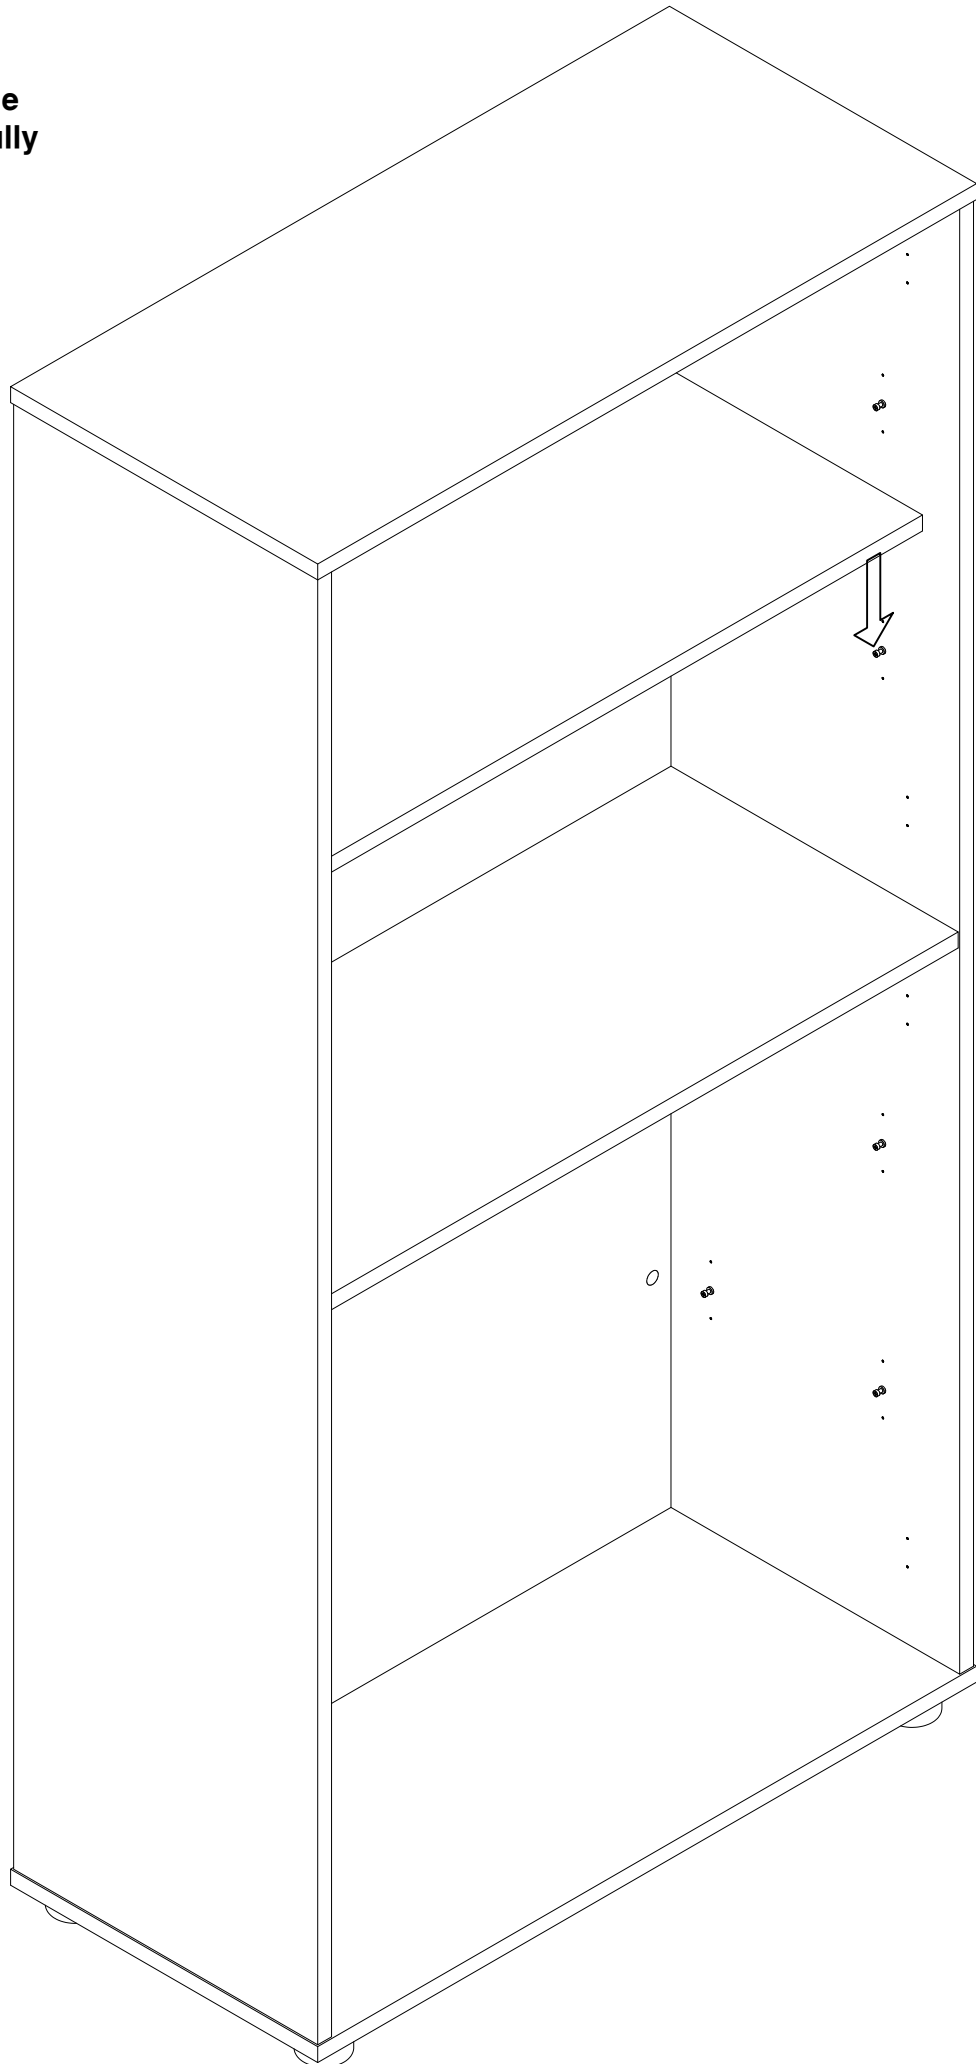

dams TALL CUPBOARD DOORS

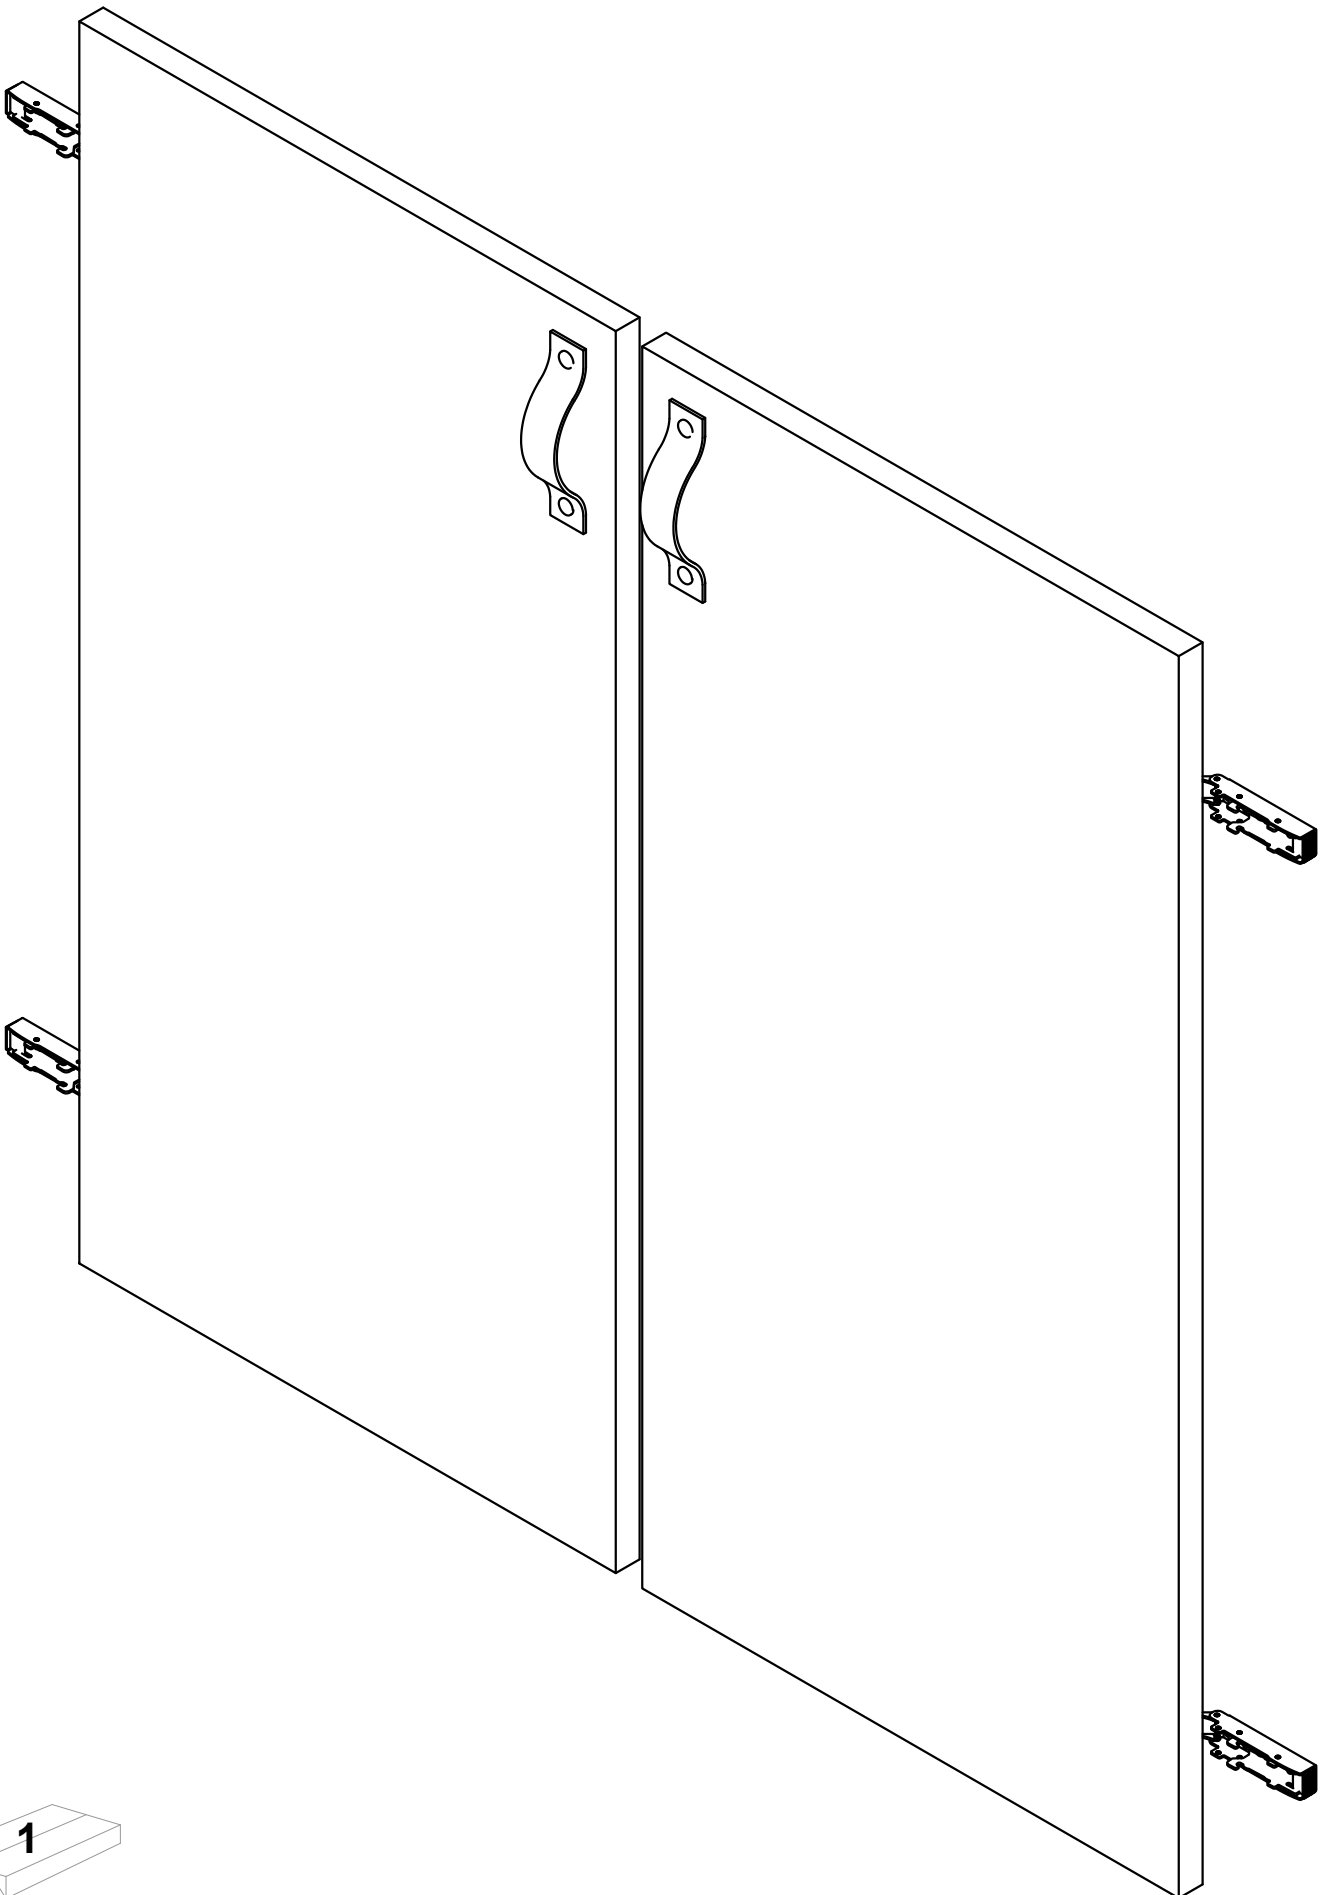









Please check that you have all the panels




Please check that you have all the hardware

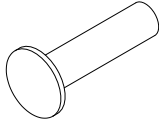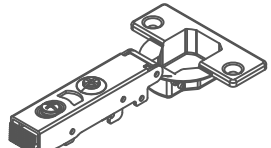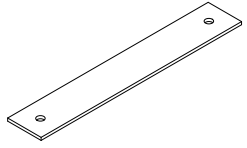


	QUANTITY - 4  M4 x 6mm SLOTTED SCREW RM-SCR27	QUANTITY - 4  M4 x 20mm BOOK SCREW RM-SCR28	QUANTITY - 8  3.5 x 15mm WOOD SCREW RM-SCR26
	QUANTITY - 4  110' CLIP ON - SOFT CLOSE	QUANTITY - 4  CLIP ON HINGE PLATE	QUANTITY - 2  LEATHER STRAP HANDLE RM-HDL18

1

Step 1
Place the hinges into the pre drilled holes on the inside face of the door panels.

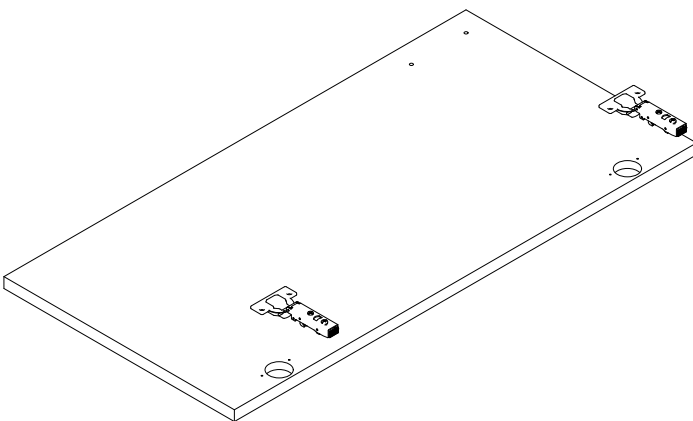


4x

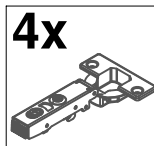

2

Step 2
Attach the hinges using the 3.5 x 15mm wood screws, 2 screws per hinge on both doors.

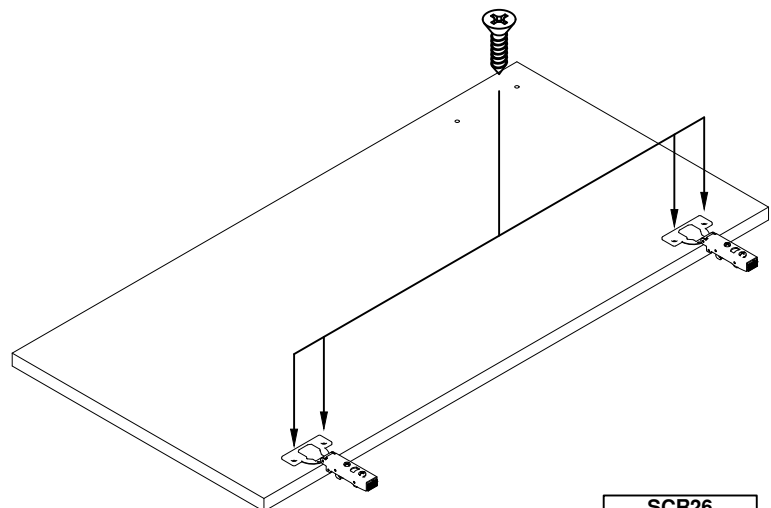

SCR26




Qty 8

3

Step 3

Attach leather handle to doors using binding screws provided.

Slotted part of screw to the inside of door.

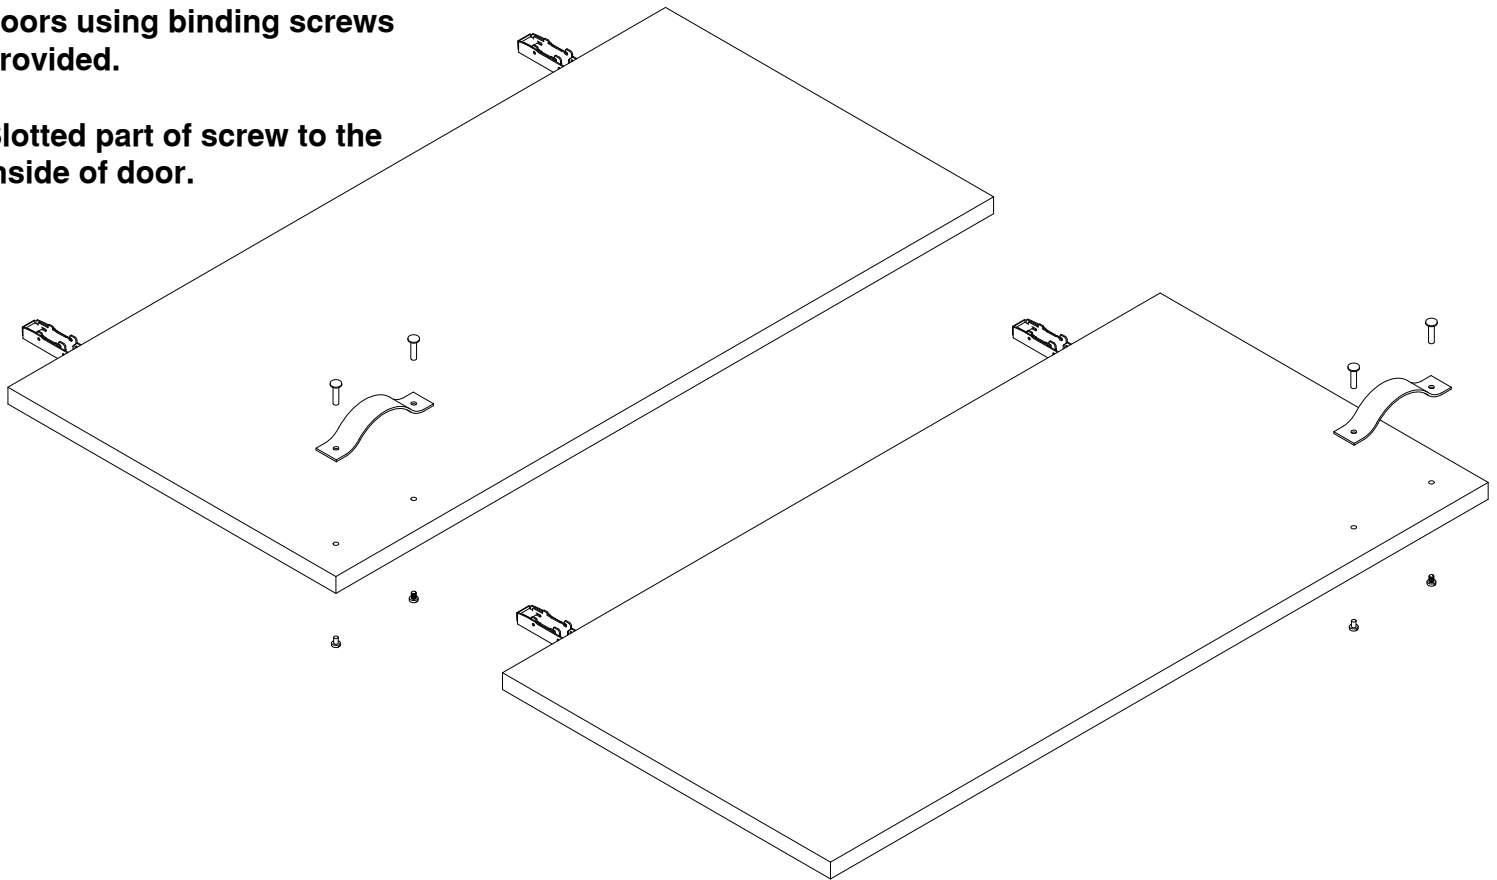

4

Step 4

Attach the hinge plates to the pre drilled holes on the inside face of the bookcase side panels, these plates are fitted with pre attached screws.

Ensure the plate is fitted as per diagram 1.

4x



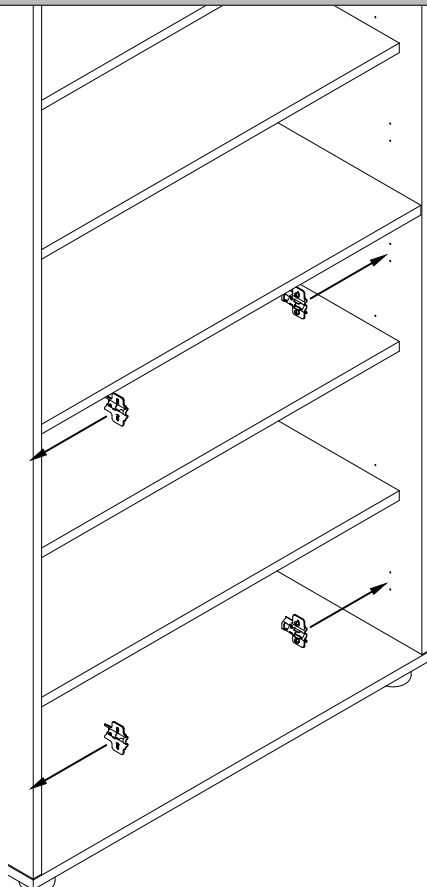


Diagram 1


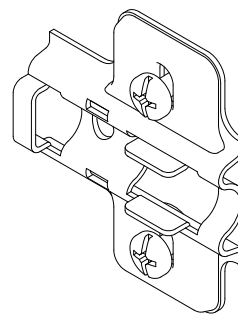


EDGE OF UNIT

Step 5


Attach doors to the unit. Diagrams 2 & 3 show how to lock the hinge to the plate. Always lock the top hinge into place first before repeating for bottom hinge.

Combination unit doors shown below, for cupboard doors repeat and rotate the top doors.

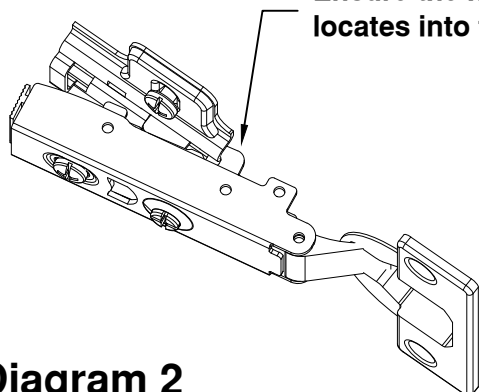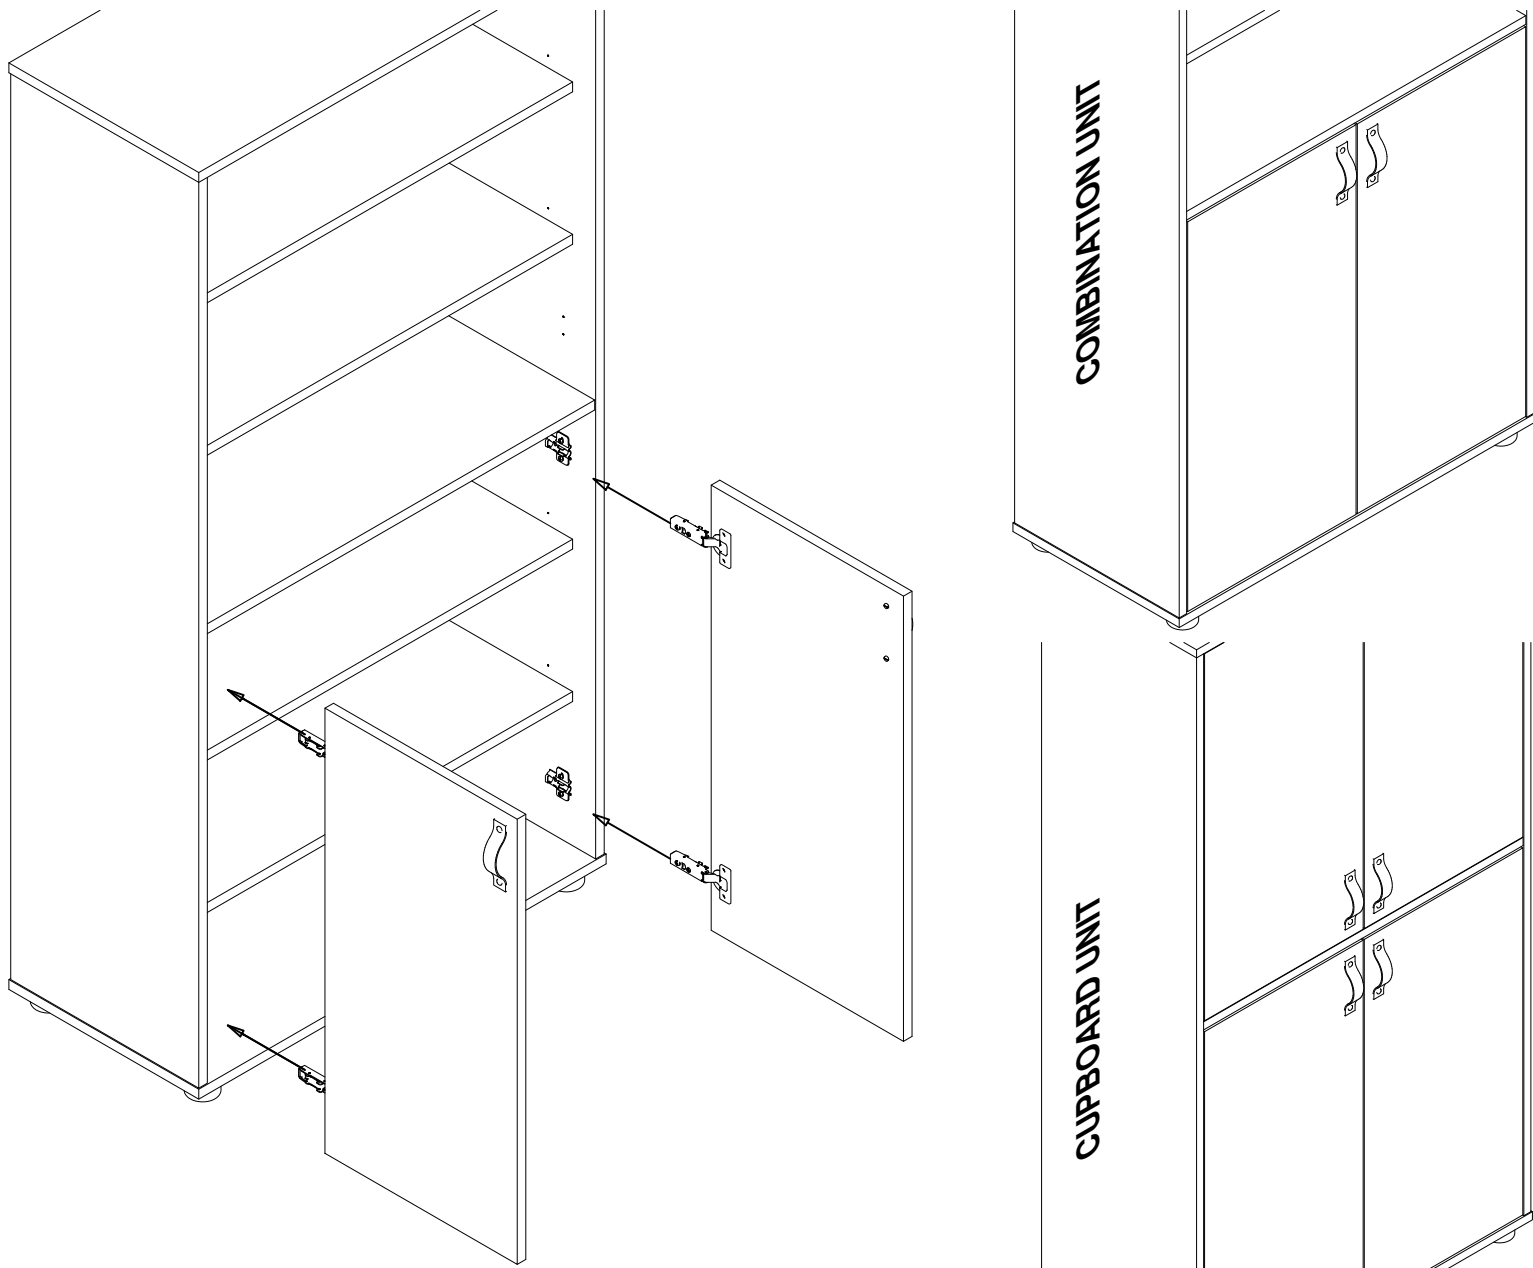

Ensure the hook of the hinge locates into the hinge plate.

Diagram 2

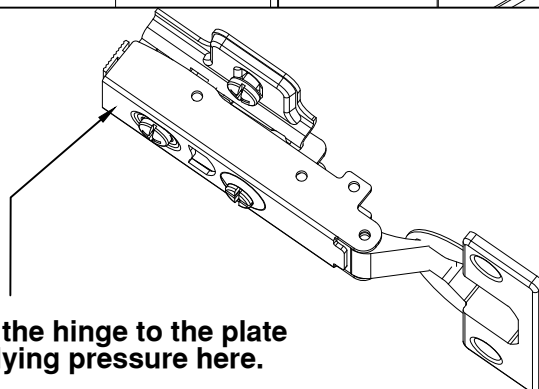

Fasten the hinge to the plate by applying pressure here.

Diagram 3