

Assembly Instructions



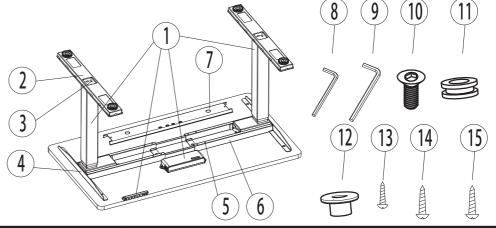

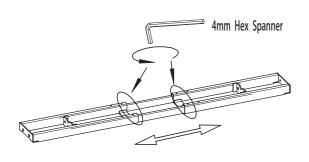

1 Loosen the M6*10 screw on the beam with 4mm hexagon wrench, then adjust the lengt of the beam according to the tops, and finally fix the beam with the M6*10 screw in the screw package and the screw on the beam.




Attach legs to the beam using 8 of M6*12 screws.


4mm Hex Spanner

M6*12 screw 8PCS


Attach feet to the legs using 8 of M8*16 screws.

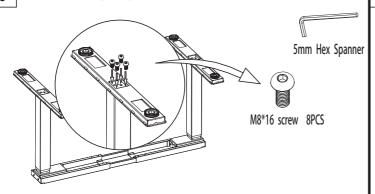

Overturn frame and attach brackets to beam using 4 of M6*12 screws.

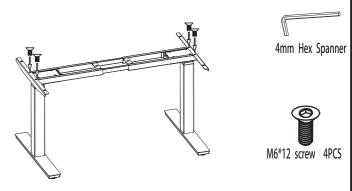

Fit the rubber cushions and plastic pad to the brackets and beam.

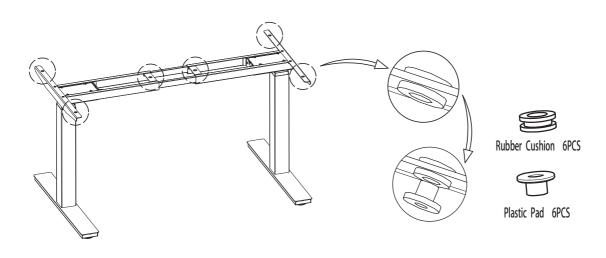

Assembly Instructions



