



www.globalindustrial.com

EUA: 888-628-3466

Canada: 888-645-2986

Mexico: 01.800.681.6940


36" x 24" TABLERO DE BORRADO SECO

Model: 695525 695814

INSTRUCCIONES DE ENSAMBLAJE

Lista de piezas


Nota: El hardware proporcionado es para la instalación de paneles de yeso. Si se desea instalar en otros materiales, el hardware debe ser adquirido por otro medio.



A x4



B x4



C x4









D x4

Herramientas Requeridas

- Cinta Métrica
- Línea de Tiza
- Taladro


- Broca de 1/4"
- Destornillador de Estrella
- Martillo

- Deslice la bandeja en la ranura inferior del tablero. Trace dos líneas de tiza horizontales en las alturas indicadas desde el piso. Si va a instalarse en un muro, perforo 4 agujeros de 1/4" como se especifica.
- Inserte los anclajes de paneles de yeso B en los agujeros y luego conecte los soportes A en la parte inferior con el tornillo C, asegurándose de que el soporte esté en la posición más baja.
- Instale los soportes A en la parte superior con el tornillo C asegurándose de que el soporte esté en la más alta posición. Apriete el tornillo lo más suficiente para que el soporte pueda ser ajustado hacia abajo con el martillo.
- Coloque el tablero en los soportes inferiores asegurándose de centrarlo. Adjunte el soporte al tablero con el tornillo D.
- Ajuste los soportes superiores hacia abajo hasta que toquen la parte superior del tablero. Adjunte el soporte al tablero usando el tornillo D.

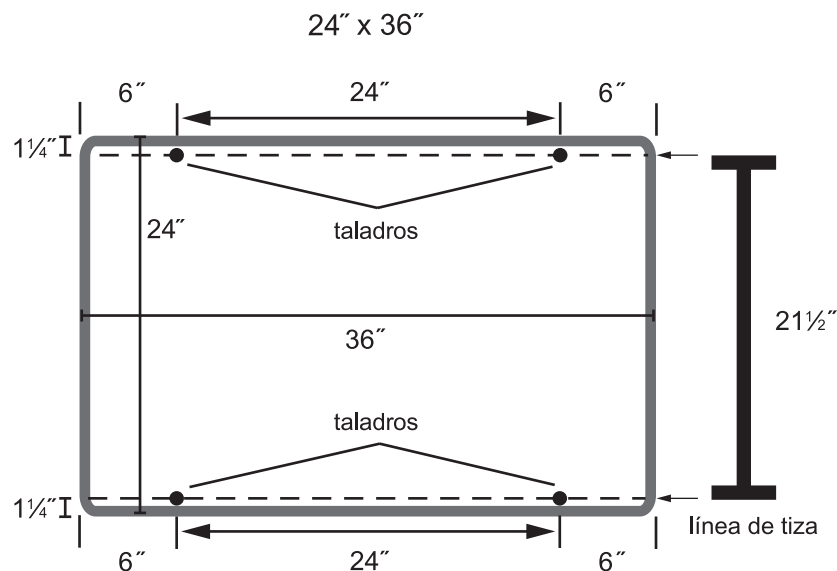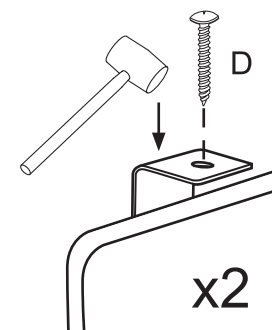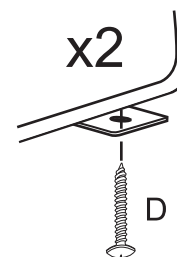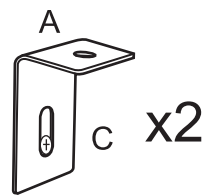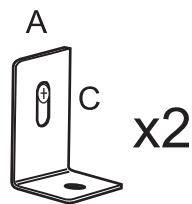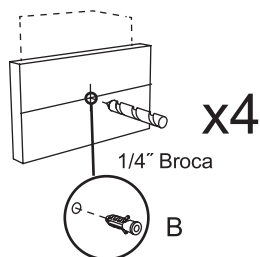


Parts List


Note: Hardware provided is for drywall installation. If attaching to other material fasteners are to be furnished by other.



A x4



B x4



C x4



D x4

Tools Required

- Tape Measure
- Chalk Line
- Drill

- 1/4" Drill Bit
- Extended Drive Phillips
- Hammer

- 1 Slide tray into groove on bottom of wall board. Snap two horizontal chalk lines at the heights indicated from the floor. If attaching to drywall drill four 1/4" holes as specified.
- 2 Insert drywall anchors B into holes then attach brackets A at the bottom with screw C making sure the bracket is in the lowest position.
- 3 Attach brackets A at the top with screw C making sure the bracket is in the highest position. Tighten screw just enough so that the bracket can be tapped down with hammer.
- 4 Place white board on lower brackets making sure to center it. Attach bracket to wallboard using screw D.
- 5 Tap the top brackets down so they are touching the top of the board. Attach bracket to wallboard using screw D.

