

PRO Series

PR0 MP245G (3PC1) PR0 MP245PG (3PC1)

User Guide

Contents

Getting Started
Package Contents
Installing the Monitor Stand
Adjusting the Monitor
Monitor Overview
Connecting the Monitor to PC11
OSD Setup
Navi Key
Hot Key
OSD Menus
Professional
Image
Input Source
Navi Key
Settings
Specifications
Preset Display Modes
Troubleshooting
Safety Instructions
TÜV Rheinland Certification
ENERGY STAR Certification
Regulatory Notices

Revision

V1.1, 2024/11

Getting Started

This chapter provides you with the information on hardware setup procedures. While connecting devices, be careful in holding the devices and use a grounded wrist strap to avoid static electricity.

Package Contents

Monitor	PR0 MP245G	PRO MP245PG	
Documentation	Quick Start Guide		
	Stand	Stand with Screw(s)	
Accessories	Stand Base with Screw(s)		
	Power Cord		
Cables	High Speed HDMI™ Cable (Optional)		




- Contact your place of purchase or local distributor if any of the items is damaged or missing.
- Package contents may vary by country.
- The included power cord is exclusively for this monitor and should not be used with other products.

Installing the Monitor Stand

Important


- Place the monitor on a soft, protected surface to avoid scratching the display panel.
- Do not use any sharp objects on the panel.

- 1. Leave the monitor in its protective packaging.
- 2. Align and gently push the stand bracket towards the monitor groove until it locks in place.
- **3.** Connect the base to the stand.
- **4.** Make sure the stand assembly is properly installed before setting the monitor upright.

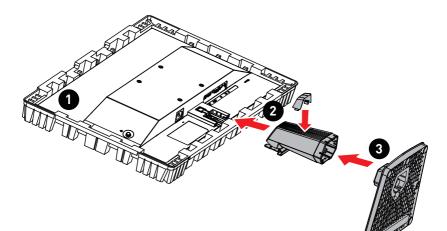

PRO MP245PG

- 1. Leave the monitor in its protective packaging. Align the stand bracket to the monitor groove.
- 2. Tighten the stand bracket with screws.
- 3. Connect the base to the stand and tighten the base screw to secure the base.
- **4.** Make sure the stand assembly is properly installed before setting the monitor upright.

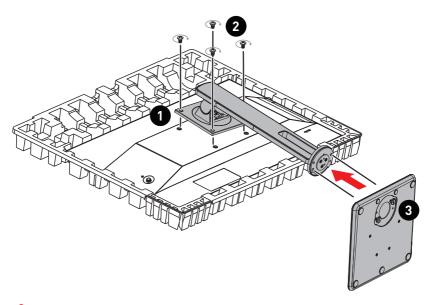

Important

- The back of the monitor can also be used for wall mount. Please contact your dealer for proper wall mount kit.
- This product comes with NO protective film to be removed by the user! Any mechanical damages to the product including removal of the polarizing film may affect the warranty!




Adjusting the Monitor


This monitor is designed to maximize your viewing comfort with its adjustment capabilities.


Important


- Avoid touching the display panel when adjusting the monitor.
- Please slightly tilt the monitor backwards before pivoting it.






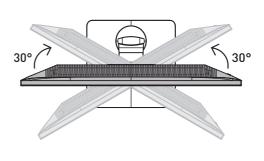


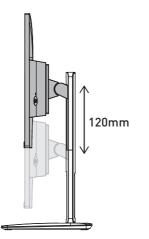

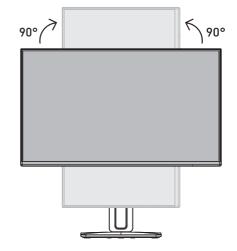

Monitor Overview

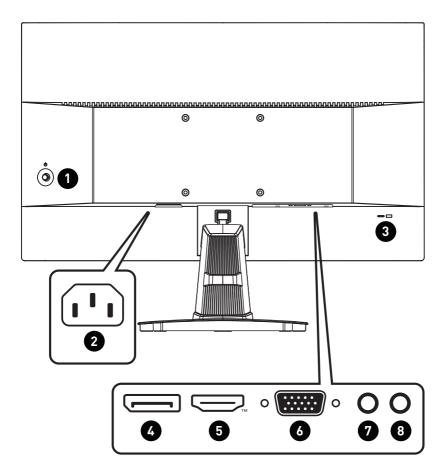

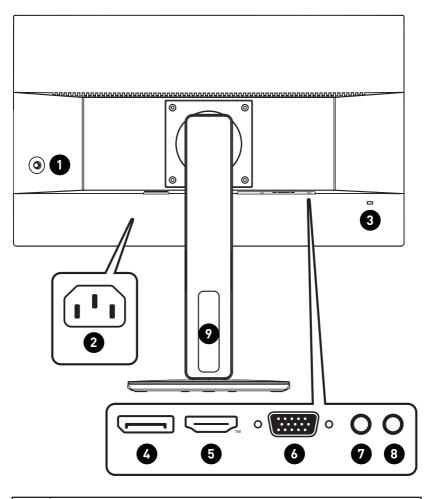



1	Power Button & Navi Key
2	Power Jack
3	Kensington Lock
4	DisplayPort
	Supports 1920x1080@100Hz as specified in DisplayPort 1.2.

5	
	Supports 1920x1080@100Hz as specified in HDMI™ 1.4b.
	Important
	To ensure optimal performance and compatibility, please use only HDMI™ cables certified with the official HDMI™ logo when connecting this monitor. For more information, please visit <u>https://www.hdmi.org/resource/cables</u> .
6	D-Sub Port
9	Line-In Jack
	For audio playback through the speakers, connect the device's Line-out jack to this Line-in jack when using the D-Sub port.
8	Headphone Jack
9	Cable Routing Hole

Connecting the Monitor to PC

- 1. Turn off your computer.
- 2. Connect the video cable from the monitor to your computer.
- 3. Connect the power cord to the monitor power jack. (Figure A)
- 4. Plug the power cord into the electrical outlet. (Figure B)
- 5. Turn on the monitor. (Figure C)
- 6. Power on the computer and the monitor will auto detect the signal source.

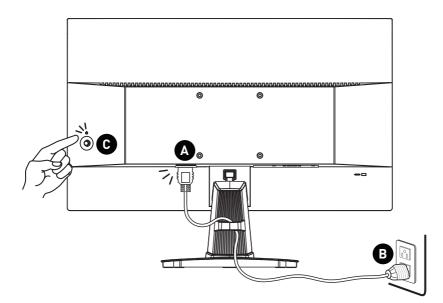

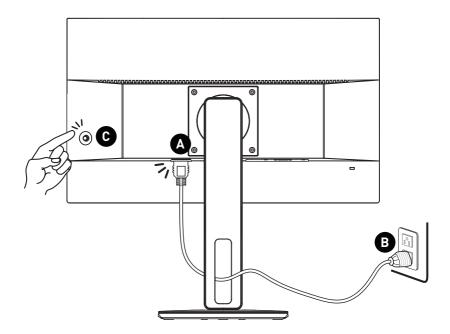

OSD Setup


This chapter provides you with essential information on OSD Setup.




All information is subject to change without prior notice.

Navi Key

The monitor comes with a Navi Key, a multi-directional control that helps navigate the On-Screen Display (OSD) menu.

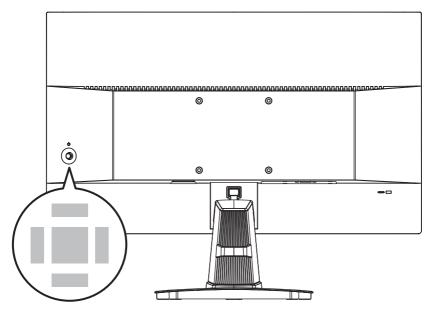

PRO MP245PG

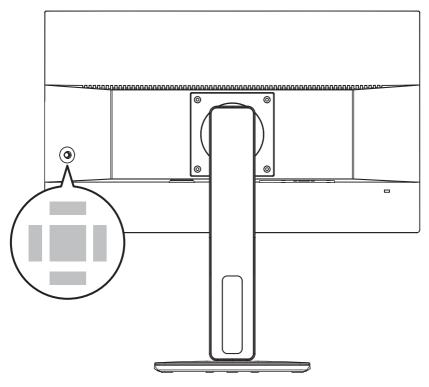

Up/ Down/ Left/ Right:

- selecting function menus and items
- adjusting function values
- entering into/exiting from function menus

Middle:

- launching the On-Screen Display (OSD)
- entering submenus
- confirming a selection or setting

Hot Key

- Users may enter into preset function menus by moving the Navi Key up, down, left or right when the OSD menu is inactive.
- Users may customize their own Hot Keys to enter into different function menus.

OSD Menus

III5I 192	20x1080 60 HZ		Eco	HDMI
Professional	Mode		✓ Eco	
🐆 Image	Response Time		User	
→ Input Source		OFF	Anti-Blue	
Navi Key	Refresh Rate Movie			
Settings	Alarm Clock		Office	
Eye-Q Check			Black-White	
	Screen Assistance			
	\sim			
PRO MP245G FW.005		∎ Exit	Move	Enter

Professional

1st Level Menu	2nd/3rd Level Menu		Description	
Mode	Eco		• Use Up or Down Button to select and preview mode effects.	
	User			ton to confirm and apply
	Anti-Blue		your mode type.	
	Movie			
	Office			
	Black-White			
Response Time	Normal		• Users can adjust Res	ponse Time in any
	Fast		mode.	
	Fastest			
MPRT	OFF		Activating MPRT will affect:	
	ON		Affected Function	Function Status
			» Brightness	Unable to select
			» HDCR	Set to OFF
			» Adaptive-Sync	
Refresh Rate	Location	Left Top	Location is adjustable in OSD Menu. Press	
	Right Top Left Bottom Right Bottom		 the Middle Button to confirm and apply your Refresh Rate Location. This monitor follows and works at the Operating System's preset Screen Refresh Rate. 	
	ON			

1st Level Menu	2nd/3rd Level	Menu	Description	
Alarm Clock	Location	Left Top		
		Right Top	 Button to activate the timer. Users have to manually restore their preset Alarm Clock after any AC power loss and reconnection. 	
		Left Bottom		
		Right Bottom		
	OFF			
	15:00	00:01 ~ 99:59		
	30:00]		
	45:00	1		
	60:00]		
Eye-Q Check	OFF		Select OFF to disab	le Eye-Q Check.
			Activating Eye-Q Ch	eck will affect:
			Affected Function	Function Status
			» Info. On Screen	» Set to OFF
	Amsler Grid		• Select Amsler Grid vision field.	to check your central
	Astigmatism		 Select Astigmatism vision. 	to check your blurred
	Posture Correction		Select Posture Corr posture when sittin	rection to improve your g.
Screen Assistance	None		• Users can select the color of the crosshair.	
	$\begin{bmatrix} +1 & -1 + 1 \\ -1 +1 +1 \\ -1 +$			
Screen Size	Auto 4:3			creen Size in any mode, any screen refresh rate.
	16:9			
Adaptive-Sync	OFF		Adaptive-Sync prev	ents screen tearing.
	ON			

Image

1st Level Menu	2nd/3rd Level Menu		Description	
Brightness	0-100		• Properly adjust Brightness according to the surrounding lighting.	
Contrast	0-100		Properly adjust Contr	ast to relax your eyes.
Sharpness	0-5		• Sharpness improves images.	clarity and details of
Image	OFF		Image Enhancement	
Enhancement	Weak		to improve their acut	ance.
	Medium]	
	Strong			
	Strongest			
Low Blue Light	OFF		Low Blue Light protein	
	ON		 blue light. When enal adjusts the screen co more yellow glow. When Mode is set to / mandatory to enable 	lor temperature to a Anti-Blue, it is
HDCR	OFF		HDCR enhances image	
	ON		the contrast of images.Activating HDCR will affect:	
			Affected Function Function Status	
			» Brightness	Unable to select
			» MPRT	Set to OFF
Color Temperature	Cool		Use Up or Down Butte	on to select and
	Normal		preview mode effects	
	Warm		 Press the Middle Button to confirm and apply your mode type. 	
	Customization	R (0-100)	Users can adjust Colo Customization mode.	or Temperature in
		G (0-100)		
		B (0-100)		
Auto Config			 For D-Sub only, this so out when detecting of 	
Clock	0-100		• Adjust Clock setting.	
			 For D-Sub only, this so out when detecting of 	
Phase	0-100		Adjust Phase setting.	
			 For D-Sub only, this sout when detecting of 	
H.Position	0-100		Adjust H.Position set	ting.
			 For D-Sub only, this so out when detecting of 	

1st Level Menu	2nd/3rd Level Menu	Description
V.Position	0-100	 Adjust V.Position setting. For D-Sub only, this setting will be grayed out when detecting other input sources.

Input Source

1st Level Menu	2nd Level Menu	Description
HDMI™		Users can adjust Input Source in any mode.
DP		
D-Sub		
Auto Scan	OFF ON	 Users can use the Navi Key to select Input Source at below status: While "Auto Scan" is set to "OFF" with the monitor at power saving mode; While "No Signal" message box is shown on the monitor.

Navi Key

1st Level Menu	2nd Level Menu	Description
Up	OFF	All Navi Key items can be adjusted via OSD Menus.
Down	Brightness	
Left Right	Mode	
Right	Alarm Clock	
	Input Source	
	Refresh Rate	
	Info. On Screen	
	Audio Volume	

Settings

1st Level Menu	2nd Level Menu	Description
Language	繁體中文	• Users have to press the Middle Button to confirm and
	English	apply the Language setting.
	Français	 Language is an independent setting. Users' own language setting will override the factory. When
	Deutsch	users set Reset to Yes, Language will not be changed.
	Italiano	
	Español	
	한국어	
	日本語	
	Русский	
	Português	
	简体中文	
	Bahasa Indonesia	
	Türkçe	
	(More languages coming soon)	
Transparency	0~5	• Users can adjust Transparency in any mode.
OSD Time Out	5~30s	• Users can adjust OSD Time Out in any mode.
Power Button	OFF	• When set to OFF, users can press the power button to turn off the monitor.
	Standby	• When set to Standby, users can press the power button to turn off the panel and backlight.
Info. On Screen	OFF	• The information of the monitor status will be shown
	ON	on the right side of the screen.Activating Info. On Screen will affect:
		Affected Function Function Status
		» Eye-Q Check Set to OFF
Audio Volume	0-100	• Users can adjust Audio Volume in any mode.
Reset	YES	Users can Reset and restore settings to original OSD
	NO	Default in any mode.

Specifications

Monitor	PRO MP245G	PR0 MP245PG		
Size	23.8 inch			
Curvature	Flat			
Panel Type	IPS			
Resolution	1920x1080 (FHD)			
Aspect Ratio	16:9			
Brightness	Typical SDR: 300 nits			
Contrast Ratio	1300:1			
Refresh Rate	100Hz			
Response Time	1ms (MPRT)			
Response Time	4ms (GTG)			
	• 1 x HDMI [™] Connector			
	• 1 x DisplayPort			
I/O	• 1 x D-Sub Port			
	• 1 x Headphone Jack			
	• 1 x Line-In Jack			
View Angles	178°(H) , 178°(V)			
DCI-P3*/ sRGB	81% / 102%			
Surface Treatment	Anti-glare			
Display Colors	16.7M 8bits (6bits + FRC)			
Speaker	2W x 2			
Monitor Power Options	100~240Vac, 50/60Hz, 0.75A			
5 6 V	Power On < 18W			
Power Consumption (Typical)	Standby < 0.5W			
(Typical)	Power Off < 0.3W			
Adjustment (Tilt)	-5° ~ 20°			
Adjustment (Height)		0 ~ 120mm (±5)		
Adjustment (Swivel)		-30° ~ 30°		
Adjustment (Pivot)	-90° ~ 90°			
Kensington Lock	Yes			

Monitor		PRO MP245G	PR0 MP245PG		
VESA Mounting		• Plate Type: 100 x 100 mm			
		• Screw Type: M4 x 10 mm			
		• Thread Diameter: 4 mm			
		• Thread Pitch: 0.7 mm			
		• Thread Length: 10 mm			
Dimension (W x H x D)		539.8 x 414.4 x 207.2 mm	539.8 x 400.8 x 228.9 mm		
Weight	Net	3.19 kg	4.62 kg		
	Gross	5.12 kg	7.00 kg		
		• Temperature: 0°C to 40°C			
	Operating	 Humidity: 20% to 90%, non-condensing 			
Environment		• Altitude: 0 ~ 5000m			
	Storage	• Temperature: -20°C to 60°C			
		• Humidity: 10% to 90%, non-condensing			

* Based on CIE1976 test standards.

Preset Display Modes

Important

All information is subject to change without prior notice.

Charles I.	Develoption		Default Standard Mode		
Standard	Resolution		HDMI™	DP	D-Sub
VGA	640x480	@60Hz	V	V	V
		ର67Hz	V	V	V
		ଗ72Hz	V	V	V
		@75Hz	V	V	V
SVGA	800x600	@56Hz	V	V	V
		@60Hz	V	V	V
		ି Marana Mar	V	V	V
		ି Maran Ma Maran Maran	V	V	V
XGA	1024x768	@60Hz	V	V	V
		ି a70Hz	V	V	V
		@75Hz	V	V	V
SXGA	1280x1024	@60Hz	V	V	V
		@75Hz	V	V	V
WXGA+	1440x900	@60Hz	V	V	V
WSXGA+	1680x1050	@60Hz	V	V	V
Full HD	1920x1080	@60Hz	V	V	V
		@85Hz	V	V	
		@100Hz	V	V	
Video Timing	480P		V	V	
Resolution	576P		V	V	
	720P		V	V	
	1080P @60Hz		V	V	

Troubleshooting

The power LED is off.

- Press the monitor power button again.
- Check if the monitor power cable is properly connected.

No image.

- Check if the computer graphics card is properly installed.
- Check if the computer and monitor are connected to electrical outlets and are turned on.
- Check if the monitor signal cable is properly connected.
- The computer may be in Standby mode. Press any key to activate the monitor.

The screen image is not properly sized or centered.

• Refer to Preset Display Modes to set the computer to a setting suitable for the monitor to display.

No Plug & Play.

- Check if the monitor power cable is properly connected.
- Check if the monitor signal cable is properly connected.
- Check if the computer and graphics card are Plug & Play compatible.

The icons, font or screen are fuzzy, blurry or have color problems.

- Avoid using any video extension cables.
- Adjust brightness and contrast.
- Adjust RGB color or tune color temperature.
- Check if the monitor signal cable is properly connected.
- Check for bent pins on the signal cable connector.

The monitor starts flickering or shows waves.

- Change the refresh rate to match the capabilities of your monitor.
- Update your graphics card drivers.
- Keep the monitor away from electrical devices that may cause electromagnetic interference (EMI).

Safety Instructions

- Read the safety instructions carefully and thoroughly.
- All cautions and warnings on the device or User Guide should be noted.
- Refer servicing to qualified personnel only.

Power

- Make sure that the power voltage is within its safety range and has been adjusted properly to the value of 100~240V before connecting the device to the power outlet.
- If the power cord comes with a 3-pin plug, do not disable the protective earth pin from the plug. The device must be connected to an earthed mains socket-outlet.
- Please confirm the power distribution system in the installation site shall provide the circuit breaker rated 120/240V, 20A (maximum).
- Always disconnect the power cord or switch the wall socket off if the device would be left unused for a certain time to achieve zero energy consumption.
- Place the power cord in a way that people are unlikely to step on it. Do not place anything on the power cord.
- If this device comes with an adapter, use only the MSI provided AC adapter approved for use with this device.

Environment

- To reduce the possibility of heat-related injuries or of overheating the device, do not place the device on a soft, unsteady surface or obstruct its air ventilators.
- Use this device only on a hard, flat and steady surface.
- To prevent the device from tipping over, secure the device to a desk, wall or fixed object with an anti-tip fastener that helps to properly support the device and keep it safe in place.
- To prevent fire or shock hazard, keep this device away from humidity and high temperature.
- Do not leave the device in an unconditioned environment with a storage temperature above 60°C or below -20°C, which may damage the device.
- The maximum operating temperature is around 40°C.
- When cleaning the device, be sure to remove the power plug. Use a piece of soft cloth rather than industrial chemical to clean the device. Never pour any liquid into the opening; that could damage the device or cause electric shock.
- Always keep strong magnetic or electrical objects away from the device.

- If any of the following situations arises, get the device checked by service personnel:
 - The power cord or plug is damaged.
 - Liquid has penetrated into the device.
 - The device has been exposed to moisture.
 - The device does not work well or you can not get it working according to the User Guide.
 - The device has dropped and damaged.
 - The device has obvious sign of breakage.

TÜV Rheinland Certification

TÜV Rheinland Low Blue Light Certification

Blue light has been shown to cause eye fatigue and discomfort. MSI now offers monitors with TÜV Rheinland Low Blue Light certification to ensure users' eye comfort and well-being. Please follow the instructions below to reduce the symptoms from extended exposure to the screen and blue light.

- Place the screen 20 28 inches (50 70 cm) away from your eyes and a little below eye level.
- Consciously blinking the eyes every now and then will help to reduce eye strain after extended screen time.
- Take breaks for 20 minutes every 2 hours.
- Look away from the screen and gaze at a distant object for at least 20 seconds during breaks.
- Make stretches to relieve body fatigue or pain during breaks.
- Turn on the optional Low Blue Light function.

TÜV Rheinland Flicker Free Certification

- TÜV Rheinland has tested this product to ascertain whether the display produces visible and invisible flicker for the human eye and therefore strains the eyes of users.
- TÜV Rheinland has defined a catalogue of tests, which sets out minimum standards

at various frequency ranges. The test catalogue is based on internationally applicable standards or standards common within the industry and exceeds these requirements.

- The product has been tested in the laboratory according to these criteria.
- The keyword "Flicker Free" confirms that the device has no visible and invisible flicker defined in this standard within the range of 0 3000 Hz under various brightness settings.
- The display will not support Flicker Free when Anti Motion Blur/MPRT is enabled. (The availability of Anti Motion Blur/MPRT varies by products.)

ENERGY STAR Certification

ENERGY STAR is a program run by the U.S. Environmental Protection Agency (EPA) and U.S. Department of Energy (DOE) to promote energy efficiency. This product qualifies for ENERGY STAR in the "factory default" settings through which power savings will be achieved. Changing the factory default picture settings or enabling other features will increase power consumption, which could exceed the limits necessary to qualify for ENERGY STAR rating.

For more information on ENERGY STAR, refer to https://www.energystar.gov/.





Low Blue Light (Software Solution)

www.tuv.com



Regulatory Notices

CE Conformity

This device complies with the requirements set out in the Council Directive on the Approximation of the Laws of the Member States relating to Electromagnetic Compatibility (2014/30/EU), Low-voltage Directive (2014/35/EU), ErP Directive (2009/125/EC) and RoHS directive

(2011/65/EU). This product has been tested and found to comply with the harmonized standards for Information Technology Equipment published under Directives of Official Journal of the European Union.

FCC-B Radio Frequency Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy



F

and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the measures listed below:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/television technician for help.

Notice 1

The changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Notice 2

Shielded interface cables and AC power cord, if any, must be used in order to comply with the emission limits.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1. This device may not cause harmful interference, and
- **2.** This device must accept any interference received, including interference that may cause undesired operation.

MSI Computer Corp.

901 Canada Court, City of Industry, CA 91748, USA (626) 913-0828 www.msi.com

WEEE Statement

Under the European Union ("EU") Directive on Waste Electrical and Electronic Equipment, Directive 2012/19/EU, products of "electrical and electronic equipment" cannot be discarded as municipal waste anymore and manufacturers of covered electronic equipment will be obligated to take back such products at the end of their useful life.



Chemical Substances Information

In compliance with chemical substances regulations, such as the EU REACH Regulation (Regulation EC No. 1907/2006 of the European Parliament and the Council), MSI provides the information of chemical substances in products at: https://csr.msi.com/global/index

RoHS Statement

Japan JIS C 0950 Material Declaration

A Japanese regulatory requirement, defined by specification JIS C 0950, mandates that manufacturers provide material declarations for certain categories of electronic products offered for sale after July 1, 2006.

https://csr.msi.com/global/Japan-JIS-C-0950-Material-Declarations

India RoHS

This product complies with the "India E-waste (Management and Handling) Rule 2016" and prohibits use of lead, mercury, hexavalent chromium, polybrominated biphenyls or polybrominated diphenyl ethers in concentrations exceeding 0.1 weight % and 0.01 weight % for cadmium, except for the exemptions set in Schedule 2 of the Rule.

Turkey EEE Regulation

Conforms to the EEE Regulations of the Republic Of Turkey

Ukraine Restriction of Hazardous Substances

The equipment complies with requirements of the Technical Regulation, approved by the Resolution of Cabinet of Ministry of Ukraine as of 10 March 2017, \mathbb{N}° 139, in terms of restrictions for the use of certain dangerous substances in electrical and electronic equipment.

Vietnam RoHS

As from December 1, 2012, all products manufactured by MSI comply with Circular 30/2011/TT-BCT temporarily regulating the permitted limits for a number of hazardous substances in electronic and electric products.

Green Product Features

- Reduced energy consumption during use and stand-by
- Limited use of substances harmful to the environment and health
- Easily dismantled and recycled
- Reduced use of natural resources by encouraging recycling
- Extended product lifetime through easy upgrades
- Reduced solid waste production through take-back policy

Environmental Policy

- The product has been designed to enable proper reuse of parts and recycling and should not be thrown away at its end of life.
- Users should contact the local authorized point of collection for recycling and disposing of their end-of-life products.
- Visit the MSI website and locate a nearby distributor for further recycling information.
- Users may also reach us at gpcontdev@msi.com for information regarding proper disposal, take-back, recycling, and disassembly of MSI products.

Warning!

Overuse of screens is likely to affect eyesight.

Recommendations:

- 1. Take a 10-minute break for every 30 minutes of screen time.
- Children under 2 years of age should have no screen time. For children aged 2 years and over, screen time should be limited to less than one hour per day.

Copyright and Trademarks Notice



Copyright © Micro-Star Int'l Co., Ltd. All rights reserved. The MSI logo used is a registered trademark of Micro-Star Int'l Co., Ltd. All other marks and names mentioned may be trademarks of their respective owners. No warranty as to accuracy or completeness is expressed or implied. MSI reserves the right to make changes to this document without prior notice.

The terms HDMITM, HDMITM High-Definition Multimedia Interface, HDMITM Trade dress and the HDMITM Logos are trademarks or registered trademarks of HDMITM Licensing Administrator, Inc.

Technical Support

If a problem arises with your product and no solution can be obtained from the user's manual, please contact your place of purchase or local distributor. Alternatively, please visit https://www.msi.com/support/ for further guidance.

